



VEXMATE

DU-35ACI1 & DU-35ACI5

1 Amp and 5 Amp AC Meters 3 1/2 Digit with 0.56" or 0.8" LEDs in a 1/8 DIN Case

Measuring AC current directly from industry standard 1 Amp and 5 Amp CTs, this meter is the OEM's choice for modern switchboard installation and upgrades.

General Features


The DU-35ACI1 and DU-35ACI5 are low cost, AC current measuring meters with a very low burden of 0.1VA and 0.5VA respectively. Their internal shunt provides for direct connection to 1A or 5A CT's (current transformers). No matter what the CT ratio, the 15 turn, infinitely adjustable Span potentiometer enables the user to easily scale the output to display almost any current value required.

The DU-35ACI1 and DU-35ACI5 meters can withstand momentary over loads of up to 200 Amps (40 times input signal) for one second without developing an open circuit. Our unique differential AC measurement circuit provides high impedance to ground on both sides of the shunt.


Typical Application Connections

AC Current measurement in Single-phase Systems.

Easily User Scaled to Display Currents up to 1999 Amps.

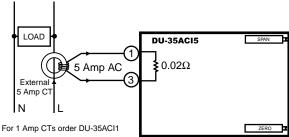

AC Current measurement in Multi-phase Systems.

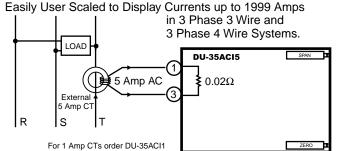

Compatibility

The DU-Series have a matching DIN case style that is complementary to the Lynx, Leopard and Tiger family of meters. DU-Meters are the OEM's choice for economical switchboard and process indication. For economy, each model is dedicated to a specific application and designed for guick and easy installation.



Specifications

Input Configuration:Shunt input with differential auto zeroing
AC to DC converter scaled in RMS.
A Zero pot is provided to offset the
displayed reading ±500 counts.
Input Impedance:0.02 Ω for 5A CT. Burden is only 0.5VA
0.10 for 1A CT. Burden is only 0.1VA

Full Scale Ranges:1 Amp and 5 Amp Inputs can be scaled to any desired display value from 0 to 1999.

A/D Converter:12 Bit Dual Slope

Accuracy:±(0.05% of reading plus 2 counts)

Temperature Coefficient: 100ppm/°C (Typical)

Warm Up Time:.....One minute to specified accuracy

Conversion Rate:3 readings per second

Decimal Selection:.....Header under face plate, X•X•X•X•

Over-range Indication: ...The MSD digit 1 is displayed with all other digits blank

Power Supply (std):120/240V AC, 50/60Hz. approx 2.5W.

(Optn) VO-DC/ISOIsolated Switcher. 9 to 36V DC/12 to 24V AC

(Optn) VO-24VIsolated Transformer 24V AC ±10%

(Optn) VO-5V DCNon-isolated 5V DC ±10%

Operating Temperature: ...-10 to 50 °C Storage Temperature:-20 to 70 °C

Relative Humidity:95% (non-condensing)

11.8mm (0.47") for Right-angled Connector or 20mm (0.79") for Straight-through

Connectors.


Weight:.....11 oz., 14 oz when packed

DU-Series, the OEMs choice for switchboard and process indication

DU-35ACI1/5	AC amps, Scaled RMS. (1 or 5 Amp Internal shunt), 3.5 digit	DU-45
	5AC amps, True RMS. (1 or 5 Amp Internal shunt), 3.5 digit	DU-45MV
DU-40ACI1-5	AC amps, Scaled RMS. (1 or 5 Amp Internal shunt), 4 digit	DU-35CL
DU-35AC	AC volts, Scaled RMS. 199.9/700V AC Header Selectable Ranges, 3.5 digit	DU-35CLE
DU-35ACRMS	AC volts, True RMS 199.9/700V AC Header Selectable Ranges, 3.5 digit	DU-45CL
DU-40AC	AC volts, Scaled RMS. 700.0V AC full scale, 4 digit	DU-35P
DU-35HZ	15.0Hz to 199.9Hz or 15/500Hz. Up to 700V AC input, 3.5 digit	
DU-35	DC volts ±2V/±20V/±200V Header Selectable Ranges, 3.5 digit	DU-35J/K
DU-35MV	DC mV ±50mV , ±100mV, ±200mV Header Selectable Ranges, 3.5 digit	DU-35RTD


DU-45	DC volts ±2V/±20V/±200V Header Selectable Ranges, 4.5 digit
DU-45MV	DC mV ±50mV/±100mV/±200mV Header Selectable Ranges, 4.5 digit
DU-35CL	Process 4 to 20mA (100.0), easily user scalable, 3.5 digit
DU-35CLE	Process 4 to 20mA (100.0) with 24V DC excitation, scalable, 3.5 digit
DU-45CL	Process 4 to 20mA (100.00), easily user scalable, 4.5 digit
DU-35P	Pressure, strain gage and load cell, 4 and 6 wire, 5V DC excitation,
DU-35J/K	Order J or K Thermocouple and °C or °F, 3.5 digit
DU-35RTD	100O platinum RTD 3 or 4 wire order °C or °F and 0 1° or 1° 3.5 digit

Functional Diagram

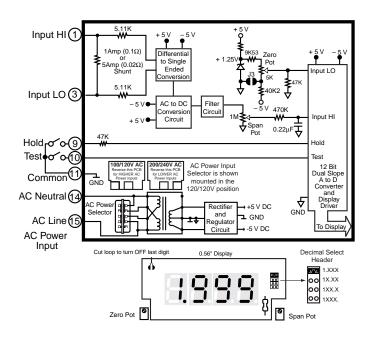

Connector Pinouts

This meter is supplied with plug-in type screw terminal connectors. The power supply pins (14 & 15) have a unique plug and socket outline to prevent cross connection. (see DU Connectors)

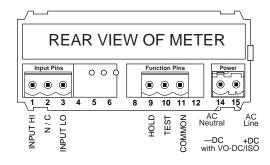



WARNING: AC and DC input signals and power supply voltages can be hazardous. Do Not connect live wires to screw terminal plugs, and do not insert, remove or handle screw terminal plugs with live wires connected.

Pin 1 - Signal Input High: Signal high input for the meter. Two factory installed ranges for direct connection to a 1 Amp or 5 Amp Current Transformer (CT).

Pin 3 - Signal Input Low: Signal low input for the meter.


Pin 9 - Hold Reading: If this Pin is left unconnected, the meter will operate in a free-running mode. When this pin is connected to the Hold/Test Common Pin 11, the meter will latch up. A/D conversions will continue, but the display will not be updated until Pin 9 is disconnected from the Hold/Test Common pin 11.

Pin 10 - Display Test: All numeric display segments will light up when this pin is connected to the Hold/Test Common Pin 11.

Pin 11 - Hold/Test Common: The Hold and Display Test Pins have to be connected to this pin to activate their respective functions.

Pins 14 & 15 - AC Power Input: These pins are the Power Input pins for the meter. All DU-Series meters sold in North America are pre-configured at the factory for 100/120V AC operation. To re-configure for 200/240V AC operation, simply pull out the AC Power Voltage Selector located directly behind the transformer, turn it around and re-insert it into the socket so that "200/240V AC" is visible. Various other AC/DC power options are available. See Ordering Information on page one for details.

Component Layout

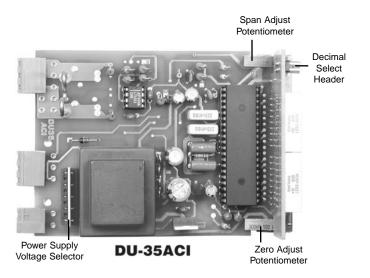

Signal Conditioning Components



SPAN Potentiometer (Pot)

The 15 turn SPAN pot is always on the right side (as viewed from the front of the meter). Typical adjustment is 100% of the input signal range.



Increase Reading

 
ZERO Potentiometer (Pot)

The ZERO pot is always to the left of the SPAN pot (as viewed from the front of the meter). Typically it enables the display reading to be offset ±500 counts.

Calibration Procedure

- Apply an input of 0 amps AC to the meter by shorting the inputs.
- 2. Adjust the Zero Offset Pot until the meter reads 000.
- Connect the secondary of the current transformer (CT) to the meter inputs, and apply a known current. For high current CTs, a known AC current, proportionate to the CT output, should be used for calibration.
- 4. Adjust the Span Pot until the meter displays the required reading for the current being applied.
- 5. The DU-35ACI is now calibrated and ready for use. (Whenever a new range is selected, re-calibration is required to meet the specified accuracy).

Decimal Point Selection



Decimal selection is made on the front of the display board by moving the jumper to the indicated position on the header for the decimal required.

Rear Selection of Decimal Points

An optional output board is available that provides access to all decimal points via a rear PCB edge connector.

Opening Back Panel



To open back panel, insert a flat screwdriver or similar instrument in both slots on the top of the case and pry open. The DU-Series meters slide out from the rear of the case as a complete assembly.

Selecting Power Supply Voltage



This unique voltage selector PCB displays the operating voltage selected. To change the voltage, disconnect power to the meter. Remove the selector, reverse the selector and fully re-insert it in the socket. This selector is not required for optional power supplies.

DU-Series Connector Options

Plug-in Screw Terminal Connectors are Provided

Right-angled Screw Terminal Plug Part Number

Input Power



Part Numbers 93-PLUG2P-DR.....2 pins 93-PLUG3P-DR....3 pins 93-PLUG4P-DR.....4 pins 93-PLUG5P-DR.....5 pins 93-PLUG6P-DR.....6 pins


Spade Lug pinouts and insulated quick disconnects may still be ordered as an option. P/N.:CN-SPADE.



Metal Surround Case Option

The meter's plastic case is made from fire retardant polycarbonate. A metal surround case can be ordered to enhance the meter's fire retardant capabilities and also provide shielding against electromagnetic interference (EMI). The metal case slides over the polycarbonate case and is held firmly in place by spring-type non-return clips. The Metal Surround Case must be factory installed on the polycarbonate case and once installed, it cannot be removed in the field.

With the metal case in place, the meter's standard ratchet-type mounting clips can not be used. Instead a pair of screw-type DIN standard mounting clips are provided, which clip into holes on the side of the metal case and tighten against the rear of the panel. A ground tab on the metal case enables the metal case to be easily connected to the panel ground.

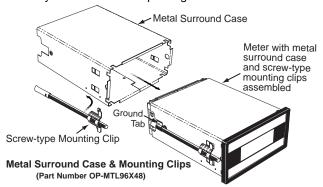

Face Plate Descriptors

kVAR m3/hr mV min PF °F °C CosØ DC: x10kN µA PSIG mS kg/cm2 psi kW W kWH nH % K kPa Α mbar mA MW ka RPS MWH mWs μm kW/s I I/sec ml ORP mm/s 1/min mm kg/sec lbs kg/h FT bars min m/min Mvars μV

To customize the face plate, each DU-meter is supplied with a white printed clear adhesive label containing various popular descriptors. Choose the descriptor desired, peel off the adhesive backing and align the descriptor in the center right of the faceplate.

Custom Face Plates



Texmate Produces Thousands of Custom OEM Face Plates

Have Texmate Design and Build a Custom Face Plate to Suit your Next project!

· Custom face plates have a nonrecurring artwork charge. A serial number is then assigned to each artwork, to facilitate re-ordering.

- Small Run or One-Off custom face plates incur an installation charge, and are generally printed on a special plastic film, which is then laminated to custom faceplate blanks as required.
- Large Run (250 pieces min): custom face plates are production silk screened, issued a part number, and held in stock for free installation as required by customer orders.
- · OEMs may also order Custom Meter Labels, Box Labels Custom Data Sheets and Instruction Manuals.

Optional Display Styles






0.8" LED Options available in Lynx Family

To match all display styles, DU-Meters have an optional display and faceplate with the digits positioned above center. (see Display Options)


For 0.8" LEDs in 1/8 DIN cases order Lynx family DX-35 and DX-40 w/ LR or LG displays and input modules that match DU-Series inputs.

Clear Lockable Water-proof Cover

The clear lockable cover is designed to be dust and water proof to NEMA-4X, IP65 standards. The assembly consists of a base and cover with a cam hinge and key-lock fastening mechanism. An O-ring, or neoprene gasket forms a seal between the base and the panel. The cam hinge prevents the cover from closing when opened until pushed closed. The cover has a tapered recess that, when closed, forms a seal with a tapered spigot on the base. A key-lock employs a cam locking device to force the spigot into the recess, ensuring seal integrity. A safety catch keeps the cover closed even when the key is removed, and the keyhole can be used to attach a safety seal clip, preventing unauthorized opening.

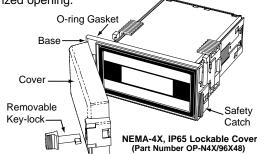

DU Case Dimensions and Panel Cutouts

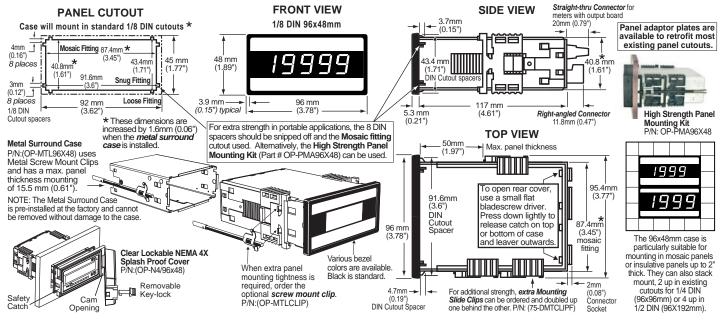

Ordering Information

Standard Options for this Model Number

Part Number	Description	List
I all Ivallibei	Description	LIST

▶ BASIC MODEL NUMBER Includes plug in type screw terminals, standard display and standard power supply unless optional versions

DU-35ACI1......DPM, AC amps, Scaled RMS. (1 Amp Internal shunt) . . DU-35ACI5......DPM, AC amps, Scaled RMS. (5 Amp Internal shunt) . . .

▶ DISPLAY

STANDARDRed LEDs, 0.56 inch high
DU-BRIGHT Super bright Red LEDs, 0.56 inch high
DU-GREENGreen LEDs, 0.56 inch high
DU-GREEN 4.5DDummy Zero Display Option w/ Green LEDs
DU-RED4.5D Dummy Zero Display Option w/ Green LEDs
DU-35HI/BRT Above center position, .56 inch, Bright Red LED
DU-35HI/GRN Above center position, .56 inch, Green LED
DU-35HI/RED Above center position, .56 inch, Red LED

▶ POWER SUPPLY

STANDARD	.100/120 or 200/240VAC User selectable
V0-DC/ISO	.Isolated auto-sensing AC/DC 9 to 36 VDC/12 to 24 VAC
V0-24V	.Isolated transformer 12 VAC or 24 VAC user selectable

▶ SPECIAL OPTIONS (Specify Inputs or Outputs & Req. Reading)

HD-CHANGE	Range change from the standard input as shown in BOLD type .	
CB-FS35	.Non-Std Range and Scale Changes for all DU-35 series .	

Special Options and Accessories

Part Number Description

► ACCESSORIES (Specify Serial # for Custom Artwork Installation)

75-DBBZ9648F Black Bezel for 96x48mm Case
75-DMTCLIPF Side Slide Brackets (2 pc) - extra set, extra strength
76-DU35G Replacement DU Series grey lens for Green LEDs
76-DU35R Replacement DU Series red lens for Red LEDs
76-DUPP/N Anti-glare protective front lens plate for DU Series
93-PLUG2P-DP Extra Screw Terminal Conn., 2 Pin Power Plug
93-PLUG3P-DR Extra Screw Terminal Conn., 3 Pin Plug
CN-SPADE Spade Lug pinouts and Insulated quick disconnects
DN • CAS96X48AComplete 96x48mm Case with bezel
OP-DUEXTDP Option for External Decimal Point
OP-MTLCLIP Screw Mounting Clips (2 pc) to screw tighten slide brackets
OP-MTL96X48 Metal Surround Case includes metal mounting clips
OP-N4X/96X48 Clear Lockable Water-proof cover, Nema 4X, IP65
QD-KIT-1
ART-FS-S/D NRC for Artwork & set-up Custom Faceplate and or Descriptor
ART-FS-S/D/C NRC for Artwork & set-up Custom Faceplate and Custom Logo
ART-FS-001
ART-FS-002
ART-FS-003
ART-FL-001
ART-FL-002
ART-FL-003 Custom Faceplate, 250 piece Min. (\$1.80 each) - 3 color
Prices subject to change without notice.

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since
we have no control over the use of our products once they are shipped, NO WARRANTY
WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made
beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate.
Users shall determine the suitability of the product for the intended application before using,
and the users assume all risk and liability whatsoever in connection therewith, regardless of any
of our suggestions or statements as to application or construction. In one event shall Texmate's of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.

EXMATE INC

450 State Place, Escondido, CA 92029

Tel: 1-760-598-9899 • USA 1-800-839-6283 • That's 1-800-TEXMATE

Fax: 1-760-598-9828 • Email: orders@texmate.com • Web: www.texmate.com

Texmate has facilities in Japan, New Zealand, Taiwan, and Thailand. We also have authorized distributors throughout the USA and in 28 other countries

For product details visit www.texmate.com Local Distributor Address

Copyright © 2003 Texmate Inc. All Rights Reserved