





DVM-5/DIM Dimmable Mini Volt Meter 3 1/2 Digit 0.276" LED 5V DC Powered @80mA


Cost-effective, adjustable brightness, LED digital Mini-Meter.

General Features

The Texmate DVM-5/DIM Mini-Meter[™] is one of the world's smallest autozeroed, digital panel meters. It is offered in ranges of 200mV, 2V, 20V, and 200V full scale. The DVM-5 is designed for OEM's in the medical and scientific instrument field where small size and exceptional performance are important. This meter, although small, is very advanced and uses all surface mount technology. The brightness of the LEDs is adjustable.

Typical Application Connections

Connections to the DVM-5 for use with a floating 5 volt power supply

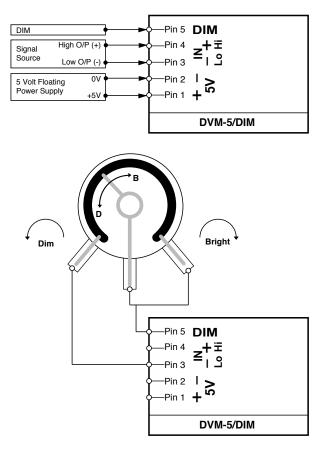

Compatibility

The DVM-Series have a matching Mini Case style that is compatible with all DVM-Series meters. The DVM-Series are designed for use when small spaces are available.



| Specifications | | |
|-------------------------------------|--|--|
| Zero: | Autozeroe | |
| Brightness: | . The brightness adjustment is on the upper side and is marked "H". Use only insulated screwdriver for adjustment. | |
| Span: | . Right side meter adjustment. | |
| Connection: | Meter is supplied with matching 9-pin male connector. Leads exit downward. | |
| Warm Up Time: | 2 minutes | |
| Display: | . 0.276" (7mm), Red or Green, 0-1999 counts | |
| Decimal Point: | . User selectable | |
| Power Supply: | . Regulated 5V ±5% DC @80mA | |
| Operating Temperature: -10 to 50 °C | | |
| Storage Temperature: | -20 to 70 °C | |
| Relative Humidity: | .95% (non-condensing) | |
| Case Dimensions: | . 1.38"Wx0.5"Hx1.77"D (35x12.7x45mm) Front Bezel 1.46"x0.59" (37x15mm) Panel cutout 1.38"x0.5" (35x12.7mm) | |

Weight: 0.64 oz (19gms)

DVM Series, mini size and mighty performance





Pin 1 = +5VDC Pin 2 = Ground Pin 3 = Signal LOW Pin 4 = Signal HIGH Pin 5 = DIM (Dimming pot between Pin5 &3)

Header Pin for Decimal Point Decimal Point (DP3) 1X.XX Decimal Point (DP2) 1.XXX Decimal Point (DP1) 1XX.X



Case Dimensions And Mounting Instructions

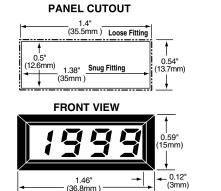

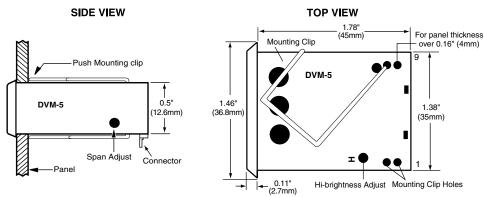

Ordering Information

| Standard Options for this Model Number | | | |
|--|--|------|--|
| Part Number | Description | List | |
| BASIC MODE | EL NUMBER | | |
| DVM-5 | 3.5 digit Red LED, 5VDC Power, 2/20/200 VDC | | |
| DVM-5/4-20 | 3.5 digit Red LED, 5VDC Power, 4-20mA input. | | |
| DVM-5/G | 3.5 digit Green LED, 5VDC Power, 2/20/200 VDC | | |
| | 3.5 digit Red LED, 5VDC Power, 200 mV DC input | | |

► SPECIAL OPTIONS (Specify Inputs or Outputs & Req. Reading)

| DVM-FSCL | Special Range & Scale change DVM-5/4-20 |
|-----------|---|
| VDVM-200V | 200 VDC Range change for DVM-5 |
| VDVM-20V | 20 VDC Range change for DVM-5 |

Many other options and accessories are available. See full price list for more details. Prices subject to change without notice.

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.



450 State Place, Escondido, CA 92029 Tel: 1-760-598-9899 • 1-800-TEXMATE Fax: 1-760-598-9828 • Email: orders@texmate.com

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.

DVM-5/DIM Technical Manual Copyright © 2018 Texmate Inc. All rights reserved. Published by: Texmate Inc. USA. Information in this Technical Manual is subject to change without notice due to correction or enhancement. The information described in this manual is proprietary to Texmate, Inc. and may not be copied, reproduced or transmitted, in whole or in part, in connection with the design, manufacture, or sale of apparatus, device or private label product without the express written consent of Texmate, Inc.