





Quick Guide to Select Leopard TL Series Transmitters' Input Range and Analog Output Type

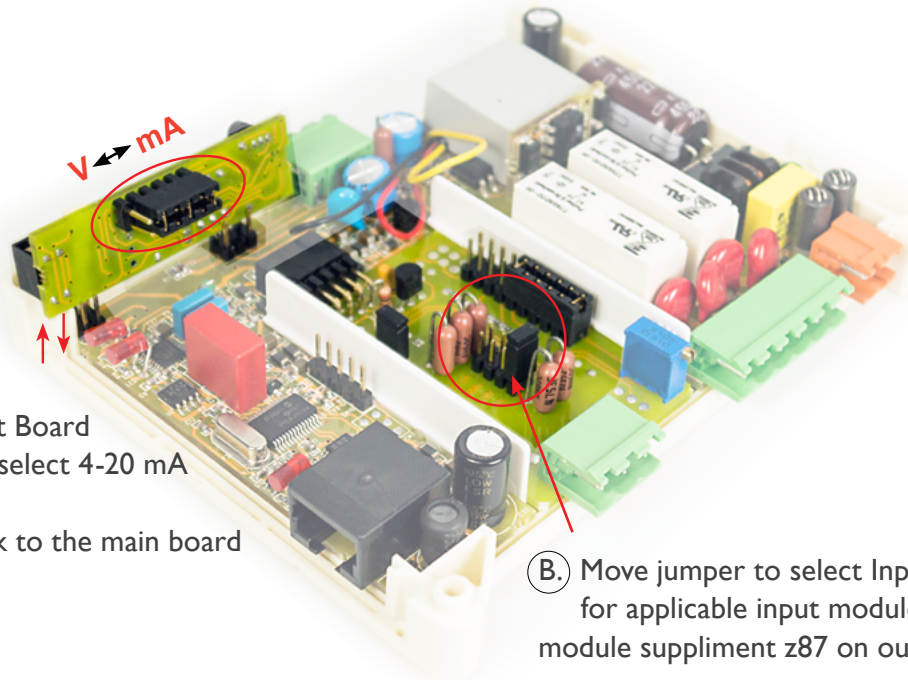

- (A.) Remove the four screws from the top panel (the label side), nuts are on the bottom side.

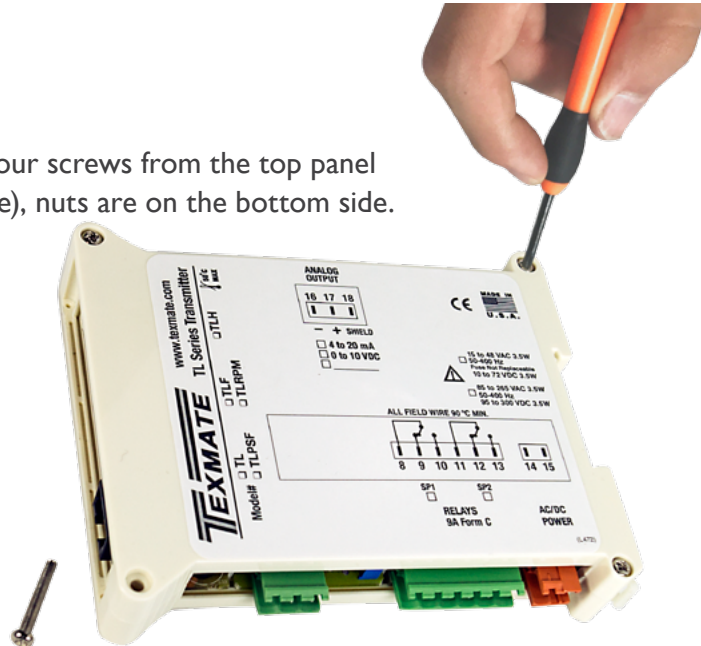

- (C.)
1. Lift up Analog Output Board
 2. Move the jumper to select 4-20 mA or 0 to 10 V
 3. Insert the board back to the main board

- (B.) Move jumper to select Input Range for applicable input modules (see Input module supplement z87 on our website.)