

# **VEXMATE**

# UM-35-TC-JC/JF UM-35-TC-KC/KF

## Thermocouple Temperature Meter 3 1/2 DIGIT with 0.56" LEDs in a NEMA type 1 Style Case


Cost effective utility temperature meter J or K thermocouple with 1° resolution pre-calibrated in °F or °C

#### General Features


The UM-35-TC-JC&JF and UM-35-TC-KC&KF are economical thermocouple input temperature meters with a resolution of 1°. The meters are ordered factory calibrated for either a °F or °C indication. Automatic cold junction compensation, Thermocouple Break Detection, Display Hold and Display Test functions are provided as standard features.

#### Typical Application Connections

#### J type Thermocouple

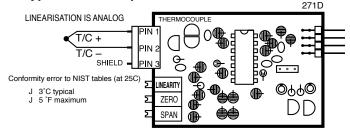

#### K type Thermocouple

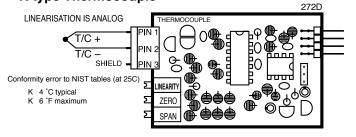

#### Specifications

Input Configuration:.....Differential.

Full Scale Ranges: .....UM-35-TC-JC 0 to 760°C

UM-35-TC-JF 0 to 1400°F UM-35-TC-KC 0 to 1260°C UM-35-TC-KF 0 to 1999°F

Lead Resistance Effects:  $20\mu V$  per  $10\Omega$  of lead resistance

**Cold Junction** 

Compensation: ......Automatic ±0.1°C/°C (Cal. @25°C)

Input Protection:.....25V AC/DC A/D Converter: .....12 Bit Dual Slope

Conformity Error(at 25°C): UM-35-TC-JC ±3°C typical

UM-35-TC-JF ±5°F maximum UM-35-TC-KC ±4°C typical UM-35-TC-KF ±6°F maximum

Temperature Coefficient: 100 ppm/°C (Typical)

Warm Up Time: .....2 minutes to specified accuracy 

Green or Super Bright Red are optional.

Range 0 to 1999 counts.

Overrange/Open

Thermocouple Indication:1 (MSD) displayed all other digits blank Power Supply (PS6 std):. Auto-sensing 85-305VAC or 120-430VDC,

50/60Hz App. 1W

(PS7 opt.) . Isolated (1.5kV) auto-sensing 9-36 VDC 1W

(PS11 opt.)..Isolated (1.5kV) auto-sensing 36-75 VDC 1W

(PS8 opt.) .5VDC/200mA Operating Temperature:..-10 to 50 °C

Storage Temperature: .....-20 to 70 °C.

Relative Humidity: ......95% (non-condensing)

Case Dimensions: ...........Bezel 3.78"Wx1.89"H (96mm x 48mm)

Depth behind bezel 3.36" (83.5mm) Plus

0.5 to .9" (12.7 to 22.8mm) depending on connector used.

Weight: .....NW. 12oz (0.34kg) 1

5.6oz (0.44kg). when packed.

#### UM-Series utility meters for switchboard and process indication

UM-35-ACA ....AC amps, Scaled or True RMS, (1 or 5 Amp internal shunt), 3.5 digit.

UM-35-ACV......AC volts, Scaled or True RMS. 199.9V AC/700V AC header selectable ranges, 3.5 digit.

UM-35-DCA ....DC mV ±20mV/±50mV/ ±100mV/±200mV header selectable ranges, 3.5 digit

UM-35-DCV .....DC Volts ±2V/±20V/±200V DC header selectable ranges, 3.5 digit.

UM-40-ACV .... AC volts, Scaled or True RMS. 199.9V AC/700V AC header selectable ranges, 4.0 digit.

UM-45-DCA ....DC mV ±20mV/±50mV/ ±100mV/±200mV header selectable ranges, 4.5 digit

UM-45-DCV .... DC Volts ±2V/±20V/±200V DC Header selectable ranges, 4.5 digit.

UM-35-CL ......Process 4 to 20mA (100.0), easily user scalable in engineering units from -1999 to +1999. 3.5 digit

UM-35-HZ ......15Hz to 199.9Hz or optional 40Hz to 400Hz up to 500V AC, 3.5 digit.

**UM-35-SG**......Pressure, strain gage and load cell, 4 wire, 5V/10V DC excitation, Header Selectable Sensitivity 2mV/V or 20mV/V, 3.5 digit

UM-35-JF..... .J thermocouple input, 1° resolution, order °C or °F, 3.5 digit

UM-35-KF ......K thermocouple input, 1° resolution, order °C or °F, 3.5 digit UM-35-RTD/F.. 100Ω platinum RTD, 3 or 4 wire, order °C or °F and 0.1° or 1°, 3.5 digit

UM-45-CL ......Process 4 to 20mA (100.0), easily user scalable in engineering units from

-19999 to +19999. 4.5 digit

#### Calibration Procedure

 Connect a J or K Thermocouple Simulator to the input of the appropriate model and calibrate according to the Calibration Table. If your simulator does not output the specific values shown in the Table, then set the simulator to the next nearest value and make the calibration adjustments to that value instead of the values in the Table.

#### **Calibration Table**

UM - model no.	<b>UM-35JF</b> IT06	<b>UM-35JC</b> IT08	<b>UM-35KF</b> IT07	<b>UM-35KC</b> IT09
Thermocouple Type Can not be changed	J	J	К	К
Adjust Zero Pot so display matches TC simulator with output set to:	0°F	0°C	0°F	0°C
Adjust Span Pot so display matches TC simulator with output set to:	1400°F	760°C	1990°F	1260°F

4. The J ot K meter is now calibrated and ready for use.

#### Signal Conditioning Components



#### SPAN Potentiometer (Pot)

 
The 15 turn SPAN pot is always on the right side (as viewed from the front of the meter). Typical adjustment is 100% of the input signal range.



#### **ZERO** Potentiometer (Pot)

The Optional ZERO pot when installed is always to the left of the SPAN pot (as viewed from the front of the meter). Typically it enables the displayed reading to be offset ±100 counts.


### **Optional Face Plate Descriptors**




To customize the face plate, clear adhesive label containing various popular descriptors may be ordered. Choose the descriptor desired, peel off the adhesive backing and align the descriptor in the center right of the faceplate.

P.N.: DU-CASEDES

#### Component Layout

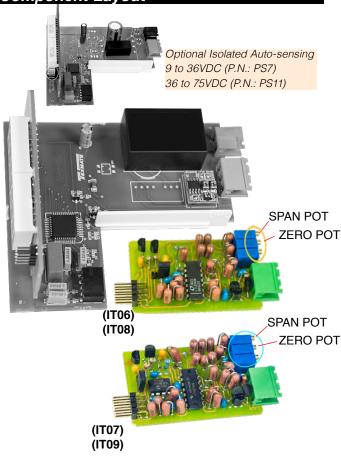


#### **Connector Pinouts**

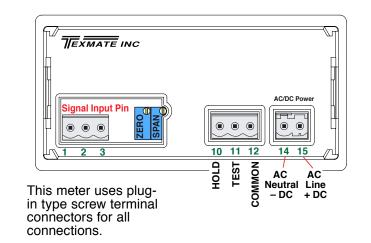


#### Connectors

  This meter uses plug-in type screw terminal connectors for all input and output connections. The power supply connections (pins 14 and 15) have a unique plug and socket outline to prevent cross connection. The main board uses standard right-angled connectors.











WARNING: AC and DC input signals and power supply voltages can be hazardous. Do Not connect live wires to screw terminal plugs, and do not insert, remove or handle screw terminal plugs with live wires connected.

#### **UM Case Dimensions and Panel Cutouts**

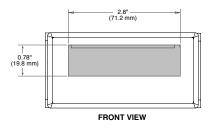

 

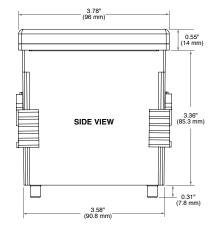

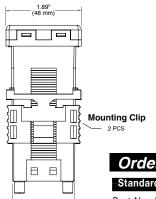

\_ 1.55" \_ (39.3 mm)

SIDE VIEW

# Clear Lockable Water-proof Cover

REAR VIEW

The clear lockable cover is designed to be dust and waterproof to NEMA-4X, IP65 standards. The assembly consists of a base and a cover with a cam hinge and key-lock fastening mechanism. An O-ring, or neoprene gasket forms a seal between the base and the panel. The cam hinge prevents the cover from closing when opened until pushed closed. The cover has a tapered recess that, when closed, forms a seal with a tapered spigot on the base. A key-lock employs a cam locking device to force the spigot into the recess, ensuring seal integrity. A safety catch keeps the cover closed even when the key is removed, and the keyhole can be used to attach a safety seal clip,





1934 Kellogg Ave., Carlsbad, CA 92008
Tel: 1-760-598-9899 • 1-800-TEXMATE • Email: orders@texmate.com

#### Warranty and User's Responsibility

#### WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

#### USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/ application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.

#### Ordering Information

#### Standard Options for this Model Number

Part Number

► BASIC MODEL NUMBER tandard display and standard power supply unless optional versions are ordered.

Description

<b>UM-35-TC-JF</b> Thermocouple, Type J in °F (IT06)	
UM-35-TC-JC Thermocouple, Type J in °C (IT08)	
<b>UM-35-TC-KF</b> Thermocouple, Type K in °F (IT07)	
UM-35-TC-KC Thermocouple, Type K in °C (IT09)	

#### **▶**DISPLAY

DR0.56	3" Red LEDs
UM-BRIGHTSupe	er bright Red LEDs, 0.56 inch high
UM-GREENGree	n LEDs, 0.56 inch high

#### **▶**POWER SUPPLY

PS6 (Std.)	.85-305VAC or 12	0-430VDC, 50/60Hz, Approx.1W
PS7	.Isolated (1.5kV)	9-36VDC Approx.1W
	, ,	36-75VDC Approx.1W

#### Special Options and Accessories

Part Number Description

#### ▶ SPECIAL OPTIONS (Specify Inputs & Req. Reading)

ZR......Input Range Change to another Standard Range ......ZRS-SMUM......Non-standard range change and/or Scale change ......

#### **▶**ACCESSORIES

OP-N4X/96X48.96x48mm clear lockable front cover NEMA 4X, splash proof
CASE.RPUMCase: Replacement with Accessories
ART-NRC-DEC NRC for Artwork & set-up Custom Faceplate and/or Descriptor
ART-FS1 Produce & Install Custom Faceplate per meter - 1 color no-min
ART-FS2 Produce & Install Custom Faceplate per meter - 2 color no-min
ART-FS3Produce & Install Custom Faceplate per meter - 3 color no-min
DU-CASEDESClear adhesive descriptors label for face plate

#### **Custom Face Plates**

**Texmate Produces Thousands of Custom OEM Face Plates.** Have Texmate Design and produce a Custom Face Plate for your next project!

• Custom face plates have a non-recurring artwork charge. A serial number is then assigned to each artwork to facilitate reordering.

UM-35-TC-JC/JF and UM-35-TC-KC/KF Technical Manual Copyright © 2022 Texmate Inc. All rights reserved. Published by: Texmate Inc. USA. Information in this Technical Manual is subject to change without notice due to correction or enhancement. The information described in this manual is proprietary to Texmate, Inc. and may not be copied, reproduced or transmitted, in whole or in part, in connection with the design, manufacture, or sale of apparatus, device or private label product without the express written consent of Texmate, Inc.