



## BX-B31

Lynx Bargraph Meter  
31 LED Segments  
in a 1/16 DIN Case

LYNX FAMILY



A versatile, modular bargraph with optional single or dual setpoints.

### General Features

- 31 segment AC/DC powered modular compact bargraph.
- 1/16 DIN (96 x 24mm ) case easily mounts in thin or thick panels (up to 2").
- Red (std), green (optional) or amber (optional) colors.
- Vertical or horizontal formats.
- External transmitters or signal conditioners can be eliminated by directly connecting the sensor to more than 33 **I-Series** Plug-in Input Signal Conditioning Modules that include:
 

– AC Current	– Process
– AC Voltage	– Prototype
– DC Current	– Resistance
– DC Voltage	– Strain-gage
– Load Cell	– Temperature
– Pressure	– 4 to 20 mA
- Pre-calibrated **I-Series** Input Signal Conditioning modules, that have span or zero potentiometers, can be interchanged between any **I-Series** compatible meter, without recalibration, because all of the analog scaling and reference circuitry is self-contained within the module.
- 24 V DC excitation is available to power external transmitters and 5 or 10 V DC excitation is available for strain-gages, load cells and resistance bridge type sensors.
- High voltage power supply (PS1) 85 - 265VAC / 95 - 370VDC  
Low voltage power supply (PS2) 15 - 48VAC / 10 - 72VDC
- Optional single or dual setpoints with easy adjustment from the front.
- Dual 5A Form "A" relays or one 5A Form "A" and one 10A Form "C" relays.
- Easy configuration of relays as high or low setpoints.
- Proportional brightness mode for increased effective optical resolution.

### Input Module Compatibility

☒ **LYNX FAMILY:** More than 33 different Plug-in **I-Series** Input Signal Conditioners are approved for Texmate's Lynx Family of meters. As shown on pages 4 to 5.



LYNX

See [www.texmate.com](http://www.texmate.com) for an up to date listing.


### Specifications

**Input Specs:** .....Depends on input signal conditioner  
**A/D Converter:** .....31 step flash converter  
**Accuracy:** ..... $\pm(0.05\%$  of reading + 3 counts)  
**Temp. Coeff.:** .....100 ppm/ $^{\circ}\text{C}$  (Typical)  
**Warm up time:** .....2 minutes  
**Display:**.....Thirty-one 0.2" x 0.06" (5.08 x 1.52mm)  
 LED segments. Red display (std), green (opt) or amber (opt)  
**Positive Overrange:**...All segments flash.  
**Negative Overrange:**...Zero segment flashes  
**Power Supply:** .....AC/DC Auto sensing wide range supply  
     **PS1 (std)** .....85-265 VAC / 95-370 VDC @ 2.5W  
     **PS2** .....15-48 VAC / 10-72 VDC @ 2.5W  
**Operating Temp.:** .....0 to 60 $^{\circ}\text{C}$   
**Storage Temp:** .....-20 $^{\circ}\text{C}$  to +70 $^{\circ}\text{C}$   
**Relative Humidity:** ....95% (non condensing)  
**Case Dimensions:** ....1/16 DIN, Bezel: 96x24mm(3.78"x0.95")  
     Depth behind bezel 122.2 mm (4.83")  
     Plus 12.7mm (0.5") for Right-angled connector.  
**Weight:** .....198 gms (7 oz)  
     255 gms (9 oz) when packed

### Index


Case Dimensions .....	7	Input Module Calibration Procedures .....	6-7
Component Layout .....	3	Input Module Compatibility .....	1
Connector Pinouts .....	2	Input Module Component Glossary .....	6
Connectors .....	2	Ordering Information .....	8
Functional Diagram .....	2	Pin Descriptions .....	2
General Features .....	1	Specifications .....	1
I-Series Input Signal Conditioning Modules .....	4-5		

## Functional Diagram

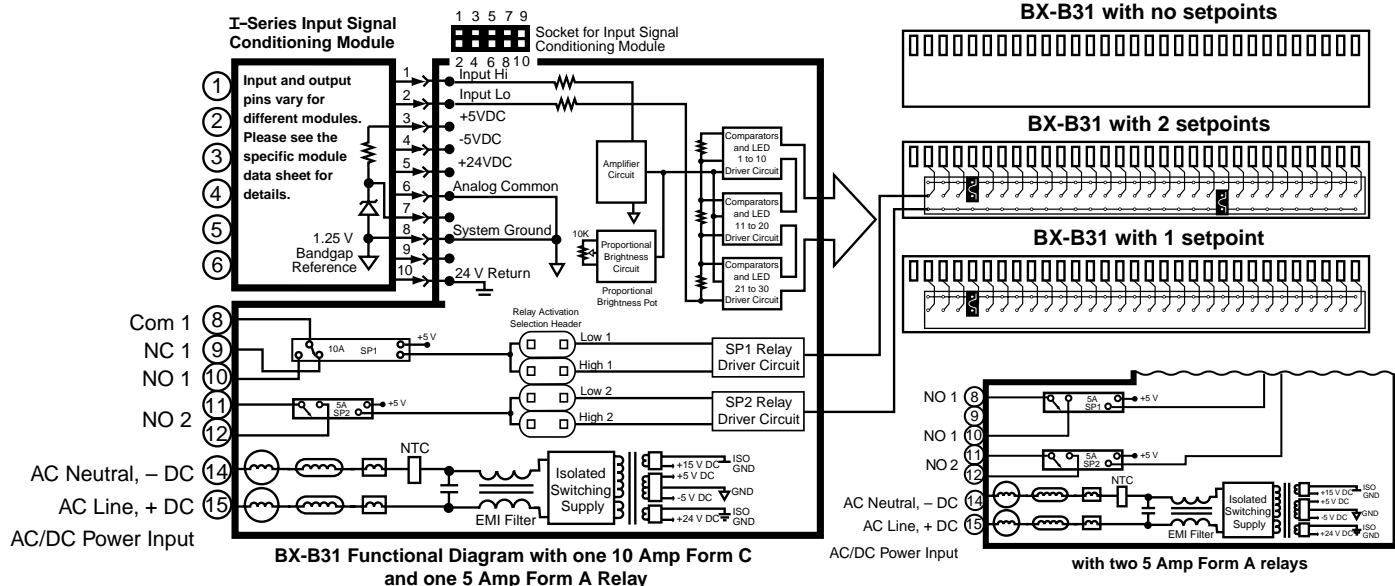

## Connector Pinouts

This meter comes standard with screw terminal plug connections.

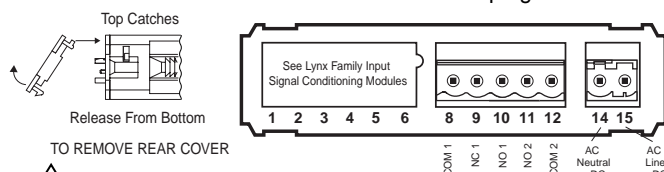

**WARNING:** AC and DC input signals and power supply voltages can be hazardous. Do Not connect live wires to screw terminal plugs, and do not insert, remove or handle screw terminal plugs with live wires connected.

## Pin Descriptions


**Pins 1 to 6** - Input Module: See the individual pin out of the input signal conditioning module selected. Usually Pin 1 is the Signal Input High pin and Pin 3 is the Signal Input Low pin. All calibration and scaling functions are performed on the individual input signal conditioner module. See pages 6 and 7.

**Pin 8** - Common of 10 Amp Form C or 5 Amp Form A SP1 Relay.

**Pin 9** - Normally Closed Contact of 10 Amp Form C SP1 Relay.

**Pin 10** - Normally Open Contact of 10 Amp Form C or 5 Amp Form A SP1 Relay.

## Changing the Setpoints From the Front of the Meter



### FRONT OF METER WITH BEZEL AND FILTER REMOVED

To adjust the setpoint on the BX-B31 with relays, remove the front bezel and faceplates. Use needlenose pliers to remove and reposition the setpoint jumper clips.

**For Setpoint #1:** Insert the jumper clip between Row #1 and Row #2, directly below the LED that you wish to activate.

**For Setpoint #2:** Insert the jumper clip between Row #2 and Row #3, directly below the LED that you wish to activate.

### High 2 ☐ ☐ Relay Activation Select Header

Low 2 ☐ ☐ Select High to energize the relay when the setpoint is

High 1 ☐ ☐ exceeded. Select Low to energize the relay when the


Low 1 ☐ ☐ display is below the setpoint.

### Proportional Brightness Band Potentiometer

The Proportional Brightness Potentiometer superimposes a proportional brightness band to the leading edge of the bargraph which creates

## Connectors

This meter uses plug-in type screw terminal connectors for all input and output connections. The power supply connections (pins 14 and 15) have a unique plug and socket outline to prevent cross connection. The main board uses standard right-angled connectors.

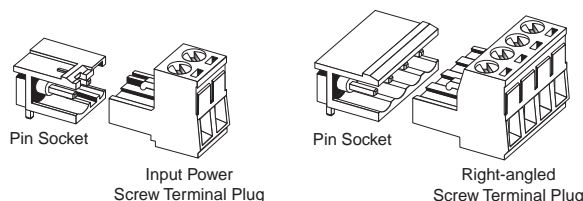

**Pin 11 & Pin 12** - Normally Open Contacts of 5 Amp Form A SP2 Relay.

**Pin 14 & Pin 15** - AC/DC Power Input: These pins are the power pins of the meter and they only accept a special polarized screw terminal plug that can not be inserted into any other input socket. The standard meter has a auto sensing AC/DC power supply that operates from 85-265 VAC/95-370 VDC (PS1 Std). An optional isolated low voltage power supply that operates from 15-48 VAC/10-72 VDC (PS2) is also available.

the optical appearance of a pointed arrow This feature produces a display of infinite resolution. The position of the signal in relation to any two adjacent segments and the scale on the faceplate can be accurately ascertained to within 1%. When the amplitude of the proportional band is adjusted counterclockwise to zero, the smooth proportional advance of the display will be replaced by a step by step movement as each bar is either turned full on or full off.

## Custom Face Plates



### Texmate Produces Thousands of Custom OEM Face Plates

Have Texmate Design and Build a Custom Face Plate to Suit your Next project!

• Custom face plates have a non-recurring artwork charge. A serial number is then assigned to each artwork, to facilitate re-ordering.


• Small Run or One-Off custom face plates incur an installation charge, and are generally printed on a special plastic film, which is then laminated to custom faceplate blanks as required.

• Large Run (250 pieces min): custom face plates are production silk screened, issued a part number, and held in stock for free installation as required by customer orders.


• OEMs may also order Custom Meter Labels, Box Labels Custom Data Sheets and Instruction Manuals.

## Component Layout

### BX-B31-XX-PS1 (High Voltage)

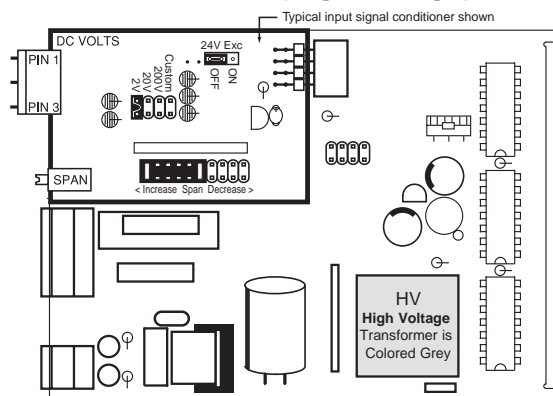


### BX-B31-XX-PS2 (Low Voltage)

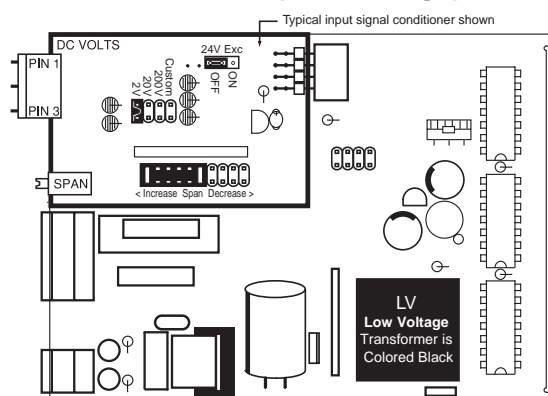


## Standard Face Plates and Scales

- Unless otherwise specified, a standard 0-100 scaled face plate with white letters on a black background is provided with each meter. In those cases where a temperature modules is ordered, a 0-300 °F (white on black) face plate will be provided as standard.
- Alternatively a face plate with black letters on a white background or a blank, white or black face plate, may be ordered as a no charge substitute. For temperature applications there are also several different optional face plates that may be ordered as a no charge substitute. (See below). Customized face plates with special scaling can also be ordered.

Optional no charge substitute faceplates for Temperature may be ordered scaled 0 to 300°F or 0 to 150°C, Vertical or Horizontal in Black or White background

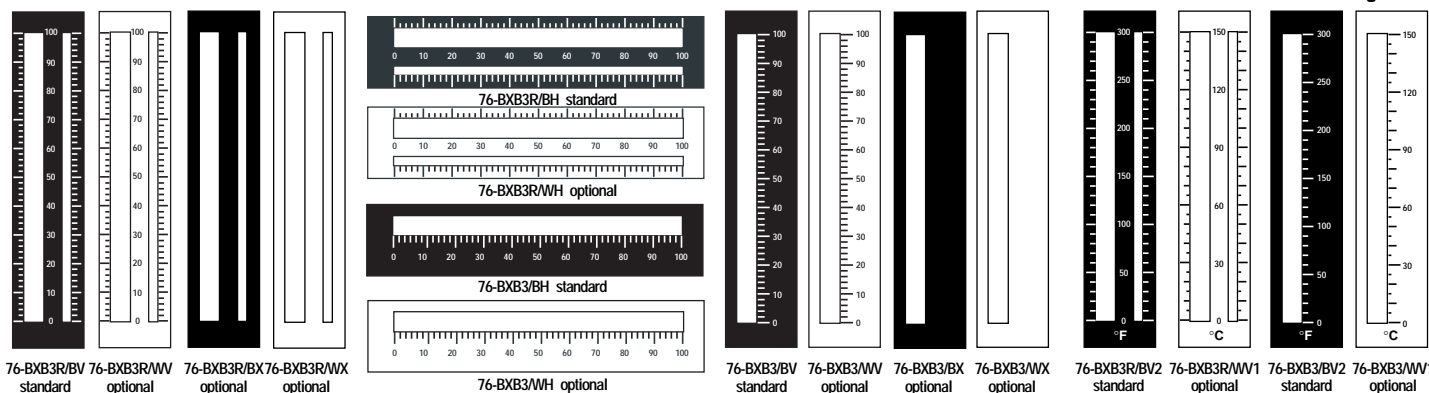

### Face plate scales and numbers are shown close to actual size

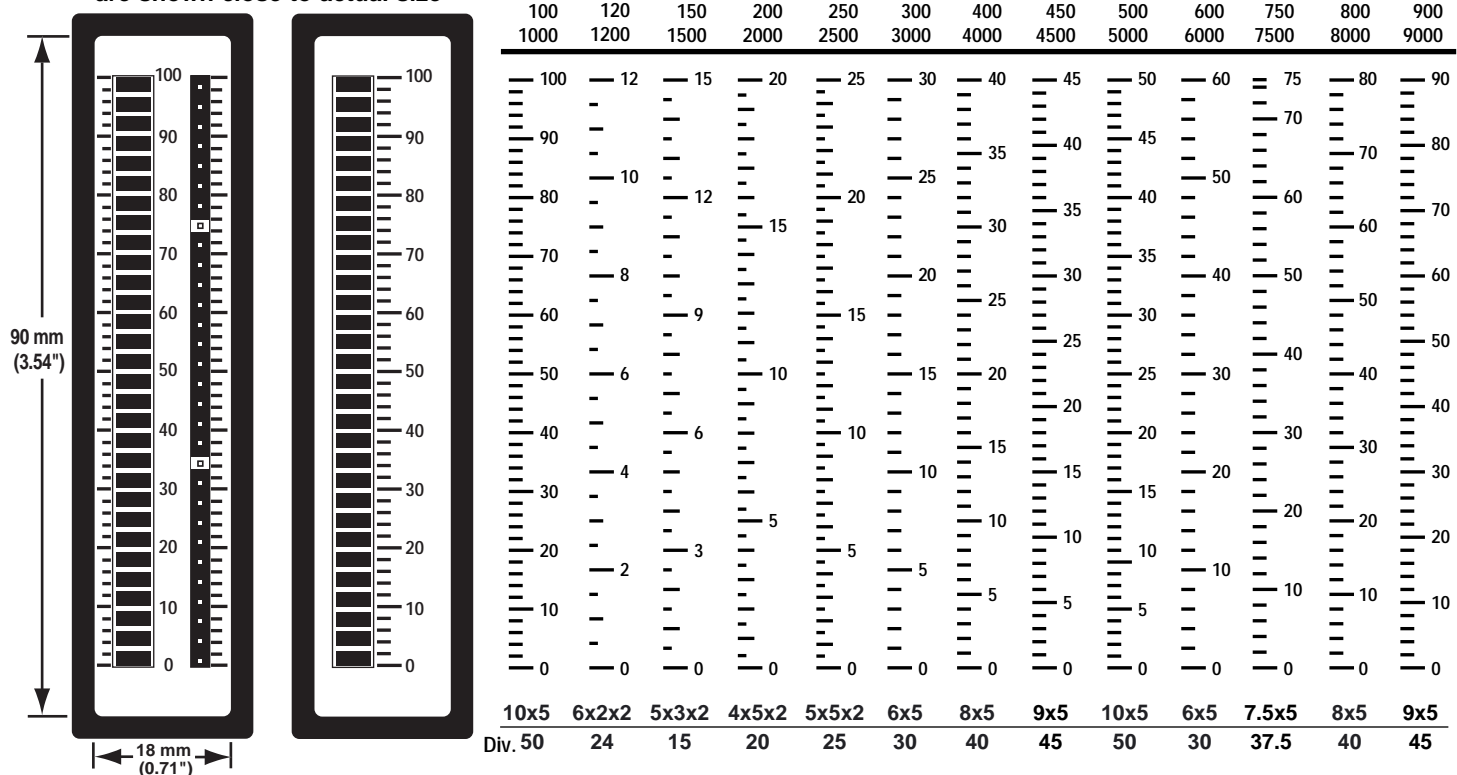

See next page for clear self-adhesive caption sheets, each meter is shipped with standard or optional faceplates.

## Standard Caption Sheets (white or black lettering for do-it-yourself customizing)

Clear self-adhesive caption sheets with white or black lettering are provided for each meter shipped with a standard or optional faceplate.

AHEAD	AC Vars	AC Amperes	AC Kilowatts	AIR PRESSURE	AC Milliampers
ALARM	AC Volts	AC Kilovars	AC Millivolts	Battery Voltage	AC Kilowatts
BOILER	AC Watts	AC Kilovolts	BPH x 1000	AC Megavars	Backup Voltage
Cycles	BEARING	AIR FLOW	CFH x 1000	AC Megawatts	Displacement
Depth	COOLANT	BBLs/HOUR	DC Amperes	AC Watts/Vars	DC Amps to Ground
HEATER	DC Volts	BFM AMPS	DC Kilovolts	CENTIMETERS	DC Microamperes
Height	DC Watts	BHP x 100	DC Kilowatts	DC Kilampers	DC Milliampers
Hertz	Degrees	BLOWER	DC Millivolts	FD FAN AMPS	GALLONS / MINUTE
Hours	ENGINE	DC Current	FPM x 100	IN. H <sub>2</sub> O PRESS	GENERATOR AMPS
INCHES	EXHAUST	Dew Point	FPM x 1000	LBS/MINUTE	LBS PER GALLON
Input	Humidity	Degrees C	GPM x 1000	LEVEL INCHES	LOAD LIMIT PERCENT
PORT	METERS	Degrees F	HORSEPOWER	LEVEL GALLONS	MANIFOLD PRESSURE
PUMP	Output	Degrees K	INCHES WC	LEVEL PERCENT	MILL LOAD AMPS
Preset	Percent	Degrees R	INCHES H <sub>2</sub> O	MILLIMETERS	MOTOR LOAD AMPS
Reset	Program	FPM x 10	KILOWATTS	Percent Current	Percent Horsepower
SHAFT	Pounds	Frequency	LBS x 1000	Percent Load	OXYGEN PERCENT
SPEED	Pulses	FUEL FLOW	MEGAWATTS	Percent OPEN	TEMPERATURE °C
Setup	RUDDER	GALLONS	Power Factor	RATE OF TURN	TEMPERATURE °F
TABLE	SPINDLE	IN. WATER	Phase Angle	STEAM TEMP °F	Motor Load Percent
Total	SO ROOT	LEVEL FT.	RPM x 100	TONS / HOUR	LEFT RIGHT
VALVE	Set Point	LBS x 100	STARBOARD	OIL PRESSURE	FRONT REAR
Valley	THRUST	POSITION	TANK LEVEL	WATER LEVEL	FORWARD REVERSE
WATTS	TURBINE	TONS x 10	VAC MM HG	1000 LBS/HOUR	TOP BOTTOM (L450)













A	AC	E <sub>b</sub>	Btu	bars	CFH	BHP	Low	inch/	CosØ	AMPS	BBL/HR
J	Ah	kJ	bar	cal <sub>15</sub>	CFM	IPS	High	Kcal	FEET	GALS	BBL/MIN
K	cd	kV	cal	cm <sup>-1</sup>	CFS	IPH	MGD	kg/hr	Hold	INHg	DEG/MIN
l	dB	kW	cm	cm <sup>2</sup>	COS	Kg/h	Mld	kVAR	Km <sup>3</sup> /h	m/min	FT H <sub>2</sub> O
m	DC	ml	FT <sup>3</sup>	cm <sup>3</sup>	CPH	KPH	MPH	kW/s	MWH	m/sec	In. H <sub>2</sub> O
V	FT	NL	lbs	dm <sup>3</sup>	CPM	KPM	MPS	RPM	mWs	Nm <sup>3</sup> /h	Kg/cm <sup>2</sup>
α	HP	Pa	IN <sup>2</sup>	H <sub>2</sub> O	CPS	KPS	N/m <sup>2</sup>	MPM	mbar	Ohms	KNOTS
β	Hz	PF	kg/	kPa	DCA	kWH	ORP	M <sup>3</sup> /hr	ml/m <sup>3</sup>	PSIA	kg/sec
φ	Kg	pH	mA	l/s	FPH	lb/ft	PPH	Upm	mm/s	PSID	Mvars
Ω	kA	sin	mS	l/h	FPM	lb/in	PPM	VAC	Peak	PSIG	mmH <sub>2</sub> O
Δ	L <sup>3</sup>	t/h	mV	l/m	FPS	LPH	PPS	Vars	PORT	PSIR	mmHg
μ	m <sup>3</sup>	yd <sup>3</sup>	Nm	lb/h	GAL	LPM	RPH	VDC	STRB	SCFM	VOLTS
∅	W	μA	oz	MW	GMP	LPS	RPS	w/m <sup>2</sup>	TARE	TORR	%LOAD
γ	°C	μS	RH	min	GPH	m <sup>3</sup> /h	phi	YPM	TONS	U/min	%OPEN
%	°F	μV	1/h	mm	GPM	m <sup>3</sup> /m	psi	YPS	X100	x10KN	→
∠	°K	μΩ	μm	Sm <sup>3</sup>	GPS	m <sup>3</sup> /S	X10	μPa	%KW	X1000	←

## I-Series Input Signal Conditioning Modules

Many additional input modules are available and others are constantly being developed. Check with your local distributor or [www.texmate.com](http://www.texmate.com) for updated information.


Precalibrated **I-Series** input modules, that have span or zero potentiometers, can be interchanged between any **I-Series** compatible meter, without recalibration, because all of the analog scaling and reference circuitry is self-contained within the module. Where appropriate, all the standard ranges shown are designed to be header selectable by the user, and Texmate's unique SPAN ADJUST Header facilitates scaling to almost any required engineering unit. See Input Module Component Glossary and Calibration on pages 6 and 8.

### Symbols Indicate Module Compatibility Within Meter Families


	TIGER Family		LEOPARD Family		LYNX Family
	LEOPARD Family		LYNX Family		TIGER Family
	LYNX Family		TIGER Family		LEOPARD Family
	ALL MODELS		SOME MODELS		MODEL SPECIFIC

Unless otherwise specified Texmate will ship all modules precalibrated with factory preselected ranges and/or scalings as shown in **BOLD** type. Other precalibrated standard ranges or custom ranges may be ordered. Factory installed custom scaling and other custom options are also available (see Ordering Information, Special Options on last page).


IA01: AC Volts Scaled RMS, 200/600V AC

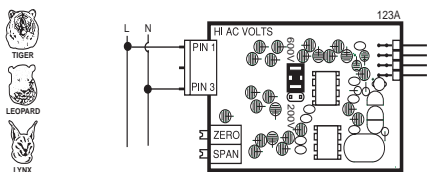


IA06: AC Volts True RMS, 300/600V AC

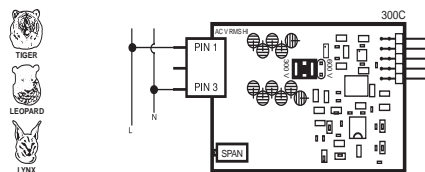


IA10 AC Millivolts, Scaled RMS, 100mV AC

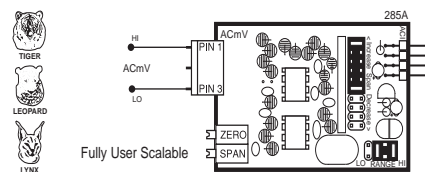


IA02: AC Volts Scaled RMS, 200mV/2V/20V AC

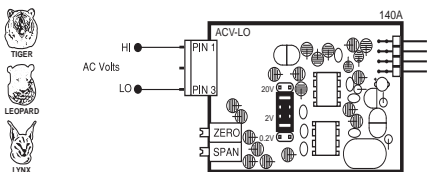


IA07: AC Volts True RMS, 200mV/2V/20V AC

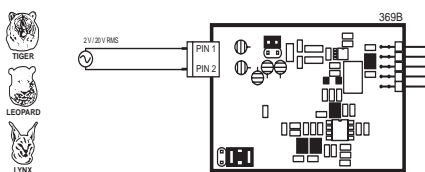


IA12: AC Millivolt RMS Sigma Delta

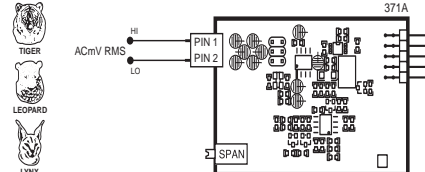


IA03: AC Milliamps Scaled RMS, 2/20/200mA AC

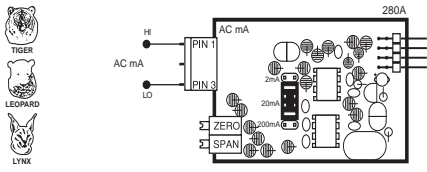


IA08: AC Milliamps True RMS, 2/20/200mA AC

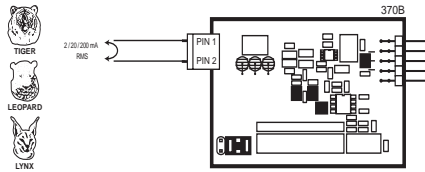

ID01: DC Volts, 2/20/200V/Custom w/24V DC Exc

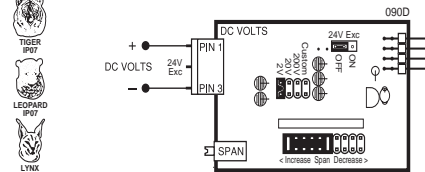


IA04: AC Amps Scaled RMS, 1 Amp AC

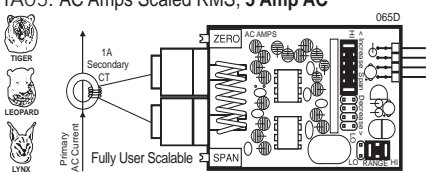


IA05: AC Amps Scaled RMS, 5 Amp AC

IA09: AC Amps True RMS, 1 Amp AC

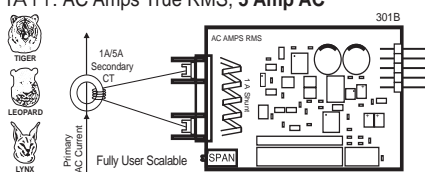

IA11: AC Amps True RMS, 5 Amp AC


ID02: DC Millivolts, 20/50/100/200mV DC w/24V DC Exc

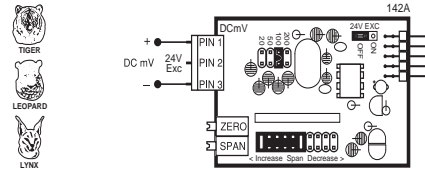




# I-Series Input Signal Conditioning Modules Continued


ID03: DC Milliamps, 2/20/200mA DC w/24V DC Exc

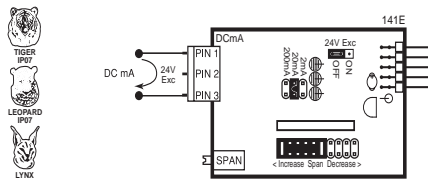


IP01: Process Loop, 4-20mA  
IP02: Process Loop, 4-20mA with 24VDC EXC

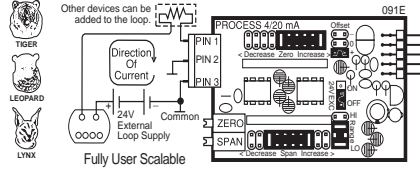


IS06: Pressure/Load Cell Ext Exc., 20/2mV/V, 4-wire

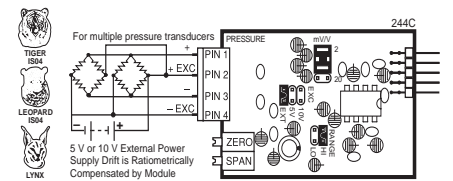


ID04: DC Amps, 5A DC  
ID09: DC Amps, 1A DC

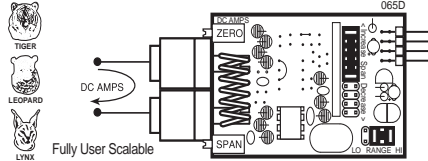


IP03: Process Input, 1-5V DC with Offset, 24V Exc

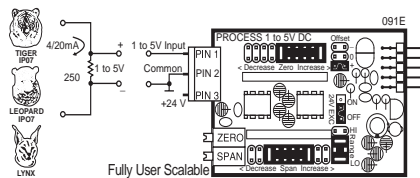


IT06: Thermocouple, J Type (0-1400 °F)  
IT08: Thermocouple, J Type (0-760 °C)

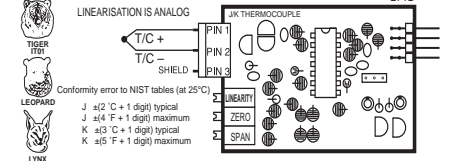


ID05: DC Volts 2/20/200/Custom V DC with Offset and 24V Exc.

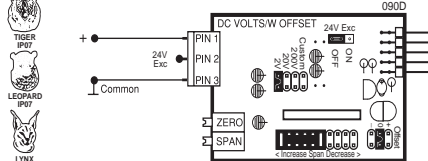


IPT1: Prototype Board for Custom Design

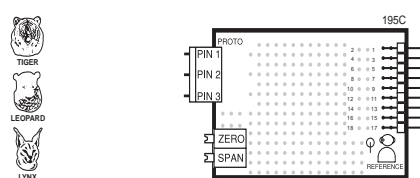


IT07: Thermocouple, K Type (0-1999 °F)  
IT09: Thermocouple, K Type (0-1260 °C)

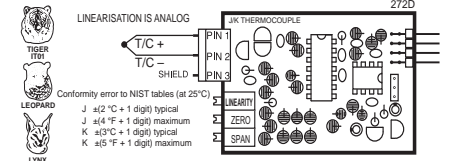


ID07: DC Milliamps, 2/20/200mA DC with Offset and 24V Exc

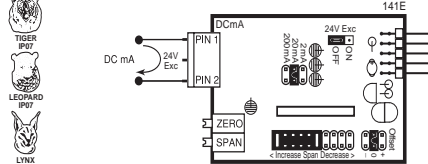


IR02: 3 wire Potentiometer 1K min (0-F.S.)

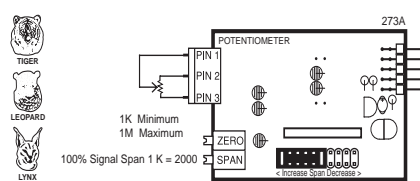


IT03: RTD, 100 Pt. 2/ 3/4-wire (-200 to 800°C)  
IT04: RTD, 100 Pt. 2/ 3/4-wire (-200 to 1470°F)  
IT05: RTD, 100Ω Pt. 2/3/4-wire (-199.9 to 199.9°F)  
IT14: RTD, 100Ω Pt. 2/3/4-wire (-199.9 to 199.9°C)

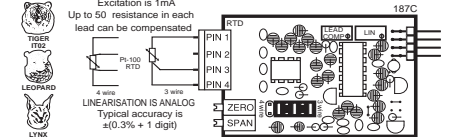


IF02: Line Frequency

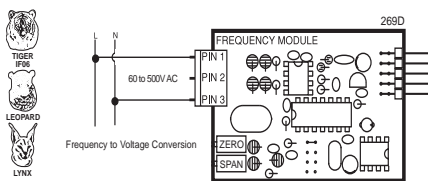


IR03: Linear Potentiometer 1KΩ min

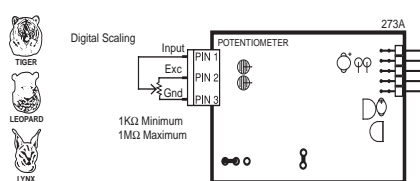

IGYZ: Universal Direct Pressure (Absolute or Differential/Gage)  
See below for ordering code options

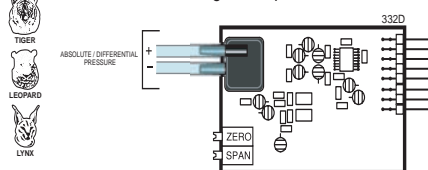

IS04: Pressure/Load Cell Ext Exc., 20/2mV/V, 4/6-wire

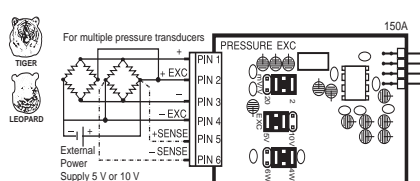


Ordering Code Options for Direct Pressure (IGYX, IGYV & IGYZ)


Sensor Range	CH1 Order Code	CH2 Order Code
1 psi Absolute	A	A
1 psi Differential	B	B
5 psi Absolute	C	C
5 psi Differential	D	D
15 psi Absolute	E	E
15 psi Differential	F	F
50 psi Absolute	G	G
50 psi Differential	H	H
100 psi Absolute	J	J
100 psi Differential	K	K

For Single Channel IGYX with two digital inputs, the last digit of order code is always X.

For Universal Direct Pressure IGYZ, the last digit of order code is always Z.


IS05: Pressure/Load Cell 20/2mV/V, 5/10V Exc 4-wire

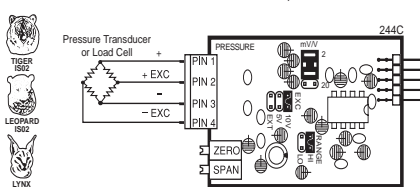



## Input and Output Pins

On most modules Pin 1 is the Signal High input and Pin 3 is the Signal Low input. Typically Pin 2 is used for Excitation Voltage output.




## 24V DC Output Header

On some modules this header enables a 24V DC 25mA (max) Excitation/Auxiliary output to be connected to Pin 2.




## INPUT RANGE Header

Range values are marked on the PCB. Typically two to four positions are provided, which are selected with either a single or multiple jumper clip. When provided, a custom range position is only functional when the option has been factory installed.

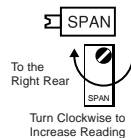

## SPAN Potentiometer (Pot)


If provided, the 15 turn SPAN pot is always on the right side (as viewed from the rear of the meter). Typical adjustment is 20% of the input signal range.

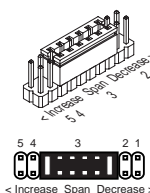

## SPAN ADJUST Header


This unique five-position header expands the adjustment range of the SPAN pot into five equal 20% steps, across 100% of the input Signal Span. Any input Signal Span can then be precisely scaled down to provide any required Digital Display span from 19999 counts to 0001 (one count).

SPAN Adjust Header position	1	2	3	4	5
SPAN Pot %	20%	20%	20%	20%	20%
Signal Span %	20%	40%	60%	80%	100%





## SPAN RANGE Header

When this header is provided it works in conjunction with the SPAN ADJUST Header by splitting its adjustment range into a Hi and a Lo range. This has the effect of dividing the adjustment range of the SPAN pot into ten equal 10% steps across 100% of the input Signal Span.




SPAN Adjust Header position	1	2	3	4	5
SPAN Pot %	10%	10%	10%	10%	10%
Signal Span %	10%	20%	30%	40%	50%

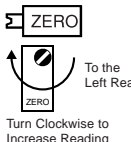


## ZERO Potentiometer (Pot)


If provided, the ZERO pot is always to the left of the SPAN pot (as viewed from the rear of the meter). Typically it enables the input signal to be offset  $\pm 5\%$  of full scale (-1000 to +1000 counts).




## ZERO OFFSET RANGE Header




When provided, this three position header increases the ZERO pot's capability to offset the input signal, to  $\pm 25\%$  of the digital display span. For example a Negative offset enables a 1 to 5V input to display 0 to full scale. The user can select negative offset, positive offset, or no offset (ZERO pot disabled for two step non-interactive span and offset calibration).

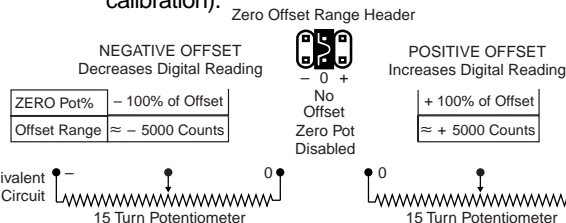

## ZERO ADJUST Header

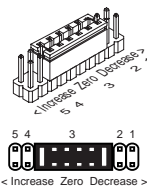

When this header is provided, it works in conjunction with the ZERO OFFSET RANGE Header, and expands the ZERO pot's offset capability into five equal negative steps or five equal positive steps. This enables virtually any degree of input signal offset required to display any desired engineering unit of measure.

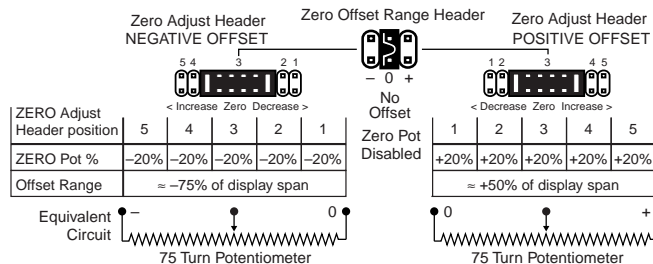

## Input Module Calibration



**WARNING:** AC and DC input signals and power supply voltages can be hazardous. Do Not insert, remove or handle modules with live wires connected to any terminal plugs.

**Note:** I-Series modules with analog calibration and scaling capability can be interchanged between any compatible meter without recalibration. However, meters that also have software scaling and calibration capabilities such as meters in the Leopard and Tiger families or Lynx

Q-Series (Quickset programming), must have their software scaling set to unity gain.

**Basic standard range calibration of direct reading modules that utilize either Auto Zero or a ZERO pot, an INPUT RANGE Header and or a SPAN pot.**

- 1 If the module has an INPUT RANGE Header, reposition the jumper clip to select the desired input signal range.
- 2 Apply a zero input or short the input pins. The display will auto zero, or if the module has a ZERO pot, it should be adjusted until the display reads zero.
- 3 Apply a known input signal that is at least 20% of the full scale input range and adjust the SPAN pot until the display reads the exact input value. The Lynx family of Q meters can accept negative signals also, and may be scaled for inputs from -50% to +100% of the range selected on the input signal conditioning module.

**Wide range scaling, in engineering units not requiring offsets, with modules that utilize auto-zero or a ZERO pot, a SPAN RANGE Header and or a SPAN ADJUST Header.**

## Input Module Calibration Procedures Continued

Texmate's unique SPAN ADJUST and SPAN RANGE Headers provide the circuit equivalent of an ultra-precision one megohm 75 or 150 turn potentiometer that can infinitely scale down any Input Signal SPAN to provide any Display Span from full scale to the smallest viewable unit.

If the module has an INPUT RANGE Header, and the required full scale Display Span (digital counts or bargraph segments) is to be larger than the directly measured value of the input Signal Span, then the next lower range on the INPUT RANGE Header should be selected. The resulting over range Signal Span is then scaled down, by selecting the position of the SPAN RANGE Header and or the SPAN ADJUST Header, which will reduce the input Signal Span to a percentage, that the required Display Span can be reached by calibration with the SPAN pot.

### Example A: Using a BX-B31 bargraph meter

Input signal 0 to 10 V to read zero to full scale.

Signal Span = 10 V, Display Span = 30 segments

- 1 Select the 2 V INPUT RANGE Header position. The standard direct scaling will provide a display of 30 segments with an input of only 2 V which is  $(2 \div 10) = 20\%$  of the examples 10 V Signal Span.
- 2 To scale down the Signal Span to 20% select the 20% Signal Span position on the SPAN ADJUST Header (position 1) or if the module has a SPAN RANGE Header, select (LO Range) and 20% Signal Span position on the SPAN ADJUST Header (position 2).
- 3 Apply a zero input or short the input pins. The display will auto zero, or if the module has a ZERO pot, it should be adjusted until the display reads zero.
- 4 Apply 10 V and adjust the SPAN pot until the display reads full scale.

### Large offset scaling and calibration of process signal inputs with modules that utilize ZERO ADJUST Headers and or ZERO OFFSET RANGE Headers.

Texmate's unique ZERO OFFSET RANGE Header enables the use of a simple two step scaling and calibration procedure for those process signals that require large offsets. This eliminates the back and forth interaction, between zero and span settings, that is often required to calibrate less finely engineered products.

The first step is to set the ZERO OFFSET RANGE Header to the center position (No Offset) and scale down the Input Signal Span to a percentage that will enable calibration with the SPAN pot to reach the required Display Span.

The second step is to set the ZERO ADJUST and or ZERO OFFSET RANGE Header to provide a positive or negative offset so that calibration with the ZERO pot will offset the Display Span to produce the required display reading.

### Example B: Using a BX-B31 Bargraph meter.

Input signal 1 to 5 V to read zero to full scale.

Signal Span = 4 V, Display Span = 30 segments

- 1 If the module has an INPUT RANGE Header the 2 V position should be selected. This will provide a display of 30 segments for an input of 2 V which is  $(2 \div 4) = 50\%$  of the examples 4 V signal span. To scale down the Signal Span to 50% select the next higher 60% Signal Span position on the SPAN ADJUST Header (position 3).
- 2 If the module is a Process Input 1-5 V DC type, select the (Hi Range) position on the SPAN RANGE Header and the 100% Signal Span position on the SPAN ADJUST Header (position 5, max increase). This will provide a display of 30 segments for an input of 4 V which is 100% of the examples 4 V Signal Span.
- 3 Set the ZERO OFFSET RANGE Header to the center position (no offset). Apply 1 V and adjust the SPAN pot until the display reads 8.5 segments. A 4 V input would then read 30 segments.
- 4 Set the ZERO OFFSET RANGE Header to the negative offset position. If the module has a ZERO ADJUST Header select the position that will provide a negative offset of  $\approx 25$  segments. Apply 1 V and adjust the ZERO pot until the display reads zero. Apply 5 V and check that the display reads full scale.


### Example C: Using a BX-B31 Bargraph meter

Input signal 4 to 20 mA to read zero to full scale

Signal Span = 16 mA, Display Span = 30 segments

- 1 The full scale Signal Span of the Process Input 4-20 mA modules is 0 to 20 mA for a full scale Display Span of 0 to 30 segments.
- 2 Select the (Lo Range) Position on the Span Range Header and the 70% Signal Span position on the SPAN ADJUST Header (position 2).
- 3 Set the ZERO OFFSET RANGE Header to the center position (no offset). Apply 4 mA and adjust the SPAN pot until the display reads 8.5 segments. A 16 mA input would then read 30 segments.
- 4 Set the ZERO OFFSET RANGE Header to the positive offset position. If the module has a ZERO ADJUST Header select the position that will provide a negative offset of  $\approx -8.5$  segments. Apply 4 mA and adjust the ZERO pot until the display reads zero. Apply 20 mA and check that the display reads full scale.

## Case Dimensions

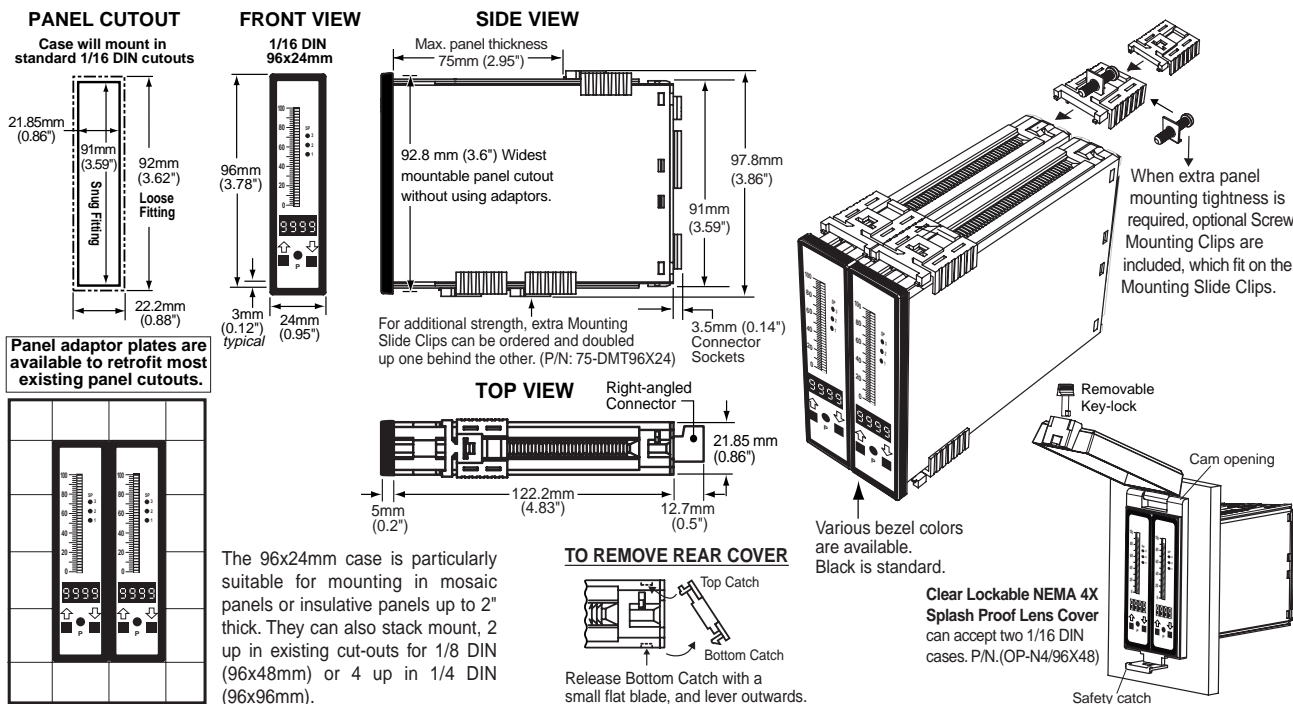



## Ordering Information

BASIC MODEL #      DISPLAY      POWER SUPPLY      INPUT MODULES      RELAY OUTPUT      OPTIONS / ACCESSORIES

**BX-B31** —   —   —   —   — **OA** 

Add to the basic model number the order code suffix for each standard option required. The last suffix is to indicate how many different special options and or accessories that you may require to be included with this product.

**Ordering Example: BX-B31-VR-PS1-IA01-OA2, the 2 OA's are, CR-CHANGE and a 75-DMT96X24**

### ► BASIC MODEL NUMBER

**BX-B31** . . . 96x24mm, Lynx, 31 Segment Bargraph

### Standard Options for this Model Number

*Order Code Suffix      Description*

#### ► DISPLAY

HG . . . 31 Segment Green LED Bargraph, Horizontal  
HR . . . 31 Segment Red LED Bargraph, Horizontal  
VG . . . 31 Segment Green LED Bargraph, Vertical  
VR . . . 31 Segment Red LED Bargraph, Vertical

#### ► POWER SUPPLY

PS1 . . . 85-265VAC/95-370VDC  
PS2 . . . 15-48VAC/10-72VDC

#### ► INPUT MODULES (Partial List. See [www.texmate.com](http://www.texmate.com))

Unless otherwise specified Texmate will ship all modules pre calibrated with factory preselected ranges and/or scalings as shown in **BOLD** type.

IA01 . . . AC-Volts Scaled RMS, 200/**600V** AC  
IA02 . . . AC-Volts Scaled RMS, 200mV/**2V/20V** AC  
IA03 . . . AC-mA Scaled RMS, 2/**20/200mA** AC  
IA04 . . . AC-Amps Scaled RMS, **0-1 Amp AC (0-100.00)**  
IA05 . . . AC-Amps Scaled RMS, **0-5 Amp AC (0-100.00)**  
IA06 . . . AC-Volts True RMS, 200/**600V** AC  
IA07 . . . AC-Volts True RMS, 200mV/**2V/20V** AC  
IA08 . . . AC-mA True RMS, 2/**20/200mA** AC  
IA09 . . . AC-Amps True RMS, **0-1 Amp AC (0-100.00)**  
IA10 . . . AC-Millivolt, Scaled RMS, **100mV AC**  
IA11 . . . AC-Amps True RMS, **0-5 Amp AC (0-100.00)**  
IA12 . . . AC-Millivolt, True RMS, **100mV AC**  
ID01 . . . DC-Volts, **2/20/200V**/Custom w/24V DC Exc  
ID02 . . . DC-Millivolt, 20/50/**100/200mV** DC w/24V DC Exc  
ID03 . . . DC-Milliamp, 2/**20/200mA** DC w/24V DC Exc  
ID04 . . . DC-Amps, **5A DC**  
ID05 . . . DC-Volts **2/20/200/Custom V** DC w/Offset and 24V Exc  
ID07 . . . DC-Milliamp, 2/**20/200mA** DC w/Offset and 24V Exc  
ID09 . . . DC-Amps, **1A DC**  
IF02 . . . Line Frequency, 50-500VAC, 199.9Hz, or optional 400Hz  
IGYZ\* . . . Universal Direct Pressure

\*View the IG- Ordering Code on page 5 to determine the value for Y & Z (IGAZ to IGKZ)

IP01 . . . Process Loop, **4-20mA(0-100.00)**  
IP02 . . . Process Loop, **4-20mA(0-100.00)** w/24VDC Exc  
IP03 . . . Process Input, **1-5V DC(0-100.00)** w/Offset, 24V Exc  
IPT1 . . . Prototype Board for Custom Design  
IR02 . . . 3-Wire Potentiometer 1K $\Omega$  min (0-F.S.)

IR03 . . . Linear Potentiometer, 3-wire, 1K $\Omega$  min  
IR04 . . . Resistance 2K $\Omega$   
IS04 . . . Pressure Ext Exc., 20/2mV/V, 4/6-wire  
IS05 . . . Pressure/Load Cell Ext Exc., 20/2mV/V, 5/10V Exc 4-wire  
IS06 . . . Pressure/Load Cell Ext Exc., 20/2mV/V, 4-wire  
IT03 . . . RTD, 100 $\Omega$  Pt. 2/3/4-wire **(-200 to 800°C)**  
IT04 . . . RTD, 100 $\Omega$  Pt. 2/3/4-wire **(-200 to 1470°F)**  
IT05 . . . RTD, 100 $\Omega$  Pt. 2/3/4-wire **(-190.0 to 199.0°F)**  
IT06 . . . Thermocouple, J Type **(0-1400 °F)**  
IT07 . . . Thermocouple, K Type **(0-1999°F)**  
IT08 . . . Thermocouple, J Type **(0-760 °C)**  
IT09 . . . Thermocouple, K Type **(0-1260°C)**  
IT14 . . . RTD, 100 $\Omega$  Pt. 2/3/4-wire **(-199.0 to 199.0°C)**

#### ► RELAY OUTPUT

R1 . . . Single 5A Form A Relay  
R2 . . . Dual 5A Form a Relays  
R11 . . . Single 10A Form C Relay  
R16 . . . Single 10A Form C & Single 5A Form C Relays

### Special Options and Accessories (OA's)

*Part Number      Description*

#### ► SPECIAL OPTIONS (Specify Input & Req. Reading)

CR-CHANGE . . . Range change from the standard input as shown in **BOLD** type  
CS-BAR . . . Custom Scaling within any Stnd. or Custom Selectable Range  
CSR-SETUP . . . NRC to Set-up Custom Selectable Range  
CSR-INSTL . . . Installation of Custom Selectable Range  
CSS-SETUP . . . NRC to Set-up Custom Special Scaling  
CSS-BR/INSTL . . . Installation of custom special scaling of bargraph

#### ► ACCESSORIES (Specify Serial # for Custom Artwork Installation)

75-DMT96X24 . . . Side Slide Brackets (2 pc) - extra set, extra strength  
75-DBBZ96X24 . . . Extra Black Bezel for 96x24mm Case  
ART-FB-S/L/C . . . NRC for artwork & set-up Faceplate/Desc/Co.Logo  
ART-FB-S/L . . . NRC for artwork & set-up Faceplate/Desc  
ART-FB-001 . . . Install Custom Faceplate per meter - 1 color  
93-PLUG2P-DP . . . Extra Screw Terminal Conn., 2 Pin Power Plug  
93-PLUG2P-DR . . . Extra Screw Terminal Conn., 2 Pin Plug  
93-PLUG3P-DR . . . Extra Screw Terminal Conn., 3 Pin Plug  
93-PLUG4P-DR . . . Extra Screw Terminal Conn., 4 Pin Plug  
DN.CAS96X24L . . . Complete 96x24mm Case with bezel  
OP-MCLP96X24 . . . Screw Mounting Clips (2 pc) - to screw tighten slide brackets

Many other options and accessories are available. See full price list for more details.  
Prices subject to change without notice.

### WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

### USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, **NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE** is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.

**TEXMATE INC**

995 Park Center Drive • Vista, CA 92081-8397

Tel: 1-760-598-9899 • USA 1-800-839-6283 • That's 1-800-TEXMATE

Fax: 1-760-598-9828 • Email: [sales@texmate.com](mailto:sales@texmate.com) • Web: [www.texmate.com](http://www.texmate.com)

Texmate has facilities in Japan, New Zealand, Taiwan, and Thailand. We also have authorized distributors throughout the USA and in 28 other countries.

**For product details visit [www.texmate.com](http://www.texmate.com)**

Local Distributor Address