



TEXMATE

BX-35-ACV with RMS option

**199.9/300V average AC or True RMS
3 1/2 Digit with 0.56" LEDs
in a 1/16 DIN Case**


Direct AC voltage measurement up to 300V AC with safe resistively isolated differential inputs, make this meter the OEM's choice for switchboard upgrades. Suitable to be used with PT's Primary Max 2kV / Secondary 110V/220V.

General Features


The BX-35-ACV is cost-effective, AC voltage measuring meter with two header selectable full scale ranges of 199.9V AC and 300V AC. The unique resistively isolated differential input of this meter allows safe measurement of phase to phase voltages. After selecting a new range, re-calibration is required. Display Hold and Display Test functions are also provided.

The standard meters have a high efficiency red LED display.

Typical Application Connections

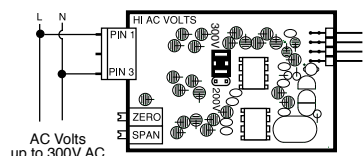


**AC Voltage
measurement
in Single-phase
Systems.**

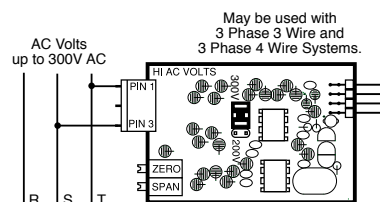


**AC Phase to
Phase Voltage
measurement
in Multi-phase
Systems.**

The unique differential input allows safe phase to phase AC line voltage measurements up to 300V AC.

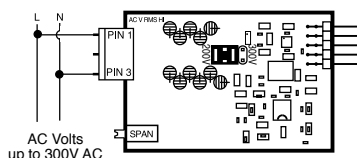

**AC True RMS
Voltage
measurement
in Single-phase
Systems.**

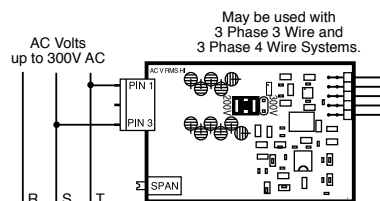

**AC True RMS
Phase to Phase
Voltage
measurement
in Multi-phase
Systems.**

The unique differential input allows safe phase to phase AC true RMS line voltage measurements up to 300V AC.

Compatibility

The BX-Series have a matching DIN case style that is complementary to the Leopard and Tiger family of meters. BX-Meters are the OEM's choice for switchboard and process indication. Each model is dedicated to a specific application and designed for quick and easy installation.



Specifications

Input Configuration:..... Differential auto zeroing Volts average AC or true RMS AC Volts to DC converter. Inputs are resistively isolated to 1400V from internal ground of meter by 1.94MΩ, so that phase to phase measurements up to 300V AC can be safely made.

Full Scale Ranges:..... Two header selectable ranges of 199.9V AC and 300V AC full scale

A/D Converter:..... 12 bit dual slope

Input Impedance:..... 4MΩ (minimum)

Accuracy:..... ±(0.05% of reading + 2 counts)

Temp. Coeff.:..... 100 ppm/°C (Typical)

Warm up time:..... 2 minutes

Conversion Rate:..... 3 conversions per second (Typical)

Display:..... **3 1/2 digit 0.56" Red LED display (std),** 0.56" GREEN or Super Bright RED are optional. Range 0 to 1999 counts.

Decimal Selection:..... Header under face plate, X•X•X•X

Positive Overrange:..... 1 (MSD) is displayed with all other digits blank.

Power Supply:..... AC/DC Auto sensing wide range supply
PS1 (std)..... 85-265 VAC, 50-400Hz / 95-300 VDC @1.5W
PS2..... 15-48 VAC, 50-400Hz / 10-72 VDC @4.0W

Operating Temp.:..... 0 to 50 °C

Storage Temp.:..... -20 °C to 70 °C.

Relative Humidity:..... 95% (non condensing)

Case Dimensions:..... 1/16 DIN Bezel: 96x24mm (3.78"x0.95")
Depth behind bezel 122.2 mm (4.83")
Plus 12.7mm (0.5") for Right-angled connector.

Weight:..... 7 oz., 9 oz when packed.

Certification:..... UL Listed.

BX-Series, the OEMs choice for switchboard and process indication

BX-35-ACA..... AC amps, Scales RMS (True RMS Opt.). (5 Amp Internal Shunt), 3.5 digit

BX-35-ACV..... AC volts, Scaled RMS (True RMS Opt.). 199.9/300V AC Header Selectable Ranges, 3.5 digit

BX-35-DCA..... DC mV ±50mV, ±100mV, ±200mV Header Selectable Ranges, 3.5 digit

BX-35-DCV..... DC volts ±2V/±20V/±200V Header Selectable Ranges, 3.5 digit

BX-35-CL..... Process 4 to 20mA (100.0), easily user scalable, 3.5 digit w/Exc. opt

BX-35-HZ..... AC Line Frequency 15.0Hz to 199.9Hz. Up to 300V AC input, 3.5 digit

BX-35-TC-KF or JF..... K or J Thermocouple with °F, optional °C, 3.5 digit

BX-35-RTD-F..... 100Ω platinum RTD, 3 or 4 wire, °F in 1° resolution, optional °C, 3.5 digit

BX-35-PRESSURE..... Pressure, Load Cell 20mV/2mV/V, 5/10V Exc 4-wire 3.5 digit

BX-45-ACA..... AC amps, Scales RMS (True RMS Opt.). (5 Amp Internal Shunt), 4.5 digit

BX-45-ACV..... AC volts, Scaled RMS (True RMS Opt.). 199.9/300.0V AC Header Selectable Ranges, 4.5 digit

BX-45-DCA..... DC mV ±50mV, ±100mV, ±200mV Header Selectable Ranges, 4.5 digit

BX-45-DCV..... DC volts ±2V/±20V/±200V Header Selectable Ranges, 4.5 digit

BX-45-CL..... Process 4 to 20mA (100.00), easily user scalable, 4.5 digit w/Exc. opt

BX-45-TC-KF..... K Thermocouple with °F, optional °C, 4.5 digit


BX-45-TC-JF..... J Thermocouple with °F, optional °C, 4.5 digit

BX-45-RTD-F..... 100Ω platinum RTD, 3 or 4 wire, °F in 1° resolution, optional °C, 4.5 digit

BX-45-PRESSURE..... Pressure, Load Cell 20mV/2mV/V, 5/10V Exc 4-wire 4.5 digit

Connector Pinouts

This meter uses plug-in type screw terminal connectors for all connections.

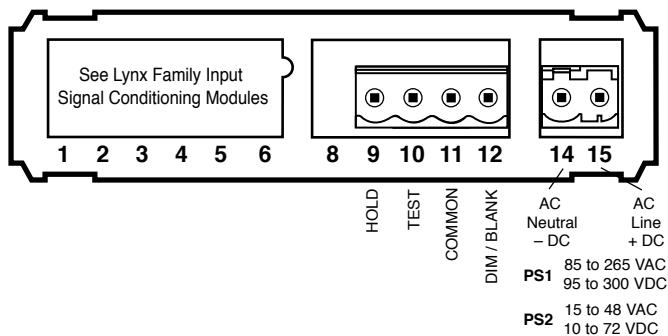

Pin Descriptions

Pin 1 - Signal Input High: Signal high input for the meter. Full scale ranges of 199.9V AC or 300V AC can be selected on the Range Select Header.

Pin3-Signal Input Low: Signal low input for the meter.

Pin 9 - Hold: If this pin is left unconnected the meter will operate in a free running mode. When this pin is connected to the Common Pin 11, the meter display will be latched. A/D conversions will continue, but the display will not be updated until Pin 9 is disconnected from Pin 11.

Pin 10 - Display Test: When this pin is connected to the Common Pin 11, all segments of the display light up and 1888 is displayed. This is used to detect any missing segments in the display.


Pin 11 - Common: To Hold, Test or Dim the display, the respective pins have to be connected to this Common Pin.

Pin 12 - Dim/Blank: When this pin is connected to the Common Pin 11 the display is blanked out. If it is connected through an external 1K Ω pot, the display may be dimmed.

Pin 14 & 15 - AC/DC Power Input: These pins are the power pins of the meter and they only accept a special polarized screw terminal plug that can not be inserted into any other input socket. The standard meter has a auto sensing AC/DC power supply that operates from 85-265 VAC/95-300 VDC (PS1 Std). An optional isolated low voltage power supply that operates from 15-48 VAC/10-72 VDC (PS2) is also available.

Connectors

This meter uses plug-in type screw terminal connectors for all input and output connections. The power supply connections (pins 14 and 15) have a unique plug and socket outline to prevent cross connection. The main board uses standard right-angled connectors.

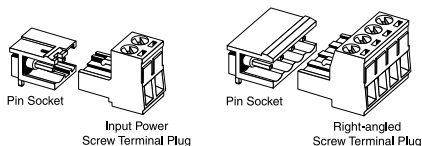


WARNING: AC and DC input signals and power supply voltages can be hazardous. Do Not connect live wires to screw terminal plugs, and do not insert, remove or handle screw terminal plugs with live wires connected.

Calibration Procedure

1. Select the required full scale voltage range by re-positioning the jumper clip on the Range Select Header. A range of 199.9V AC or 300V AC full scale may be selected.
 2. Apply an input of 0 Volt AC to the meter by shorting the inputs. The meter will auto zero and display zero.
 3. If you need to offset zero, order the Optional Zero Offset Pot and adjust until the meter reads 0000.
 4. Apply a known high input signal that is within the full scale voltage range selected.
 5. Adjust the Span Pot until the meter displays the required reading for the signal being applied.
 6. The BX-35-ACV is now calibrated and ready for use.
- (Whenever a new range is selected, re-calibration is required to meet the specified accuracy).

Component Layout

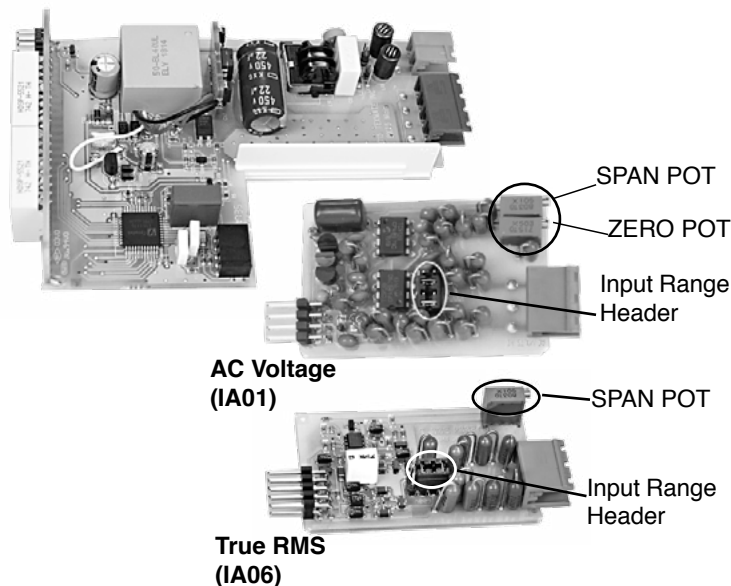


Signal Conditioning Components

INPUT RANGE Header




Range values are marked on the PCB. Two positions are provided. After selecting a new range with the single jumper clip, re-calibration is required.

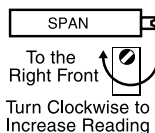

SPAN Potentiometer (Pot)


The 15 turn SPAN pot is always on the right side (as viewed from the back of the meter). Typical adjustment is 20% of the input signal range.

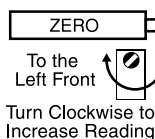

ZERO Potentiometer (Pot) (IA01 only)

The Optional ZERO pot when installed is always to the left of the SPAN pot (as viewed from the back of the meter). Typically it enables the displayed reading to be offset ± 100 counts.

Opening Back Panel

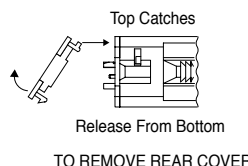

To open back panel, insert a flat screwdriver or similar instrument in both slots on the top of the case and pry open. The BX-Series meters slide out from the rear of the case as a complete assembly.

Decimal Point Selection



A close-up photograph of a yellow printed circuit board (PCB). On the left, there is a 7-segment display with seven black segments. A white circle highlights a small, dark, rectangular component mounted on the PCB next to the display. To the right of the display, there is a small, dark, circular component. The PCB has various traces and components visible.

Installation Guidelines

- 

Clear Lockable Water-proof Cover

Diagram illustrating the front panel components:



- Safety Catch
- Cam Opening
- Removable Key-lock

Optional Face Plate Descriptors

To customize the face plate, clear adhesive label containing various popular descriptors may be ordered. Choose the descriptor desired, peel off the adhesive backing and align the descriptor in the center right of the faceplate.

P.N.: DU-CASEDES

BX Case Dimensions and Panel Cutouts

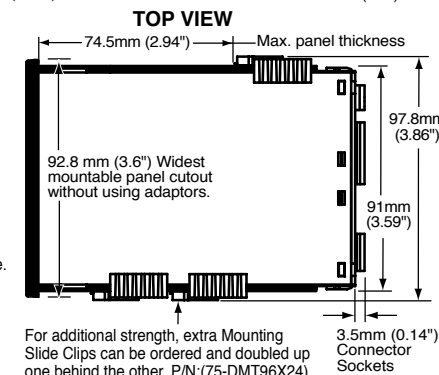

Ordering Information

Standard Options for this Model Number

Part Number	Description	List
►BASIC MODEL NUMBER Includes plug in type screw terminals, standard display and standard power supply unless optional versions are ordered.		
BX-35-ACV	AC Volts, Scaled RMS.199.9/300V AC	IA01
RMS OPTION	AC Volts, True RMS.199.9/300V AC	IA06
► DISPLAY		
DR . . .	Red LED, 0.56 inch high	
DB . . .	Super-bright Red LED, 0.56 inch high	
DG . . .	Green LED, 0.56 inch high	
►POWER SUPPLY		
PS1 . .	85-265VAC/95-300VDC	
PS2 . .	15-48VAC/10-72VDC	

Special Options and Accessories

Part Number	Description	List
►SPECIAL OPTIONS (Specify Inputs or Outputs & Req. Reading)		
CR-CHANGE . . .	Calibrated Range Change to another Standard Range. .	
CS-3/3.5/4 . . .	Custom display scaling within std.ranges	
►ACCESSORIES (Specify Serial # for Custom Artwork Installation)		
75-DMTC96X24 . .	Side Slide Brackets (2 pc) - extra set, extra strength . .	
75-DBBZ96X24 .	Extra Black Bezel for 96x24mm Case	
ART-FS-S/D . . .	NRC for artwork & set-up Faceplate/Desc.	
ART-FS-001 . . .	Install Custom Faceplate per meter - 1 color	
93-PLUG2P-DP .	Extra Screw Terminal Conn., 2 Pin Power Plug	
93-PLUG2P-DR .	Extra Screw Terminal Conn., 2 Pin Plug	
93-PLUG3P-DR .	Extra Screw Terminal Conn., 3 Pin Plug	
93-PLUG4P-DR .	Extra Screw Terminal Conn., 4 Pin Plug	
DN.CAS96X24L .	Extra Complete 96x24mm Case with bezel	
OP-MTLCLIP . .	Screw Mounting Clips (2 pc) to screw tighten slide brackets	
75-DTP96X24 . .	Black Metal Trim Plate (96x24mm Case) 1 Meter	
75-DTP2X9624 .	Black Metal Trim Plate (96x24mm Case) 2 Meters	
75-DTP3X9624 .	Black Metal Trim Plate (96x24mm Case) 3 Meters	
DU-CASEDES . .	Clear adhesive descriptors label for face plate. . .	

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.



450 State Place • Escondido, CA 92029

Tel: 1-760-598-9899 • USA 1-800-839-6283 • 1-800-TEXMATE

Fax: 1-760-598-9828 • Email: orders@texmate.com • Web: www.texmate.com

BX-35-ACV Technical Manual Copyright © 2018 Texmate Inc. All rights reserved. Published by: Texmate Inc. USA. Information in this Technical Manual is subject to change without notice due to correction or enhancement. The information described in this manual is proprietary to Texmate, Inc. and may not be copied, reproduced or transmitted, in whole or in part, in connection with the design, manufacture, or sale of apparatus, device or private label product without the express written consent of Texmate, Inc.