


## UM-35RTD

100ΩPt RTD Temperature Meter  
3 1/2 DIGIT with 0.56" or 0.8" LEDs  
in a Traditional NEMA Style Case

Low cost utility temperature meter that accepts 3 wire or 2 wire, 100Ω Platinum RTD sensors, pre-calibrated in °F or °C and for 0.1° or 1° resolution.




### General Features

The UM-35RTD is a versatile and economical temperature meter, designed to accept 3 wire or 2 wire 100Ω Platinum RTD sensors. The meter is ordered factory calibrated for either a °C or °F readout, and a 0.1° or a 1° resolution. If required in the future, the user can recalibrate the meter on-site without any component changes by following the instructions on page 2 of this data sheet and utilizing the internal °C or °F and 0.1° or 1° resolution select headers.


The standard meter is provided with TB-KIT screw terminal blocks and insulated quick-disconnects. For the greatest convenience and ease of use, order the optional pre-configured Push-On screw terminal connectors. (see Push-On Screw Terminals and Ordering Information)

### Typical Application Connections

#### Temperature Measurement with 3 Wire RTD

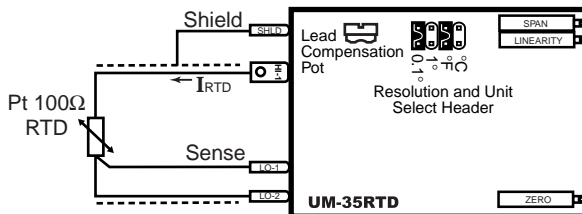

#### Temperature Measurement with 2 Wire RTD

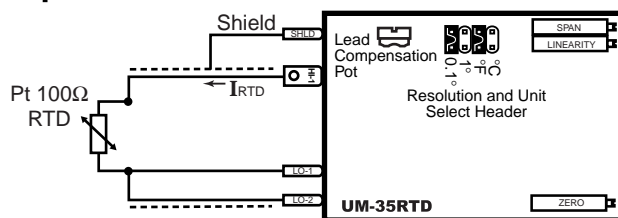

LO-1 and LO-2 input leads should be joined as close as possible to the sensor element because, on 2 wire RTDs, the single lead length resistance from the sensor to this joint will produce uncompensatable errors.

### Compatibility

The UM-Series NEMA case style is complementary to Texmate's Classic RP-Series. For economy, each UM model is dedicated to a specific application. UMs are ideal for upgrading or replacing the traditional USA NEMA case panel meters presently in use.

**Traditional  
NEMA  
STYLE USA  
CASE**

### Specifications

**Input Configuration:** .....3-Wire 100ΩPt RTD(0.00385Ω/Ω/°C)

**Input Ranges:**

- UM-35RTDF .....-199°F to + 1470°F (1°F resolution)
- UM-35RTDF.1 .....-199.9°F to + 199.9°F (0.1°F resolution)
- UM-35RTDC .....-190°C to + 800°C (1°C resolution)
- UM-35RTDC.1 .....-190.0°C to + 199.9°C (0.1°C resolution)

**Lead Imbalance Error:**.....2.8°C per ohm of imbalance

**Lead Resistance:** .....Up to 50Ω of resistance in each lead can be automatically compensated

**Input Protection:** .....25V AC/DC

**A/D Converter:** .....12 Bit Dual Slope

**Accuracy:** .....±(0.3% + 1 digit)

**Temperature Coefficient:** 100 ppm/°C (Typical)

**Warm Up Time:**.....2 minutes

**Conversion Rate:** .....3 conversions per second (Typical)

**Display:**.....3 1/2 digit 0.56" Red LED display (std), (optn) Green or Super Bright Red, 0.8" Red or Green. Range 0 to 1999 counts.

**Decimal Selection:**.....Header under face plate, X•X•X•X•

**Overrange Indication:** .....1 (MSD) displayed all other digits blank

**Power Supply (std):**.....120/240V AC, 50/60/400 Hz. approx 1.5W.

(Optn) VO-DC/ISO .....Isolated switcher 9 to 36V DC/12 to 24V AC

(Optn) VO-24V .....Isolated Transformer 24V AC ±10%

(Optn) VO-5V DC .....Non-isolated 5V DC ±10%

**Operating Temperature:** .....-10 to 50 °C

**Storage Temperature:** .....-20 to 70 °C.

**Relative Humidity:** .....95% (non-condensing)

**Case Dimensions:** .....Bezel 4.06"Wx1.89"H (102.7Wx47.9Hmm)  
Depth behind bezel 3.64" (92.22 mm) Plus  
0.5 to .9" (12.7 to 22.8mm) depending on  
connector used.


**Weight:**.....10oz., 13 oz. when packed.

### UM-Series low cost utility meters for switchboard and process indication


- UM-35AC11/5 AC amps, Scaled RMS, (1 or 5 Amp internal shunt), 3.5 digit
- UM-35AC .....AC volts, Scaled RMS. 199.9V AC/500V AC Header Selectable Ranges, 3.5 digit
- UM-40AC .....AC volts, Scaled RMS. 500.0V AC full scale, high resolution 4 digit
- UM-35HZ .....15Hz to 199.9Hz or optionally 40Hz to 500Hz up to 500V AC input, 3.5 digit
- UM-35 .....DC Volts ±2/20V DC Header selectable or optionally ±2/200V DC, 3.5 digit
- UM-35MV .....DC mV ±50mV and ±100mV select inputs to suit DC current shunts, 3.5 digit
- UM-45 .....DC Volts ±2V/±20V/±200V DC Header selectable ranges 4.5 digit
- UM-45MV .....DC mV ±50 mV, ±100mV, or ±200mV selectable inputs to suit DC current shunts, 4.5 digit

- UM-35CL .....Process 4 to 20mA (100.0), easily user scalable, 3.5 digit
- UM-35CLE .....Process 4 to 20mA (100.0) with 24V DC excitation, easily user scalable in engineering units anywhere from -1999 to +1999. 3.5 digit
- UM-45CL .....Process 4 to 20mA (100.0), easily user scalable, 4.5 digit
- UM-35P .....Pressure, strain gage and load cell, 4 and 6 wire, 5V DC excitation, Header Selectable Sensitivity 2mV/V, 5mV/V, 10mV/V, 20mV/V, 3.5 digit
- UM-35J/K .....J or K thermocouple input, 1° resolution, order °C or °F, 3.5 digit
- UM-35RTD .....100Ω platinum RTD, 3 or 4 wire, order °C or °F and 0.1° or 1°, 3.5 digit


## Functional Diagram

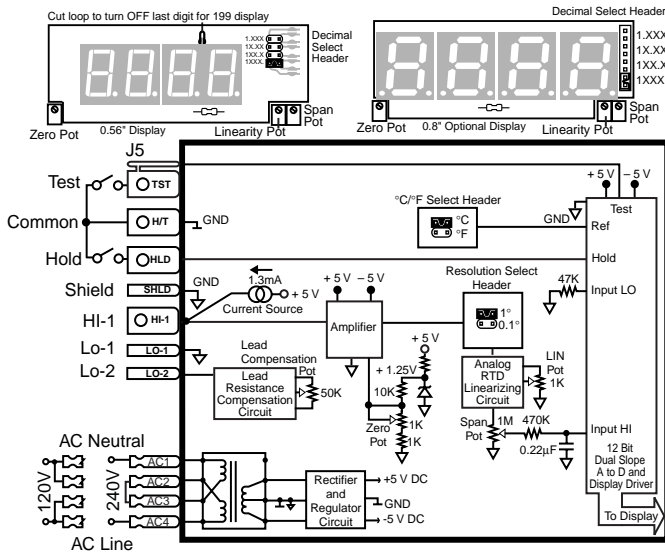

## Component Layout

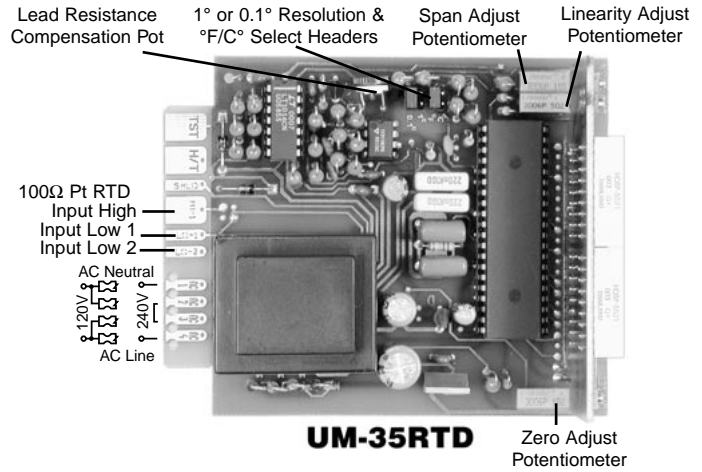

## Signal Conditioning Components



### RESOLUTION Select Header and °C/°F Select Header

A resolution of 0.1° or 1° may be selected by positioning the jumper clip on the Resolution header.



### SPAN Potentiometer (Pot)

The SPAN pot is on the right side of the display. Typical adjustment is 20% of the input signal range.



### LINEARITY Potentiometer (Pot)

The LINEARITY pot is to the right of the SPAN pot and is used for top end linearity calibration.



### ZERO Potentiometer (Pot)

The ZERO pot is on the left side of the display. Typically it enables the displayed reading to be offset ±500 counts.



### LEAD COMPENSATION (Pot)

This single turn Trim Pot is accessed by removing the meter from the case. It is calibrated at the factory for lead resistances up to 50Ω each, and usually does not need to be re-calibrated.

## Calibration Procedure

- Select a resolution of 0.1° or 1° on the Resolution Select Header. Select the appropriate decimal point on the Decimal Select Header to select a display of °C or °F on the °C/°F Select Header.
- Connect an RTD Simulator to the input of the UM-35RTD and calibrate according to the Calibration Table below.


Calibration Table	0.1°C	1°C	0.1°F	1°F
3. Adjust Zero Pot so display matches RTD simulator with output set to:	0.0°C	0°C	0.0°F	0°F
4. Adjust Span Pot so display matches RTD simulator with output set to:	-190.0°C	-190°C	-190.0°F	-190°F
5. Adjust Linearity Pot so display matches RTD simulator with output set to: Repeat Step 4 and 5 until both readings remain constant.	190.0°C	800°C	190.0°F	1470°F
6. Introduce an equal resistance of not more than 50Ω between each input of the RTD simulator and the meter. Adjust the Lead Compensation Pot so display matches RTD simulator with output set to:	190.0°C	800°C	190.0°F	1470°F

The Lead Compensation is calibrated at the factory for lead resistances up to 50Ω each, and usually does not need to be re-calibrated.

- The UM-35RTD meter is now calibrated and ready for use.

## Connector Pinouts

UM-Series are connectable using the TB-KIT screw terminal blocks provided with the meter. For greatest convenience, order a Texmate Push-On screw terminal connector. Alternatively, a pcb edge connector can be used. (see connector options)

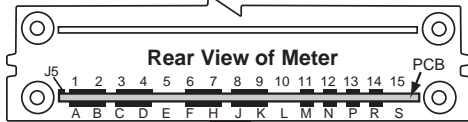

**WARNING:** AC and DC input signals and power supply voltages can be hazardous. Do Not connect live wires to screw terminal plugs, and do not insert, remove or handle screw terminal plugs with live wires connected.

**Pins 1 & 2 - Display Test:** All numeric display segments will light up when this pin is connected to the H/T Common Pin. A Texmate TB-KIT Screw Terminal Clip can be used to access the Display Test function.

**Pins 3, 4, C & D - H/T Common Pin:** The Hold and Display Test pins have to be connected to this pin to activate their respective functions.

**Pin 5 - Shield:** This pin is internally connected to the ground of the internal power supply.

**Pins A & B - Hold Reading:** When this pin is connected to the H/T Common pin, A/D conversions will continue, but the display will not be updated until Pins A & B are disconnected from the H/T Common pin. When using a Texmate TB-KIT Screw Terminal, J5 has to be opened to disconnect the Test function and enable the Hold function. If both hold and test functions need to be accessed, a Push-On Screw Terminal can be used.

**Pins 6, 7, F & H - Signal High Input:** Input from 3 wire/2 wire RTD.

**Pins 8 & J - Signal Low Input 1:** Input for 3 wire/2 wire RTDs


**Pins 9 & K - Signal Low Input 2:** Input for 3 wire/2 wire RTDs.

**Pins 11 & M - AC1 - Live AC Power Input:**


**Pins 12 & N - AC2 - 110/220V AC Power Select:** See below for connections

**Pins 13 & P - AC3 - 110/220V AC Power Select:**


**Pins 14 & R - AC4 - Neutral AC Power Input:**

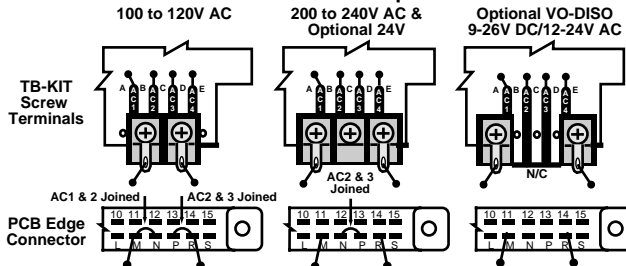

## Decimal Point Selection

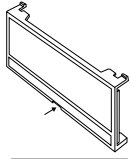


Remove faceplate by inserting a screwdriver blade in the slot at the bottom center of the faceplate. Press blade in to release catch and gently pry face plate outward from the bottom. (see also Case Dimension drawing)

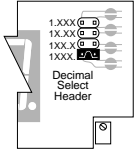

Decimal selection is made on the front of the display board by moving the jumper clip to the desired position on the header.

## TB-Kit Screw Connectors

Six Screw Terminals included Free with each UM Series meter

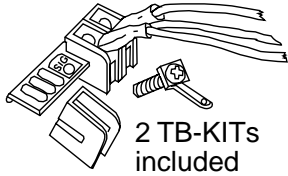


2 TB-KITs included

A TB-KIT consists of 3 insulated Quick Connects and 3 of Texmate's patented individual screw terminal blocks which attach directly to PCB inputs. These provide a Quick Connect tab and screw clamp termination. When using the TB-KIT screw terminal blocks, it is possible to

select between 120V AC and 240V AC power, the optional low voltage switching power supply or the 24V AC power supply by connecting the screw terminals as shown in the diagrams below.

## Optional PCB Edge Connector

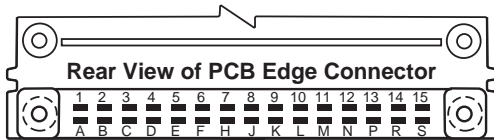


A standard 30 pin edge connector (two rows of 15 pins on 0.156" centers) may also be used to connect the UM-Series. Order part no. CN-L15. For different power supply voltage connection details, see pin connections below.

## Selecting Power Supply Voltages


With TB-KIT Screw Terminals

With Optional PCB Edge Connector


For 100 to 120V AC, 50/60 Hz

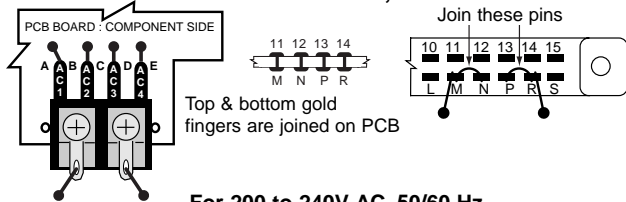

For 200 to 240V AC, 50/60 Hz  
or For Optional 24V AC (P.N.:V0-24V)

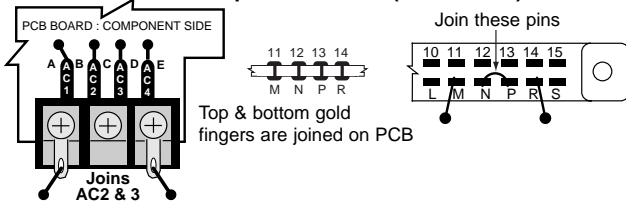


For Isolated 9-36V DC/12-24V AC, 50/60 Hz  
Switching Power Supply

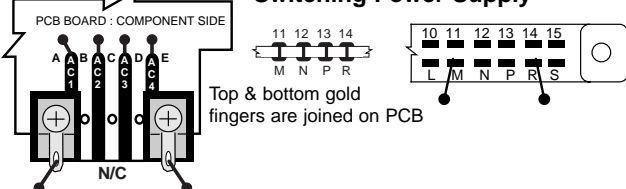

## Push-On Screw Terminals

They provide the greatest convenience and ease of use  
Texmate's exclusive optional Push-On Connectors combine an edge card connector and a 10 position screw terminal block. Push-On Connectors are ordered preconfigured for each specific power supply voltage and each optional power supply available for the UM-Series.

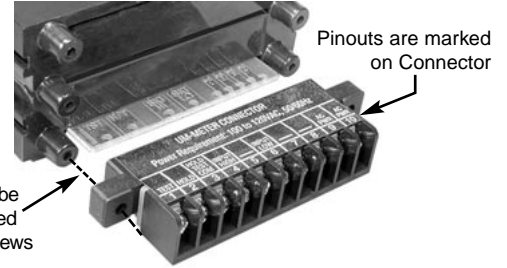


Connector can be securely attached to case with screws

Pinouts are marked on Connector

CN-PUSH/RTD	.....100/120V AC
CN-PUSH/RTD01	.....200/240V AC
CN-PUSH/RTD03	.....24V AC
CN-PUSH/RTD04	.....9-36V DC/12-24V AC
CN-PUSH/RTD05	......5V DC

## Pinout Change-Over Connectors

To replace DPMs in existing panels where matching pinouts are required, Texmate can provide custom pinout Change-over Connectors, either with PCB gold finger terminations, (shown below) or customized versions of Push-On Screw Terminals. (shown above)

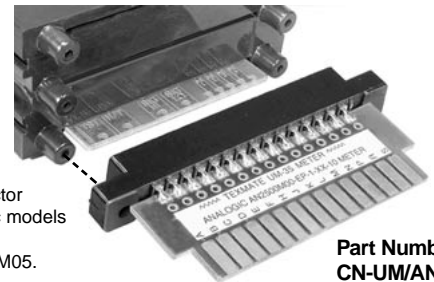

Change-over Connector shown is for Analogic models AN25M02, AN25M03, AN25M04 and AN25M05.


Part Number  
CN-UM/ANLGC

## Face Plate Descriptors

Volts AC	Volts DC	Hz	RPM
Amps AC	Amps DC	DCµA	
Milliamps AC	Milliamps DC	°C	
Millivolts AC	Millivolts DC	°F	
Kilowatts	Watts	%	pH
Ω			
kg/cm <sup>2</sup>	Kilovolts AC	psi	
kWH	kVAR	Power Factor	
kΩ	CosØ	M/min	m <sup>3</sup> /hr

To customize the face plate, each UM-meter is supplied with a white printed clear adhesive label containing various popular descriptors. Choose the descriptor, peel off the adhesive backing and align the descriptor in the lower right corner of the standard face plate.

## Custom Face Plates

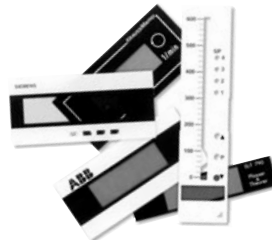

Texmate Produces Thousands of Custom OEM Face Plates

Have Texmate Design and produce a Custom Face Plate for your next project!

- Custom face plates have a non-recurring artwork charge. A serial number is then assigned to each artwork to facilitate reordering.


- Small Run or One-Off custom face plates incur an installation charge, and are generally printed on a special plastic film, which is then laminated to custom faceplate blanks as required.

- Large Run (250 pieces min): custom face plates are production silk screened, issued a part number, and held in stock for free installation as required by customer orders.

- OEMs may also order Custom Meter Labels, Box Labels, Custom Data Sheets and Instruction Manuals.

# UM Case Dimensions and Panel Cutouts

This NEMA Case will fit any existing cutout with dimensions that are between the Snug and Loose Fitting dimensions shown below.

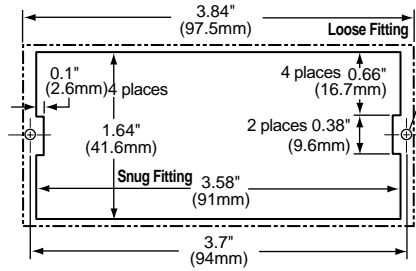


## Panel Cutout for Front Panel Removal

To enable removal of the panel meter from a mounting panel without requiring rear access, make the panel cutout as shown above, using the mounting plate supplied with the meter as a template. The mounting holes should then be tapped to match the mounting screws.

To remove the face plate, carefully insert screwdriver blade at bottom slot to release catch and gently pry outward to release the plate.

## For new installations see Optimum Panel Cutout or Panel Cutout for Front Panel Removal

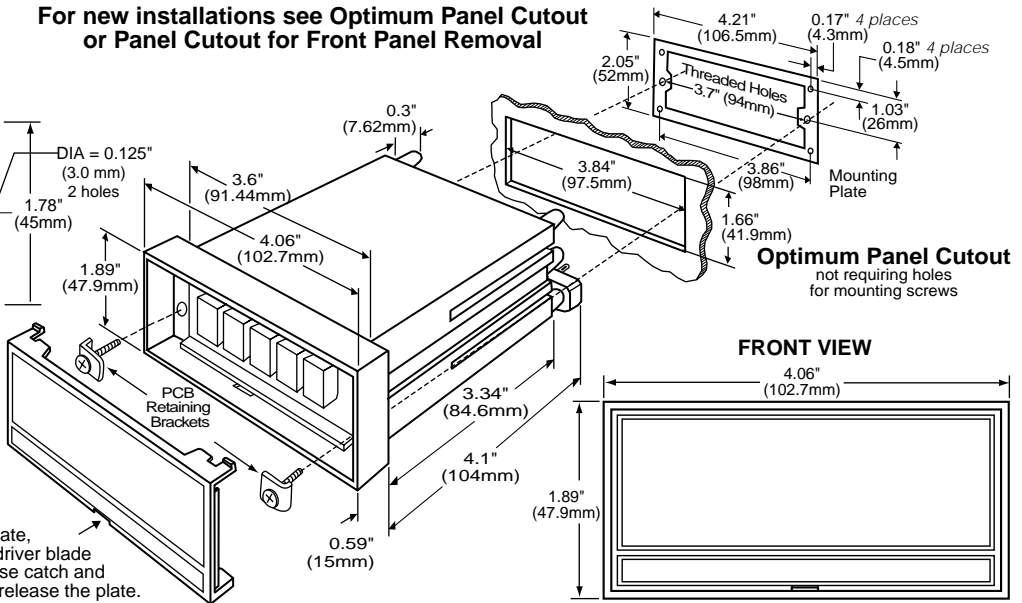

# Ordering Information

## Standard Options for this Model Number

**Part Number**                      **Description**                      **List**

► **BASIC MODEL NUMBER** Includes 2 TB-KITs, standard display and standard power supply unless optional versions are ordered.

- UM-35RTDF .....DPM, Pt. 100Ω, 3 wire in °F. 1 Degree Resolution.....\$95
- UM-35RTDC .....DPM, Pt. 100Ω, 3 wire in °C. 1 Degree Resolution.....\$95
- UM-35RTDF.1 ....DPM, Pt. 100Ω, 3 wire in °F. 0.1 Degree Resolution.....\$95
- UM-35RTDC.1 ....DPM, Pt. 100Ω, 3 wire in °C. 0.1 Degree Resolution.....\$95

### ► DISPLAY

- STANDARD ....0.56" Red LEDs .....N/C
- UM-BRIGHT .....Super bright Red LEDs, 0.56 inch high .....\$20
- UM-GREEN .....Green LEDs, 0.56 inch high .....\$10
- UM-GREEN4.5 .....Green LEDs, 0.56 inch high Dummy Zero Option for UM-35s .....\$25
- UM-LARGE/GRN...Green LEDs, 0.8 inch high for UM-35 Series .....\$35
- UM-LARGE/RED...Red LEDs, 0.8 inch high for UM-35 Series .....\$25
- UM-RED4.5 .....Red LEDs, 0.56 inch high Dummy Zero Option for UM-35s .....\$25

### ► POWER SUPPLY

- STANDARD ....100/120 or 200/240VAC User selectable .....N/C
- V0-DC/ISO .....Isolated auto-sensing AC/DC 9 to 36V DC/12 to 24V AC .....\$35
- V0-24V .....Isolated transformer 12V AC or 24V AC user selectable .....\$15
- V0-5V DC .....Non-isolated 5V DC only .....\$10

### ► SPECIAL OPTIONS (Specify Inputs or Outputs & Req. Reading)

- CB-FS35 .....Non-Std Range and Scale changes for UM-35 meters .....\$10

## Special Options and Accessories

**Part Number**                      **Description**                      **List**

### ► ACCESSORIES (Specify Serial # for Custom Artwork Installation)

- 75-RPCLEAR ..... Replacement Clear Lens for meter .....\$2
- 75-RPFILTER ..... Replacement Red Lens for meter .....\$2
- CN-L15 ..... Connector: Dual Row, 30 Pin Edge Conn., 0.156" ctr .....\$4
- CN-PUSH/UM ..... Connector: Push-on Terminal Block, 120V AC Pwr .....\$18
- CN-PUSH/UM01 . Connector: Push-on Terminal Block, 200-240V AC Pwr .....\$18
- CN-PUSH/UM03 . Connector: Push-on Terminal Block, 24V AC pwr .....\$18
- CN-PUSH/UM04 . Connector: Push-on Terminal Block, 9 to 36V DC/12 to 24V AC .....\$18
- CN-PUSH/UM05 . Connector: Push-on Terminal Block, 5V DC .....\$18
- CN-UM/ANLGC .. Connector: Pinout Changer to match Analogic AN20M02 etc ..\$30
- OP-N4SEAL/UM . NEMA 4 lens cover for UM Series meters .....\$50
- RP•CASE ..... Case: Replacement with Mounting Hardware.....\$10
- TB-KIT ..... Connector: xtra Screw Terminal Blocks ( 3 sets=1 kit) .....\$1
- ART-FS-S/D ..... NRC for Artwork & set-up Custom Faceplate and or Descriptor . \$35
- ART-FS-S/D/C ... NRC for Artwork & set-up Custom Faceplate and Custom Logo. \$75
- ART-FS-001 ..... Produce & Install Custom Faceplate per meter - 1 color no-min \$10
- ART-FS-002 ..... Produce & Install Custom Faceplate per meter - 2 color no-min \$20
- ART-FS-003 ..... Produce & Install Custom Faceplate per meter - 3 color no-min \$30
- ART-FUM-001 ... Custom Faceplate, 100 piece Min. (\$3.00 each) - 1 color .....\$300
- ART-FUM-002 ... Custom Faceplate, 100 piece Min. (\$4.20 each) - 2 color .....\$420
- ART-FUM-003 ... Custom Faceplate, 100 piece Min. (\$5.40 each) - 3 color .....\$540

Many other options and accessories are available. See full price list for more details. Prices subject to change without notice.

## WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

## USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.



995 Park Center Drive • Vista, CA 92081-8397

Tel: 1-760-598-9899 • USA 1-800-839-6283 • That's 1-800-TEXMATE

Fax: 1-760-598-9828 • Email: sales@texmate.com • Web: www.texmate.com

Texmate has facilities in Japan, New Zealand, Taiwan, and Thailand. We also have authorized distributors throughout the USA and in 28 other countries.

For product details visit [www.texmate.com](http://www.texmate.com)

Local Distributor Address