



Optional Ratchetting Mounting Side Clips

4 1/2 DIGIT with 0.4" LED

PM-45L

±0.02% Precision Panel Meter with Differential Input 200PPM/°C

High Accuracy LED Meter with 10mV Resolution, True Differential Inputs

General Features

The PM-45L is a truly unique and extremely versatile instrument. It offers more high performance features than most larger and more expensive DPM's.

The meter incorporates a crystal controlled 100KHz clock that provides an exceptionally high normal mode rejection of 120dB at multiples of 50/60Hz. Bipolar differential and single-ended DC voltages from ±199.99mV to ±199.99V full scale can be measured and scaled in almost any known engineering unit. Provision has been made for signal offsetting and the capability of attenuating both high and low signal inputs. Resolution is 10µV over ±19999 counts, and errors due to zero drift are virtually eliminated by autozeroing. Other optional modes of operation include an ohmmeter mode, current meter mode and ratiometric mode.

Differential Inputs

The PM-45L may be used in a wide variety of configurations. For Differential inputs meter, please use order code ZRS-PMRP and specify Inputs and Display.

Ordering Information

► BASIC MODEL NUMBER

PM-45L 4.5 digit Red LED, Precision Meter w/Differential Input

► SPECIAL OPTIONS (Specify Inputs & Req. Reading)

- ZS Custom display scaling within standard ranges
- ZR-200V200 VDC Range Change.
- ZR-20V20 VDC Range Change.
- ZRS-200MV . .200 mVDC range change.
- ZRS-PMRP . . . Non-standard range and scale change including wired connector.
- Z50K Zero offset 50 K Pot.

► ACCESSORIES

CN-L10 Dual Row 10 Pin Connector, Solder Type



Specifications


- Input Configuration:**..... True differential and single-ended
- Full Scale Ranges:**..... ±199.99mVDC
±1.9999VDC (standard)
 ±19.999VDC
 ±199.99VDC (maximum input signal, higher voltages can be measured if voltage dividing resistors are located externally)
- Input Impedance:**..... Exceeds 1000MΩ on 200mV and 2V ranges; 10MΩ on all other ranges
- Input Protection:**..... ±170VDC or 120VAC on 200mV and 2V ranges; ±1200VDC or 850VAC on all other ranges
- Accuracy:**..... ±0.015% of reading + 2counts
 ±(0.02% of reading + 3 counts) for 200mV range.
- Temperature Coefficient:** 5PPM/°C in ratiometric, 200PPM/°C using internal adjustable T.C. reference.
- Warm Up Time:**..... 10 seconds to specified accuracy
- Conversion Rate:** 2.5 readings per second
- Display:**..... 0.4" LED
- Overrange Indication:** When input exceeds full scale on any range being used, most significant "1" digit & polarity symbol are displayed with all other digits blank
- Power Requirements:**..... Low Ripple +4.5 to +5.5VDC at 225mA
- Operating Temperature:** .. 0° to +60°C
- Storage Temperature:**..... -20° to +70°C
- Relative Humidity** 95% (non-condensing)
- Case Dimensions:**..... Bezel 2.76" x 1.17" (69.75 x 29.7mm)
 Depth behind Bezel 3.32"(84mm) plus 0.68" (17.27mm) for connector.
- Weight:** 88 gms (3.1 oz)

PM-Series, high performance versatility for a wide range of applications

PM-35A.....3.5 digit Red LED, Precision Preference, 2VDC, 5VDC Power	PM-45L..... 4.5 digit Red LED, Precision Meter w/Differential Input
PM-35U.....3.5 digit Red LED, Low Cost, 2VDC, 5VDC Power	PM-45X 4.5 digit LCD, Precision Meter w/Differential Input
	PM-45XU3.5 digit LCD, Low Cost Meter w/Differential Input

Connector Pinouts

The Texmate Model PM-45L is interconnected by means of a standard PC board edge connector having two rows of 10 pins, spaced on 0.156" centers.

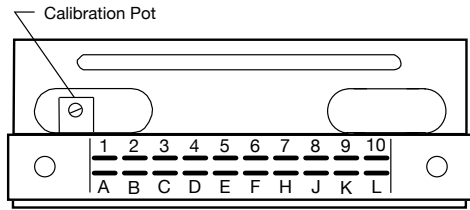

Component Side	Solder Side
REFERENCE INPUT 1	A REFERENCE OUTPUT
OFFSET VOLTAGE OUTPUT 2	B SIGNAL HIGH INPUT
SIGNAL LOW INPUT 3	C ANALOG COMMON
DECIMAL SELECT (1XX.XX) 4	D DECIMAL SELECT (1XX.X)
DECIMAL SELECT COMMON 5	E DECIMAL SELECT (1.XXX)
DECIMAL SELECT (1X.XXX) 6	F NO CONNECTION
DISPLAY TEST 7	H DISPLAY DISABLE
CLOCK INPUT 8	J CLOCK OUTPUT
BUSY OUTPUT 9	K +5VDC SYSTEM POWER INPUT
RUN / HOLD 10	L POWER GROUND INPUT


CAUTION: This meter employs high impedance CMOS inputs. Although internal protection has been provided for several hundred volt overloads, the meter will be destroyed if subjected to the high kilovolts of static discharge that can be produced in low humidity environments. Always handle the meter with ground protection.

Pin A - Reference Output: Internal precision voltage reference. Standard output is 1.0000V, adjustable $\pm 5\%$ by R10 potentiometer. The primary reference voltage of the PM-45L is trimmed by potentiometer R20 to obtain the optimum compensated temperature coefficient.

Pin B - Signal High Input: Pin B is the signal high input for all input signal ranges. Optional 200mVDC, 20VDC and 200VDC ranges are available from Texmate.

Pin C - Analog Common: Pin C is signal return common for differential inputs, ratiometric inputs, or external reference inputs. For single-ended inputs, Signal Low Input Pin 3 must be connected to Analog Common Pin C. To minimize any errors caused by ground loop currents, it is recommended that this connection be made as close as possible to the input signal source ground.

Pins D, E, 4 and 6 - Decimal Select: Decimal points may be displayed as required by connecting the appropriate pin to Decimal Select Common Pin 5. Any number of decimal points can be turned ON at the same time. An open circuit will turn off the decimal points.

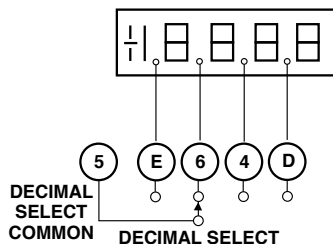

Pin F - No Connection: No connection has been made to this pin.

Pin H - Display Disable: If this pin is connected to the Power Ground Pin L, the display is disabled and the reading is blanked out. Only the polarity sign stays on to indicate that power is being applied to the meter. For normal operation, this pin is left unconnected.

Pin J - Clock Output: A quartz crystal controlled oscillator provides a stable clock signal output of 100KHz.

Pin K - +5VDC System Power Input: The meter requires a low ripple DC power supply of 4.5V to 5.5VDC at 225mA. The positive terminal of the power supply should be connected to Pin K.

Pin L - Power Ground Input: Negative terminal of the +5VDC power supply should be connected to Pin L. All digital signals, Display Test, and Run/Hold should be returned to this ground point. Pin L is internally connected to Analog Common Pin C.

Pin 1 - Reference Input: Reference voltage input for A to D converter. Normally supplied from Pin A. An external reference source referred to Pin C may be used instead. Pin 1 may be used as an input for ratiometric measurements. Minimum usable voltage is 0.1VDC, with a maximum voltage of 4.0V. For ratiometric operation; Displayed Reading = $10000 \times (\text{Signal Input Voltage} \div \text{Reference Input Voltage})$. The maximum signal input voltage is $\pm 4V$. Higher voltages must be scaled down through a voltage divider installed by Texmate. Reference input voltage must remain stable during measurement period.

Pin 2 - Offset Voltage Output: 0 to +2.490V is available with the addition of a 3/4", 20K Ω to 100K Ω pot installed by Texmate. The offset voltage is derived from the internal precision voltage reference and is available for applications requiring a zero offset such as 4~20mA receiver and temperature measurements.

Pin 3 - Signal Low Input: Pin 3 is the signal low input for all input signals. Optional 200mVDC, 20VDC and 200VDC ranges are available from Texmate.

Pin 5 - Decimal Select Common: Pin 5 serves as a common for the Decimal Select Pins D, E, 4 and 6. To turn on any required decimal point, connect the appropriate Decimal Select Pin to Decimal Select Common Pin 5.

Pin 7 - Display Test: If this pin is connected to the Power Ground Pin L, all segments of the display come on and 18888 is displayed. For normal operation, this pin is left unconnected.


Pin 8 - Clock Input: Normally Pin 8 is connected to the 100KHz clock output from Pin J, thereby providing the optimum rejection of 50/60Hz noise. For inputs below 100KHz or above 300KHz, contact Texmate for custom configuration.

Pin 9 - Busy Output: Pin 9 goes to logic "1" at the beginning of the signal integration and remains at "1" until the first clock pulse after the zero-crossing is detected at the completion of deintegration. In addition to its use as a Busy or End-of Conversion signal, the output on Pin 9 can be used in some control applications to indicate the digital reading of the meter as a function of time or clock pulses. Displayed Reading is equal to the total clock pulses during Busy less 10,000, or total elapsed time during Busy, less 100 milliseconds if the clock frequency is 100KHz.

Pin 10 - Run/Hold: If Pin 10 is left open (or connected to +5VDC System Power Input Pin K for logic control purposes), the meter will operate in a free-running mode. Under control of the internal 100KHz quartz crystal clock, readings will be updated every 400mS (2.5 per sec.). If Pin 10 is connected to Power Ground Input Pin L (logic low), the meter will continue the measurement cycle that it is doing, then latch up and continuously hold the reading obtained as long as Pin 10 is held low. If Pin 10 is released from Pin L (Pin 10 then goes logic high) for more than 300ns and returned to Pin L (logic low), the meter will complete one conversion, update, and then hold the new reading. For all practical purposes, a manually actuated normally closed pushbutton switch will provide sufficient timing for "press-to-update" operation.

"NOTE: PM-45L meters are intended for use by skilled end users and support "DIY" features that may permanently modify the product involved. Texmate CAN NOT provide detailed technical support or use notes beyond what is covered in our documentation and warranty coverage will only apply to meters in an unmodified condition. Repair, maintenance, and calibration through Texmate are available as a paid service through our website or by sending an RMA request to "techsupport@texmate.com"."

Component Layout

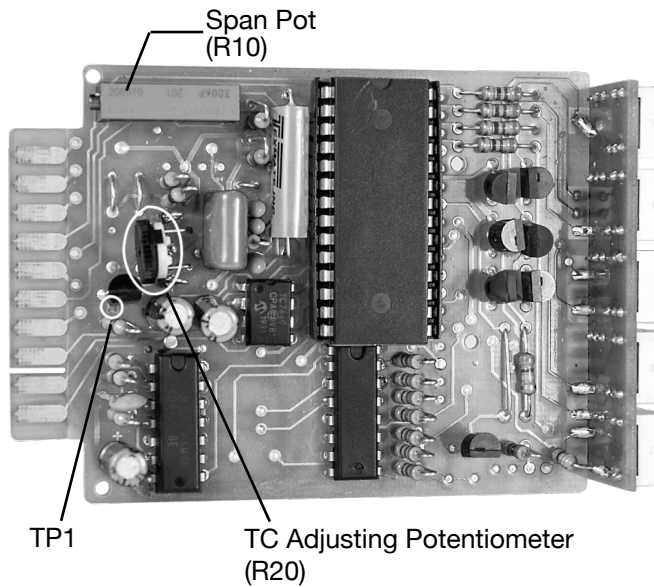

Calibration Procedure


VOLTAGE CALIBRATION 2V RANGE

After making the appropriate connections as shown in the instructions, apply power to the meter. Then, with a precision DC reference source, apply +1.9000VDC between the Signal High Input Pin B and the Signal Low Input Pin 3. Adjust R10 potentiometer (on left side as viewed from rear) until the display reads +1.9000V. NOTE: For other ranges, the voltage applied should be similarly proportionate to the particular full scale voltage.

TEMPERATURE COEFFICIENT COMPENSATION


A potentiometer (R20) is factory calibrated so that the output at Test Point 1 (TP1) referred to Analog Common Pin C, is 2.490V which provides the optimum temperature coefficient for the average operating temperature range. For some applications, the user may wish to adjust the meter's temperature coefficient. Turn R20 clockwise to obtain a negative temperature coefficient (higher voltage and positive TC of primary ref.), and counter clockwise to obtain a positive temperature coefficient (lower voltage and negative TC of primary ref.). NOTE: Any adjustments of the primary reference voltage will necessitate a recalibration of the meter.

Signal Conditioning Components

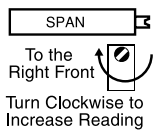

SPAN Potentiometer (Pot)

The SPAN pot is on the right side of the display. Typical adjustment is 20% of the input signal range.

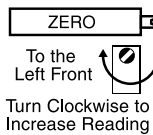

ZERO Potentiometer (Pot) optional

The ZERO pot is on the right side of the SPAN Pot. Typically it enables the displayed reading to be offset ± 500 counts.

Optional PCB Edge Connector


PCB Edge Connector

A standard 20-pin edge connector (two rows of 10 pins on 0.156" centers) is used to connect the PM-Series of meters. Order part no. CN-L10.




PM Case Dimensions and Panel Cutouts


PANEL CUTOUT

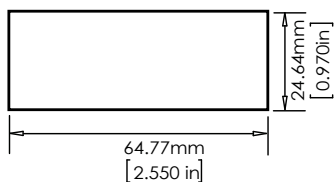



FRONT VIEW

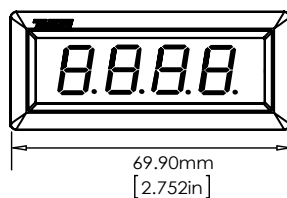

SIDE VIEW

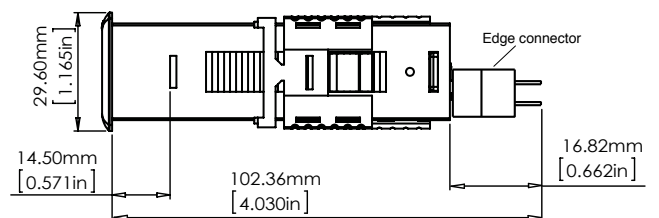

TOP VIEW

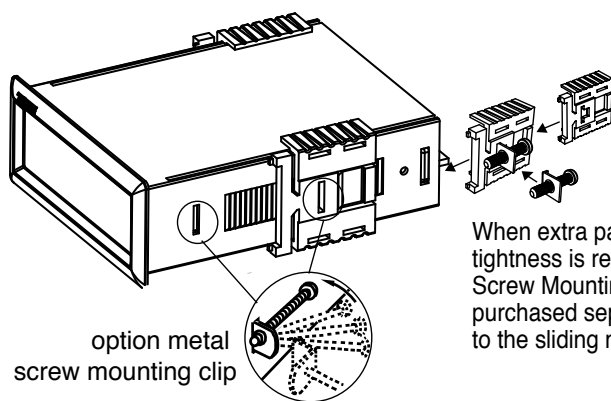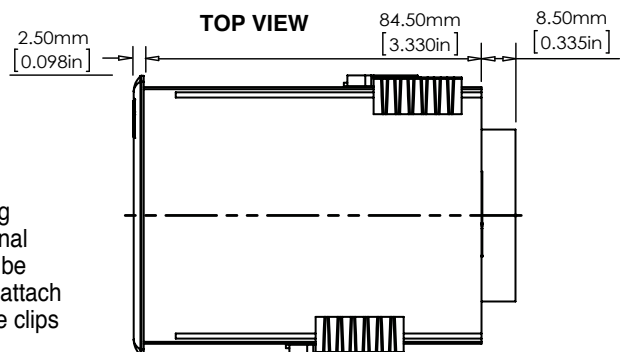

When extra panel mounting tightness is required, optional Screw Mounting Clips can be purchased separately and attach to the sliding mounting side clips

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.



1934 Kellogg Ave. Carlsbad, CA 92008
Tel: 1-760-598-9899 • USA 1-800-839-6283 • That's 1-800-TEXMATE
• Email: orders@texmate.com • techsupport@texmate.com
• Web: www.texmate.com

PM-45L Technical Manual Copyright © 2022 Texmate Inc. All rights reserved. Published by: Texmate Inc. USA. Information in this Technical Manual is subject to change without notice due to correction or enhancement. The information described in this manual is proprietary to Texmate, Inc. and may not be copied, reproduced or transmitted, in whole or in part, in connection with the design, manufacture, or sale of apparatus, device or private label product without the express written consent of Texmate, Inc.

Copyright © 2022 Texmate Inc. All Right Reserved.