

# **||EXMATE**


## **SB-B31**

## 4 to 20mA Loop Powered 31 Segment Bargraph in a 1/16 DIN Case

#### **General Features**

- Elegantly simple 4 to 20mA loop powered bargraph.
- Low loop drop of only 4V.
- Needs no external power supply.
- Choice of red, green or red/green color options.
- Easy to calibrate with ZERO and SPAN potentiometers.
- Customized faceplates available.
- Compact short depth 96 X 24mm case.
- Can be stacked for multiple meter mounting.

## **Typical Application Connections**

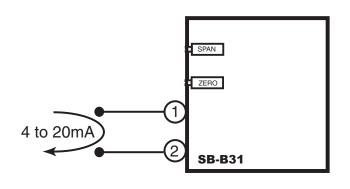

## Compatibility

The SB-B31 bargraph has a matching DIN case style that is complementary to the Lynx, Leopard and Tiger family of meters. The SB-B31 is the economical solution for displaying 4 to 20mA current loops on a bargraph display.



#### **Specifications**

Input Configuration: ......Single ended

Full Scale Range: ......4 to 20mA to read 0 to full scale

Input Impedance: ...... Approximately  $200\Omega$ 

Maximum 4V loop drop at 20mA input

A/D Converter: .....Flash converter

Accuracy: ......1% of full scale

Temperature Coefficient:...200ppm/°C (typical)

Warm Up Time:.....Instantly reads to specified accuracy

Conversion Rate: .....Instantaneous flash conversion

**Display:**.....Thirty-one 0.20" X 0.06" (5.08mm X

1.52mm) bar segments

Over-range Indication: .... All bars flash

Power Supply: ......Powered from 4 to 20mA signal

Operating Temperature: ..-10°C to 60°C

Storage Temperature: .....-20°C to +70°C

Relative Humidity: ......95% (non condensing)

Case Dimensions: ......Bezel: 24X96 mm (0.95" X 3.78")

Depth behind bezel: 56.5 mm (2.23") Plus 27 mm (1.06") for Push-on connector or plus 17.5 mm (0.69") for Edge connector

Weight:.....90.72 gms (3.2 oz)

136.1 gms (4.8 oz) when packed

## Other Signal Powered Meters

**CM-35XT** . . . . . . . . . 3.5 digit LCD, Loop Powered, 4-20mA (1.0.0.0.0)


CM-35XTL . . . . . . . . 3.5 digit LCD, 1 Volt Drop, Loop Powered, 4-20mA (1.0.0.0.0)

**SD-50XTOT** . . . . . . Loop Powered Totalizer

**SD-50XTOTSQ** ....Loop Powered Totalizer with Square Root Function 


**SP-35XMV** .......3.5 digit LCD DCMV Input, 10-100VDC or 18-36VAC Pwr SP-35XRMS . . . . . . 3.5 digit LCD, VAC RMS Signal Pwr, 15.0-199.9VAC/DC

## **Functional Diagram**

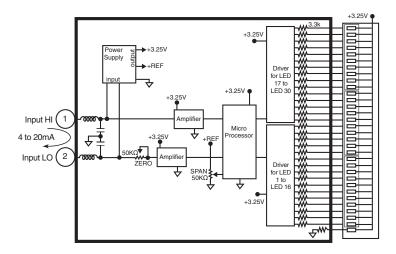

## **Connector Pinouts**

#### **REAR VIEW OF CASE AND CONNECTOR**

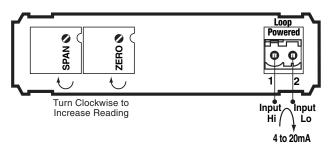


Connectors are supplied by Texmate with the bargraph.

**Pin 1 - Current Loop High Input**: The 4-20mA current loop is applied to Pin (1) and returned from Pin (2). If reverse polarity is applied no damage will occur; however the meter will not operate (this condition should not be maintained for extended periods). The maximum loop drop is 4V.


**Pin 2 - Current Loop Low Return**: The 4-20mA current loop is returned from Pin (2). At 4mA the bargraph has one segment ON. At 20mA the bargraph has all segments ON. The maximum loop drop is 4V.

#### TO REMOVE REAR COVER



Release Bottom Catch with a small flat blade, and lever outwards.

## **Component Layout**

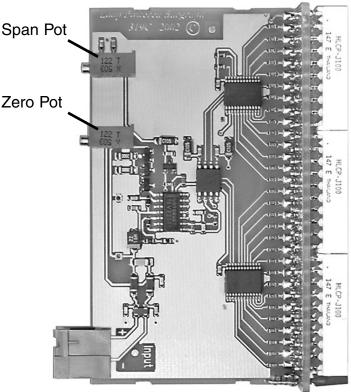

## Signal Conditioning Components



#### SPAN Potentiometer (Pot)

The 15 turn SPAN Pot is on the left side (as viewed from the back of the meter). Typical adjustment is 100% of the input signal range.



#### **ZERO** Potentiometer (Pot)

The ZERO Pot is to the right side (as viewed from the back of the meter). It enables the Digital Display Span to be offset 50% of the input signal range.

## **Calibration Procedure**

Apply an input of 4mA. Adjust the ZERO pot until the extreme left or bottom LED is ON. Apply 20mA input. Adjust the SPAN pot until all LEDs are ON. The bargraph is now calibrated.


#### Power Supply

The SB-B31 Bargraph is powered from the 4 to 20mA input signal. NO EXTERNAL POWER SUPPLY IS REQUIRED. The maximum loop drop is 4V.

#### **Connector**

## Input Power Screw Terminal Plug



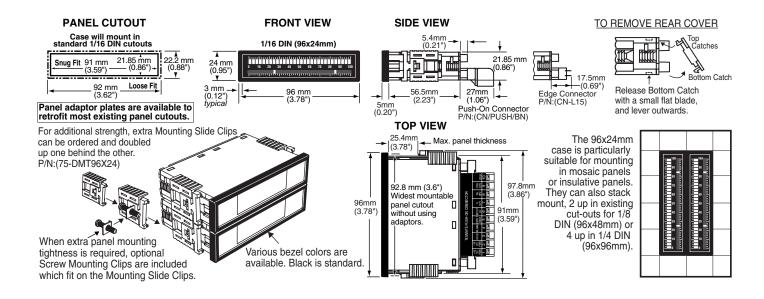

#### **Ordering Information**

#### Standard Options for this Model Number

Part Number . . Description

#### **BASIC MODEL NUMBER**

SB-B31 . . . . . . . . Red 31 Seg. Bargraph, 4-20mA Loop Powered

**DISPLAY** 

SB-VERT/RED . Vertical Red (standard)

SB-HORZ/RED . . . Horizontal Red LED option SB-VERT/GRN . . . . Vertical Green LED option SB-HORZ/GRN . . . Horizontal Green LED option

SB-MULTI ......Red, green or amber LEDs (10 seg. increments)

#### **Special Options and Accessories**

Part Number . . Description

#### **ACCESSORIES**

75-DMTC96X24 . . . Side Slide Brackets, extra set (96x24mm only)
75-DBBZ96X24 . . . Black Bezel for 96x24mm Case, BN and AM series
DN.CAS96X24 . . . Din Case 96 X 24 Short Depth Plus Accessories
93-PLUG2P-DP . . . Extra Screw Terminal Conn., 2 Pin Power Plug
OP-MTLCLIP . . . . . Screw Mounting Clips (2 pc) to screw tighten slide brackets

75-DTP96X24 . . . . . Black Metal Trim Plate (96x24mm Case) 1 Meter 75-DTP2X9624 . . . . . Black Metal Trim Plate (96x24mm Case) 2 Meters 75-DTP3X9624 . . . . . Black Metal Trim Plate (96x24mm Case) 3 Meters

Prices subject to change without notice.

#### WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

#### USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.

## TEXMATE INC

1934 Kellogg Ave. • Carlsbad, CA 92008
Tel: 1-760-598-9899 • USA 1-800-839-6283 • That's 1-800-TEXMATE
Email:orders@texmate.com • Web: www.texmate.com

## For product details visit www.texmate.com

Local Distributor Address

Copyright © 2021 Texmate Inc. All Rights Reserved