


DUAL 3-WIRE POTENTIOMETER SMART MODULE

DUAL 3-WIRE POTENTIOMETER

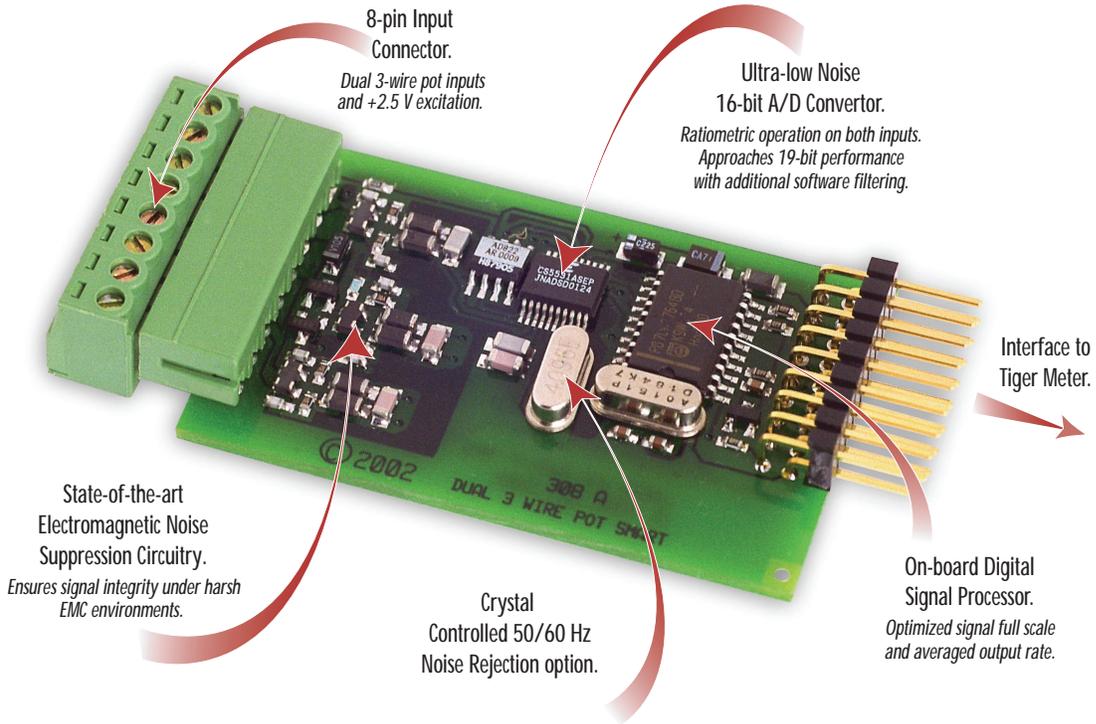

The interface solution for linear position transducers.

With dual inputs, the ISR3 and ISR4 can excite and perform ratiometric data conversion on two linear potentiometers. Combined with the Tiger 320 Series operating system, this smart module is the design answer for industrial and process control applications involving accurate and continuous linear displacement and/or rate-of-change measurements at up to 100 Hz averaged output rate.

Input Module
Order Code Suffix

ISR3 (50 Hz Rejection)

ISR4 (60 Hz Rejection)



Hardware Module Specifications	
A/D Converter	Dual channel ultra-low noise 16-bit A/D with effective 19-bit resolution in post processing software.
Input Sensitivity	5 μ V/count full scale maximum.
Zero Drift	\pm 40 nV/ $^{\circ}$ C typical.
Span Drift	\pm 5 ppm/ $^{\circ}$ C of full scale maximum.
Non-linearity	\pm 0.003% of full scale maximum.
Input Noise	30 μ Vp-p typical at 1 Hz output rate.
Potentiometer Inputs	Dual, separate + 2.5 V excitation (10 mA). ratiometric referenced to A/D.
Potentiometer Resistance	1 kilohm to 100 kilohm (typical).
Resolution	1:100,000 counts of full scale.


Software Module Features	
Output Rates	1-20 Hz, POT 1 and POT 2. 50-100 Hz, POT 1 only.
Gain Select	Optimized for +2.5 Volt excitation.
Frequency Select	ISR3 50 Hz/ISR4 60 Hz noise rejection (Software selectable).

Some Relevant Tiger 320 Series Operating System Features	
	Setpoint Timer Functions.
	Setpoint Register Reset and Trigger Functions.
	On-demand Calibration.
	Macro Compiler for PLC Functions.
	32-Point Linearization.
	Totalizer and Serial Printing.

INPUTS

★ Dual Smart Precision Resistance

Connector Pinouts

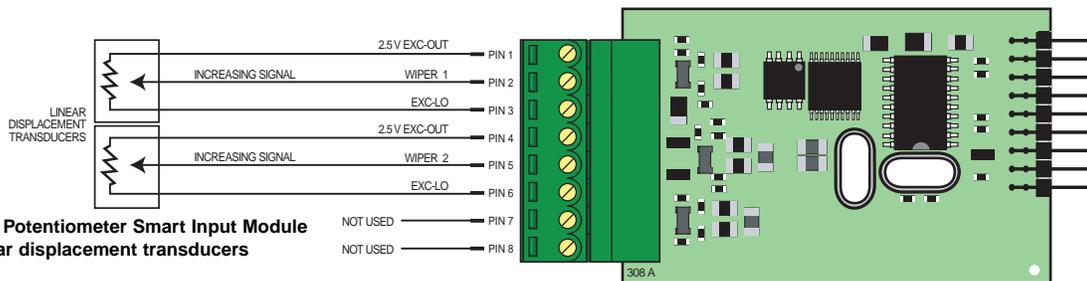

ISR3/ISR4 Dual 3-wire Potentiometer Smart Input Module connected to two linear displacement transducers

Smart Setup Registers


The meter has three **smart setup registers** to configure all smart input modules. The reference voltage and output rate for both input signals are configured in **smart register 1**.

Potentiometer signals, POT 1 and POT 2, are then individually software selected for a combination of two meter channels. Either signal can be selected for Channel 1 via Code 2, Channel 2 via Code 4, Channel 3 via Code 5, and Channel 4 via Code 6.



Note both signals cannot be selected for the same channel.

Smart Setup Register – Operational Flow Diagram

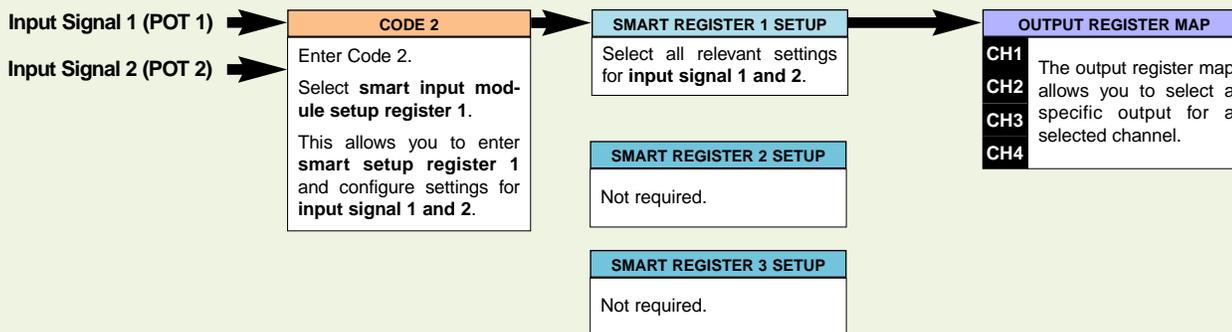

Programming Procedures

The following programming procedures cover all the steps required to configure smart input module ISR3 and ISR4. Steps 1 to 5 describe how to select the **line frequency rejection** and the **output rate** through smart register 1.

Steps 7 to 12 describe how to select the output registers for Channels 1, 2, 3, or 4 as required.

1 Press the **[P]** and **[↑]** buttons at the same time to enter the main programming mode.

2 Press the **[P]** button three times to enter Code 2. Set Code 2 to [X77].

Cod_2 X77

This setting enters the **smart register 1** code setup menu.

FIRST DIGIT
TIGER PROCESSING RATE
0 10 Hz
1 10 Hz
2 100 Hz
3 100 Hz

SECOND DIGIT
MEASUREMENT TASK
0 Voltage, Current
1 TC (3rd digit selects type of TC)
2 RTD 3-wire (3rd digit selects type of RTD)
3 RTD 2- or 4-wire (3rd digit selects type of RTD)
4 Frequency
5 Period
6 Counter
7 Smart Input Module

THIRD DIGIT
OUTPUT REGISTER MAP
0 Averaged POT 1
1 Averaged POT 2
2 Rate-of-change POT 1
3 Rate-of-change POT 2
4 -
5 -
6 -
7 Smart input module register 1 code setup



Note the output register map is different for each smart input module.

3 Press the **[P]** button.

SP7E1 000

This menu provides settings unique to **smart register 1** of the ISR3 and ISR4 input module.

FIRST DIGIT
REFERENCE VOLTAGE
0 -
1 60 Hz rejection (ISR3 default setting)
2 -
3 50Hz rejection (ISR4 default setting)

SECOND DIGIT
Not Relevant

THIRD DIGIT
OUTPUT RATE
0 1 Hz averaged
1 5 Hz averaged
2 10 Hz averaged
3 20 Hz averaged
4 50 Hz averaged*
5 100 Hz averaged*
6 -
7 -

* POT 1 only, POT 2 is inactive.

- 4 Using the buttons, select the **line frequency rejection** and the **output rate common to both input signals**.

Note, POT 1 has two high speed output rates that are **not** available to POT 2.

- 5 Press the **P** button. The display returns to [Cod_2] [X77].

- 6 Using the button, reset the 3rd digit to zero [X70] to leave the smart register 1 menu.
Note, leaving the 3rd digit as 7 means the display constantly cycles between [Cod_2] and [SMt1].

Select a Channel

Select the output register for the required channels

- 7 Press the **P** and button at the same time again to re-enter the main programming mode, then press the **P** button three times to enter Code 2.

- 8 To select **channel 1**, set Code 2 to [X7X]. Select the required processing rate for **CH1** in the 1st digit and the required output register map settings in the 3rd digit.

CH1

FIRST DIGIT	THIRD DIGIT
TIGER PROCESSING RATE 0 10 Hz 1 10 Hz 2 100 Hz 3 100 Hz	OUTPUT REGISTER MAP 0 Averaged POT 1 1 Averaged POT 2 2 Rate-of-change POT 1 3 Rate-of-change POT 2 4 - 5 - 6 - 7 Smart input module register 1 code setup

Note the output register map is different for each smart input module type.

- 9 To select **channel 2**, set Code 4 to [0X0]. Select the required output register map settings for **CH2** in the 2nd digit.

CH2

FIRST DIGIT	SECOND DIGIT										
MEASUREMENT TASK 0 Voltage, Current 1 TC (type as per 2nd digit) 2 RTD (type as per 2nd digit) 3 Second Digital Input Channel (type as per 2nd digit)	FOR VOLTAGE & CURRENT 0 Channel 2 Disabled 1 Direct (no post processing) 2 Square Root of Channel 2 3 Inverse of Channel 2 4 Output Register 1 (smart module)* 5 Output Register 2 (smart module)* 6 Output Register 3 (smart module)* 7 Output Register 4 (smart module)*										
	<i>*Note: The logic for CH2 is not the same as CH1, CH3, or CH4. The 1st and 3rd digits must both be set to 0. Selecting 040 to 070 in the 2nd digit of Code 4 directly selects one of the following settings in the output register map (3rd digit):</i>										
	<table border="1"> <thead> <tr> <th>2nd Digit</th> <th>Output Register Map</th> </tr> </thead> <tbody> <tr> <td>4 selects</td> <td>0 Averaged POT 1</td> </tr> <tr> <td>5 selects</td> <td>1 Averaged POT 2</td> </tr> <tr> <td>6 selects</td> <td>2 Rate-of-change POT 1</td> </tr> <tr> <td>7 selects</td> <td>3 Rate-of-change POT 2</td> </tr> </tbody> </table>	2nd Digit	Output Register Map	4 selects	0 Averaged POT 1	5 selects	1 Averaged POT 2	6 selects	2 Rate-of-change POT 1	7 selects	3 Rate-of-change POT 2
2nd Digit	Output Register Map										
4 selects	0 Averaged POT 1										
5 selects	1 Averaged POT 2										
6 selects	2 Rate-of-change POT 1										
7 selects	3 Rate-of-change POT 2										

- 10 To select **channel 3**, enter Code 5 and select the required output register map settings for **CH3** in the 3rd digit.

CH3

FIRST DIGIT	THIRD DIGIT
CH3 POST PROCESSING 0 Direct Display of Input (no processing) 1 Square Root of Channel 3 2 Inverse of Channel 3 3 Meters with 4 kB memory NO Linearization Meters with 32 kB memory 32-point Linearization of CH3 using Table 3 <i>Note: All linearization tables are set up in the Calibration Mode [24X].</i>	OUTPUT REGISTER MAP 0 Averaged POT 1 1 Averaged POT 2 2 Rate-of-change POT 1 3 Rate-of-change POT 2 4 - 5 - 6 - 7 Smart input module register 1 code setup

Note the output register map is different for each smart input module type.

- 11 To select **channel 4**, enter Code 6 and select the required output register map settings for **CH4** in the 3rd digit.

CH4

Press the **P** button to save the settings.

FIRST DIGIT	THIRD DIGIT
CH4 POST PROCESSING 0 Direct Display of Input (no processing) 1 Square Root of Channel 4 2 Inverse of Channel 4 3 Meters with 4 kB memory NO Linearization Meters with 32 kB memory 32-point Linearization of CH4 using Table 4 <i>Note: All linearization tables are set up in the Calibration Mode [24X].</i>	OUTPUT REGISTER MAP 0 Averaged POT 1 1 Averaged POT 2 2 Rate-of-change POT 1 3 Rate-of-change POT 2 4 - 5 - 6 - 7 Smart input module register 1 code setup

Note the output register map is different for each smart input module type.

- 12 Press the **P** and buttons at the same time to return to the operational display.

- 13** Steps 4 and 5 of the Example Setup Procedure describe how to calibrate channel 1 and channel 2 to display the x (CH1) and y (CH2) axes. Steps 6 and 7 describe how to set the resolution for CH1 and CH2.

Example Setup Procedure

A milling machine bed has servo operation on the x and y axes. Linear displacement potentiometers 1 and 2 provide positional information in the x and y directions respectively, and feedback for automatic machine operations at up to 15 Hz response. The maximum bed travel in the x axis is 500 mm and the y axis is 300.5 mm. The required resolution is 0.1 mm.

A Tiger 320 Series 2-display meter with an ISR3 dual 3-wire potentiometer smart input module installed shows the milling bed position. The meter also allows the operator to zero the x, y coordinates, establish setpoints for machining operations, and many other linear translation operations.

- 1** **Select 50 Hz frequency rejection and a 20 Hz averaged output rate :**
 In **[CODE 2]** select **[X77]** then press the **[P]** button.
 Display toggles between **[SM1] [000]**
 Set **[SM1]** to **[3X3]**
- 2** **Select channel 1 for the x axis to read the averaged POT 1 output:**
 In **[CODE 2]** reset to **[X70]** then press the **[P]** button.
- 3** **Select channel 2 for the y axis to read the averaged POT 2 output:**
 In **[CODE 4]** reset to **[050]** then press the **[P]** button.
- 4** **Calibrate channel 1 for the x axis:**
 In **[CAL]** mode select **[111]** then press the **[P]** button.
 Display toggles between **[Zero] [0]**
 Position the machine bed in the x axis **zero** position, then press the **[P]** button.
 Display toggles between **[SPan] [2500]**
 Use the **[↑] [↓]** buttons to set the span to **[5000]**
 Position the machine bed in the x axis **span** position of 500 mm, then press the **[P]** button.
- 5** **Calibrate channel 2 for the y axis:**
 In **[CAL]** mode select **[112]** then press the **[P]** button.
 Display toggles between **[Zero] [0]**

Position the machine bed in the y axis **zero** position, then press the **[P]** button.

Display toggles between **[SPan] [2500]**

Use the **[↑] [↓]** buttons to set the span to **[3005]**

Position the machine bed in the x axis **span** position of 300.5 mm, then press the **[P]** button.

- 6** **Set the resolution for CH1 to display 0.1 mm:**

In **[CODE 1]** select **[X61]** then press **[P]** button.

Display toggles between **[diSP] [000]**

Set **[diSP]** to **[X06]**

Reset the 2nd digit of Code 1 to either 0, 1, or 2. This allows you to leave this mode.

Press the **[P]** button then the **[P]** and **[↑]** button to return to the operational display.

- 7** **Repeat Step 6 for CH2, setting Code 1 to X62.**

Customer Configuration Settings:

	1st Digit	2nd Digit	3rd Digit
57761			
CH1 [Cod_2]		7	
CH2 [Cod_4]	0		0
CH3 [Cod_5]		7	
CH4 [Cod_6]		7	

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.



995 Park Center Drive • Vista, CA 92081-8397

Tel: 1-760-598-9899 • USA 1-800-839-6283 • That's 1-800-TEXMATE

Fax: 1-760-598-9828 • Email: sales@texmate.com • Web: www.texmate.com

Texmate has facilities in Japan, New Zealand, Taiwan, and Thailand. We also have authorized distributors throughout the USA and in 28 other countries.

For product details visit www.texmate.com

Local Distributor Address