


Tiger 320 Series PROGRAMMING CODE SHEET

Contents

Initial Setup Procedures	2
Tiger 320 Series Code Logic Diagram	4
CALIBRATION MODE	5
CODE 1	6
CODE 2	7
CODES 3 to 5	8
CODES 6 to 9	9
CODE 10	10
SETPOINT PROGRAMMING MODE – SPC_1 to SPC_6 ..	11
Customer Code Settings – Main Programming Mode ..	14
Customer Code Settings – Setpoint Programming Mode ..	17
Commonly Used Registers	18
User Notes	19

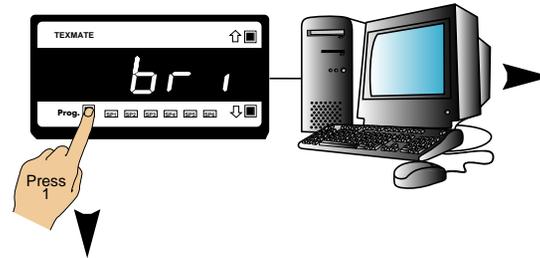

Front panel programming


This programming code sheet (PCS) is a quick reference document that allows you to quickly view the meter's programming codes.

When you become familiar with the meter and the programming code structure, the PCS can be used in place of the user manual.



Note:
All displays shown in this code sheet are for a 5-digit, 7-segment display. 6 or 8-digit and alphanumeric displays will be slightly different.

To configure the meter's programming codes, the meter uses the three right-hand side display digits. These are known as the 1st, 2nd, and 3rd digits and can be seen in the diagram opposite.

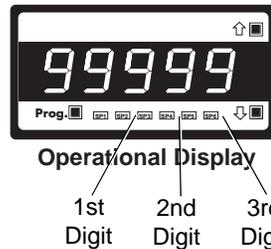

The logic diagram on Page 4 shows the code structure of the Tiger 320 Series meter range. Also, the difference between the E and T version of the Tiger range is described. The diagrams on the following pages show the three-digit settings available for each code.

Programming via PC

Meter configuration utility program

With a serial output module installed, the meter can be fully configured through the **meter configuration utility program**. In addition to all application function settings, the configuration program also provides access to added features such as:

- Code blanking.
- Display text editing.
- Configuration data copying.
- Downloading macros to the meter.

Code blanking

Code blanking blanks out all function codes not required by the application. This means that specific procedures such as recalibration and setpoint reprogramming can be achieved in a few simple steps from the front panel buttons.

- To turn code blanking and macro settings OFF, carry out the **Code Blanking and Macro Check** on Page 3.

Display text editing

This function allows displayed text, such as setpoint titles, to be edited to suit your applications.

For example, a setpoint could be edited to read [TNK_Lo] for tank level low, or [brKof] for brake off.

Configuration data copying

This function allows the current meter configuration settings to be copied and saved for later referral or for restoration.

Macros

Texmate has a growing library of macros to suit a wide range of standard customer applications. Macros can be installed in the meter, via the compiler or configuration program, and run automatically when the meter is powered up.

Tamper-proof settings

All Tiger 320 Series meters have tamper-proof lockout switches to prevent users' configuration settings from being inadvertently changed.

Code blanking is also used (via the PC) to blank out codes not used, making them operator tamper-proof, but leaving selected codes open for operator adjustment.



Programming Tips

- 1) Use the [P] button to step through the codes of the **Main** or **Setpoint** Programming Mode.
- 2) To save a **Main** Programming Mode code setting and return directly to the operational display, press the [P] button and then the [P] and [↑] buttons at the same time.
- 3) To save a **Setpoint** Programming Mode setting and return directly to the operational display, press the [P] button and then the [P] and [↓] buttons at the same time.
- 4) When configuring the three-digit code and setpoint settings, pressing the [↑] and [↓] buttons at the same time increases the displayed parameter in increments of 100 counts.



Initial Setup Procedures

Before configuring the meter, carry out the following meter configuration checks:

- Model and software code version check.
- Code blanking and macro check.

After powering-up the meter, check the model and software code version number and note this below.

Model No:
Software Version No:
Customer ID:
Macro ID:

Model and Software Code Version Check

The meter model and software code version number can be checked at any time while in the operational display using the following procedure.



Programming Tip


The *Model and Software Code Version* checking procedure can be performed at any time without interfering with other configuration settings.

START HERE

MODEL & SOFTWARE CODE VERSION CHECK


Step 1

Press and hold the and buttons

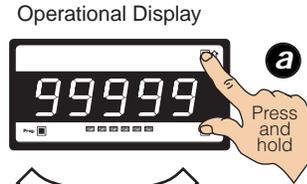


Step 2

While holding both buttons, press the Prog. button then release all three buttons

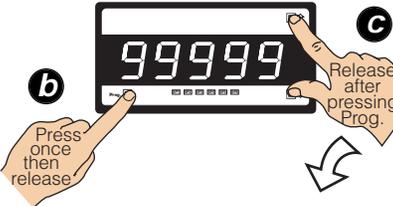

Example

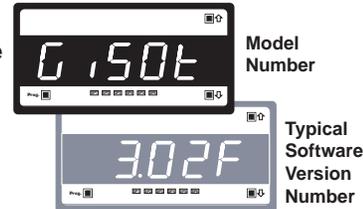

Step 3

The above displays toggles three times before returning to the operational display



Operational Display

Code Blanking and Macro Check

Tiger 320 Series meters have the ability to hide (blank out) all or some programming codes, making them tamper-proof. This can only be done using the Meter Configuration Utility program.

With code blanking turned ON, all main and setpoint codes that have been blanked out during factory programming are hidden, preventing them from being reprogrammed. Any codes that have not been blanked out are still visible and can be reprogrammed.

Turning code blanking OFF means all meter programming codes are visible when you enter the programming modes and can be reprogrammed.

A macro is a set of commands that run automatically when the meter is powered up. Texmate has a growing library of macros to suit a wide range of standard customer applications.

Macros can be installed in the meter at the factory during initial programming or by the customer at some later date. Macros are written and compiled using the Tiger Development System (TDS) compiler program, and loaded into the meter using either the compiler program or the configuration program.

Turning the macro OFF means that the meter will not perform the automatic commands pre-programmed to run with the macro.

Unless requested to blank out all or some programming codes and/or run a macro, Texmate program the meter in the code blanking OFF and macro OFF (default) setting.

To turn the code blanking and macro settings from ON to OFF carry out the following procedure:



Programming Tip


Code Blanking and Macro ON/OFF settings revert to the meter's original configuration settings when the meter is powered off and on.

CODE BLANKING & MACRO CHECK PROCEDURE

START HERE


Step 1

Press and hold the and buttons

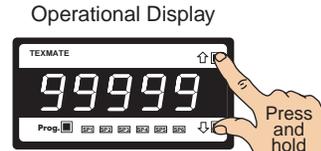


Step 2

While holding both buttons, press the Prog. button.

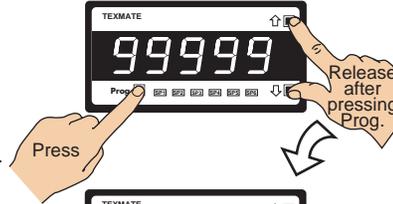


Step 3

Release the the and buttons and hold the Prog. button for approx. 1 sec then release

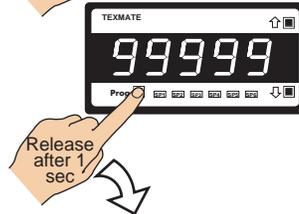


Example

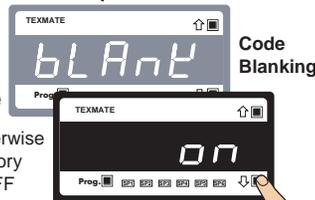

NOTE: Unless otherwise requested, the factory default setting is oFF


Step 4

Press the button to switch code blanking OFF

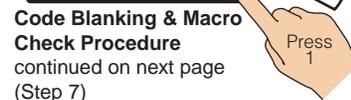

Code Blanking & Macro Check Procedure continued on next page (Step 7)

continued from Step 4

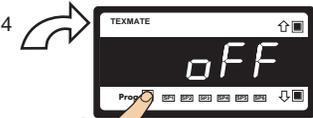

Step 5

Press the Prog. button.



Example



NOTE: Unless otherwise requested, the factory default setting is oFF


Step 6

Press the button to switch the macro OFF



Step 7

Press the Prog. button.

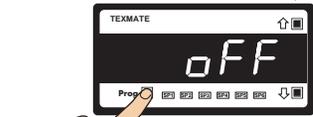

Operational Display

Tiger 320 Series Code Logic Diagram

To enter press the **P** and **↑** buttons at the same time



To enter press the **P** and **↓** buttons at the same time

Main Programming Mode

- [br]** **Display Brightness**
Allows you to adjust the display brightness in a range of 8 settings. 0 being dull, 7 being bright.
- [CAL]** **Calibration Modes for Input and Output**
See Page 2 for code settings to calibrate the meter's input and output signals.
- [Cod_1]** **Code 1 – Display Configuration**
See Page 3 for code settings to configure the setpoint annunciators and other display functions.
- [Cod_2]** **Code 2 – CH1 Measurement Task & Sampling Rate**
See Page 4 for code settings to configure the CH1 measurement task and sampling rate.
- [Cod_3]** **Code 3 – CH1 Post Processing & Serial Mode Functions**
See Page 5 for code settings to configure CH1 post processing and serial mode functions.
- [Cod_4]** **Code 4 – CH2 Measurement Task & 32-point Linearization**
See Page 5 for code settings to configure the second channel (CH2) measurement task and 32-point linearization settings when using dual input signal conditioners.
- [Cod_5]** **Code 5 – CH3 Functions**
See Page 5 for code settings to configure the third channel (CH3) when using triple input signal conditioners.
- [Cod_6]** **Code 6 – CH4 Functions**
See Page 6 for code settings to configure the fourth channel (CH4) when using quad input signal conditioners.
- [Cod_7]** **Code 7 – Result Processing**
See Page 6 for code settings to configure the meter for processing the result of CH1 and CH2.
- [Cod_8]** **Code 8 – Data Logging & Print Mode**
See Page 6 for code settings to configure data logging and data printing using the meter.
- [Cod_9]** **Code 9 – Functions for Digital Input Pins**
See Page 6 for code settings to configure the meter for inputs from external sources through the digital input pins.
- [Cod10]** **Code 10 – Bargraph Setup**
See Page 7 for code settings to configure the meter's bargraph display.



Setpoint Programming Mode

Setpoint Activation Values Mode

Enter these menus to set setpoint (SP) activation values

- [SP_1]** **Setpoint 1** Default setting = 18000
- [SP_2]** **Setpoint 2** Default setting = -18000
- [SP_3]** **Setpoint 3** Default setting = 5000
- [SP_4]** **Setpoint 4** Default setting = -5000
- [SP_5]** **Setpoint 5** Default setting = 10000
- [SP_6]** **Setpoint 6** Default setting = -10000

Setpoint & Relay Control Settings Mode

Enter these menus to configure SP control settings

- [SPC_1]** **Setpoint 1** →
- [SPC_2]** **Setpoint 2** →
- [SPC_3]** **Setpoint 3** →
- [SPC_4]** **Setpoint 4** →
- [SPC_5]** **Setpoint 5** →
- [SPC_6]** **Setpoint 6** →

The *Setpoint and Relay Control Settings* diagram on Pages 8, 9, and 10 shows the three digit configuration settings that are applied individually to each setpoint.



E/T Versions of Tiger 320 Series Programmable Meter Controller

Tiger 320 Series Programmable Meter Controllers (PMCs) come in two versions: the economy E version, or the top-of-the-line T version.


The standard E version comes with 4 kilobits of EEPROM installed, whereas the standard T version comes with 32 kilobits of EEPROM installed. Also, the T version can have a macro installed.

The standard 4-kilobit E version can be upgraded to 32 or 512 kilobits. The standard 32-kilobit T version can be upgraded to 512 kilobits. The amount of EEPROM installed in the controller determines the range of functions it is capable of performing. The following table lists the functions that require specific amounts of memory.

Version	Memory (kilobits)	Functions	Remarks
E	4 (standard)	1 linearization table	Table 1 is available to be applied to channels 1 to 4 and result.
	32	4 linearization tables	Tables 1 to 4 are available to be applied to channels 1 and 2 and result.
			Table 3 can be applied to channel 3.
			Table 4 can be applied to channel 4.
			All four tables can be cascaded to form a single 125-point linearization table available to be applied to channels 1 and 2 and result.
	512	Data logging	With 512 kilobits installed, the controller can perform data logging functions along with complete linearization functionality. With a real-time clock installed, date and time stamps can be included.
T	32 (standard)	4 linearization tables	As for E version with 32 kilobits installed.
		Macro programming	A macro can be programmed to suit a user's logic control application.
	512	Data logging	As for E version with 512 kilobits installed, but with macro programming functionality available.


CALIBRATION MODE

This is the default 3rd digit box. If not pointing to another 3rd digit box, all 2nd digit settings should be regarded as pointing to here.

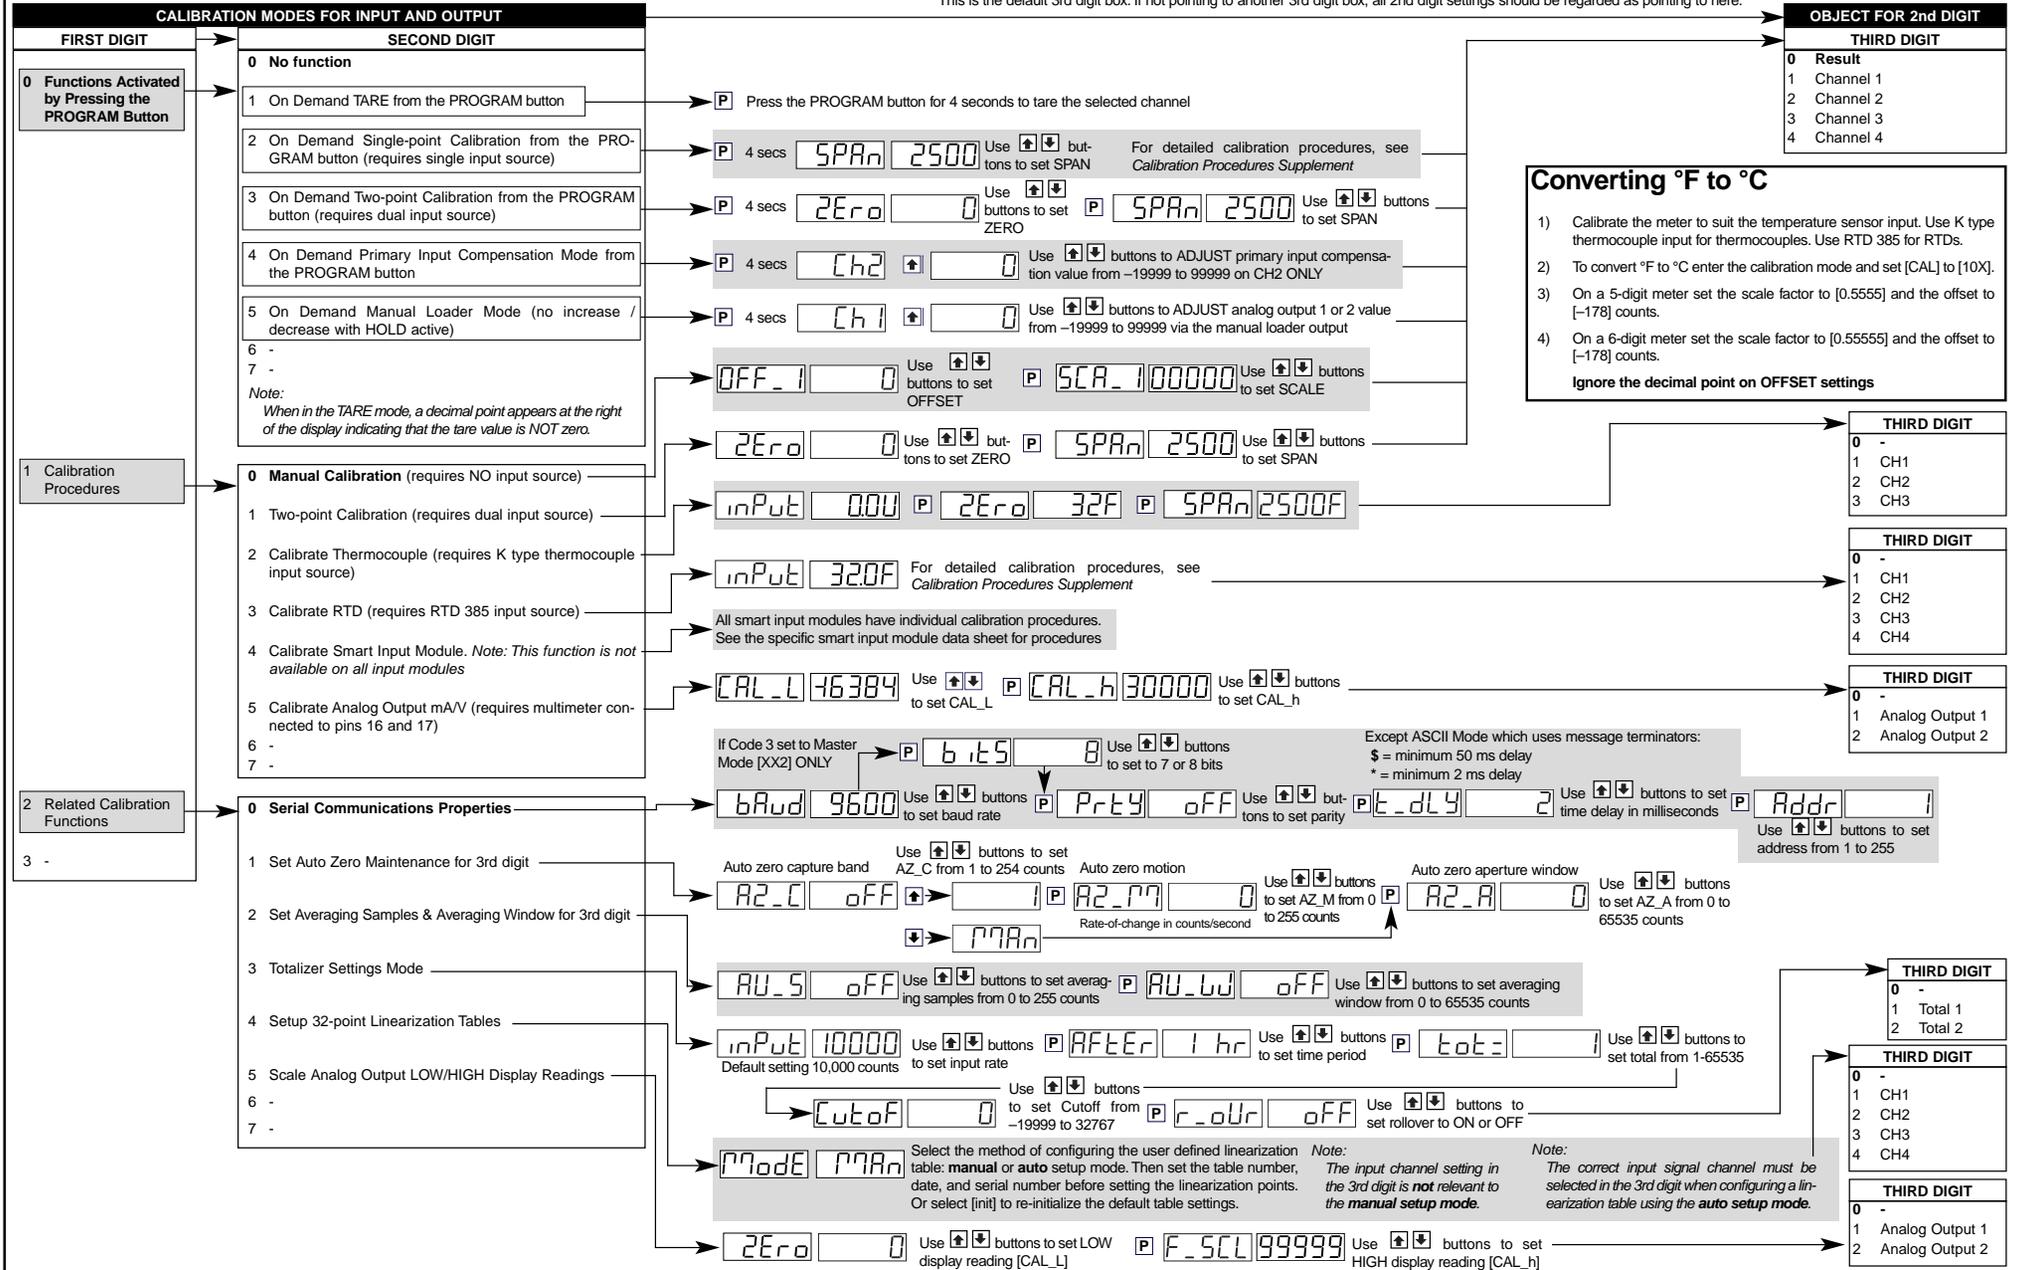

CODE 1

FIRST DIGIT	SECOND DIGIT	THIRD DIGIT
CODE 1 – DISPLAY CONFIGURATION		
FRONT PANEL ANNUNCIATORS 0 ON when Setpoints are ON (relay energized) 1 ON when Setpoints are OFF (relay de-energized) 2 Always OFF. See Note 1 3 LED SP1 ON indicates RISING signal trend. LED SP2 ON indicates FALLING signal trend.	DISPLAY FUNCTIONS 0 Normal Display Mode (i.e. operational display shows selected register)(updates every 0.5 seconds) 1 Manual Loader Mode (Direct display). See Note* 2 Update at controlled output rate selected in Code 2 3 - 4 - 5 Select data source as per 3rd digit. See Note 4 6 Select display format as per 3rd digit. See Note 4 7 Select text character as per 3rd digit. See Note 4	SELECT DATA SOURCE FOR 0 Primary Display 1 Second Display. See Note 2 2 Third Display. See Note 2 3 Peak/Valley 4 Analog Output 1 5 Analog Output 2 (under development) 6 Totalizer 1 7 Totalizer 2
	SELECT DISPLAY FORMAT FOR 0 Result 1 Channel 1 2 Channel 2 3 Channel 3 4 Channel 4 5 Default Display 6 Total 1 7 Total 2	SELECT TEXT CHARACTER FOR 0 Result 1 Channel 1 2 Channel 2 3 Channel 3 4 Channel 4 5 Default Display 6 Total 1 7 Total 2

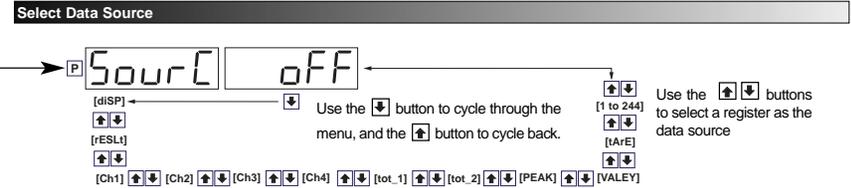


DISPLAY FORMAT MODE

Program the three digits to the required display function mode

FIRST DIGIT	SECOND DIGIT	THIRD DIGIT
LAST DIGIT ROUNDING 0 No rounding 1 Rounding by 2's 2 Rounding by 5's 3 Rounding by 10's	DISPLAY UNITS 0 Decimal 1 24-hour clock mode Hours: Minutes:Seconds (6-digit version only) 2 12-hour clock mode (12:30 am is displayed as 12:30A. 12:30 pm is displayed as 12:30P) 3 24-hour clock mode Days: Hours:Minutes (6-digit version only) 4 - 5 - 6 - 7 Octal	DECIMAL POINT PLACEMENT 0 No decimal point 1 XX.XX.XX (6 or 8-digit version only) 2 X.XXXXX (6 or 8-digit version only) 3 X.XXXXX 4 X.XXX 5 X.XX 6 X.X 7 Decimal Point set from the rear (X.XXXXXX to XXXXXXX). See Note 3. Also See Note 4

Note:
 Selecting 1, 2, or 3 in the 2nd digit of this mode configures the display of the selected channel as a clock.

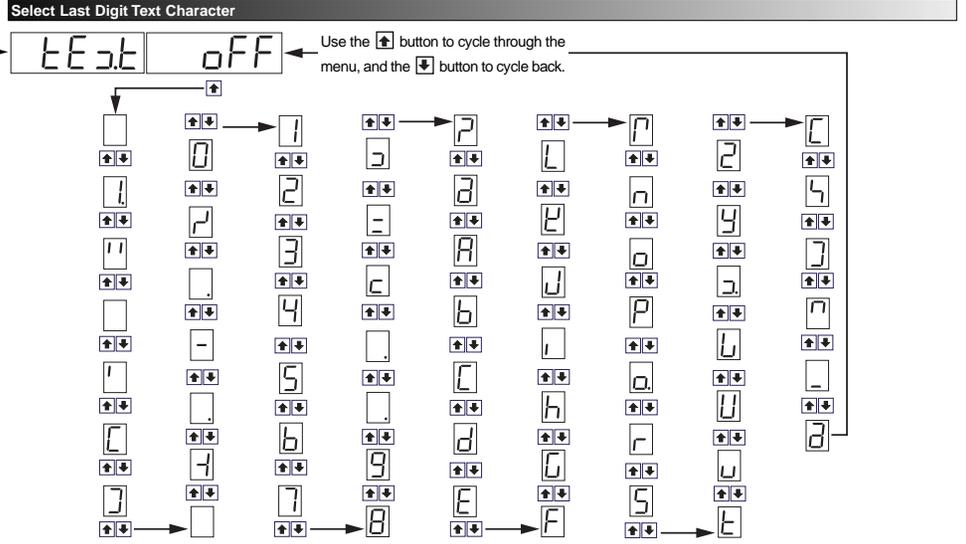

Note:*
 For the Manual Loader Mode (Direct Display) to work, with Code 1 set to [X54] the data source for the analog output (1 or 2) must be set to [diSP].
 Operating range upper and lower limits can be set for the manual loader mode.
 The setpoint activation values for setpoint 5 becomes the upper limit and setpoint 6 becomes the lower limit.
 When either the direct display or on demand manual loader mode is programmed into the meter, the values for setpoint 5 and setpoint 6 are activated as upper and lower limits.

See Analog Output Supplement for further details.

Note 1:
 LED annunciators are always off, except when the meter is in single channel VOLTAGE or CURRENT mode and Code 3 = [X6X], or Code 7 = [X6X] in which case the LEDs indicate which 32-point table has been selected from the rear pins (SP1 = Table 1, SP2 = Table 2, SP3 = Table 3, SP4 = Table 4).

Note 2:
 These options are only for use with meters that have more than one display. With bargraph meters the PRIMARY display is the digital display, and the SECONDARY display is the bargraph display.

Note 3:
 These functions are only available on selected input modules.

Note 4:
 If Code 1's display modes have been entered (second digit set to 5, 6, or 7), the display will cycle between Code 1 and the display functions mode each time the PROGRAM button is pressed. To leave the cycle, the Code 1 digits must be reset to any relevant function between [X00] to [X20]. This takes you into Code 2.


Note 5:
 If only 4 kB memory installed, functions 2 to 6 are not available in:

- Code 3 second digit.
- Code 4 third digit.
- Code 7 second digit.

Note 6:
 These functions are not available on all models and in some cases require additional hardware.

Note 7:
 For future development.

CODE 2

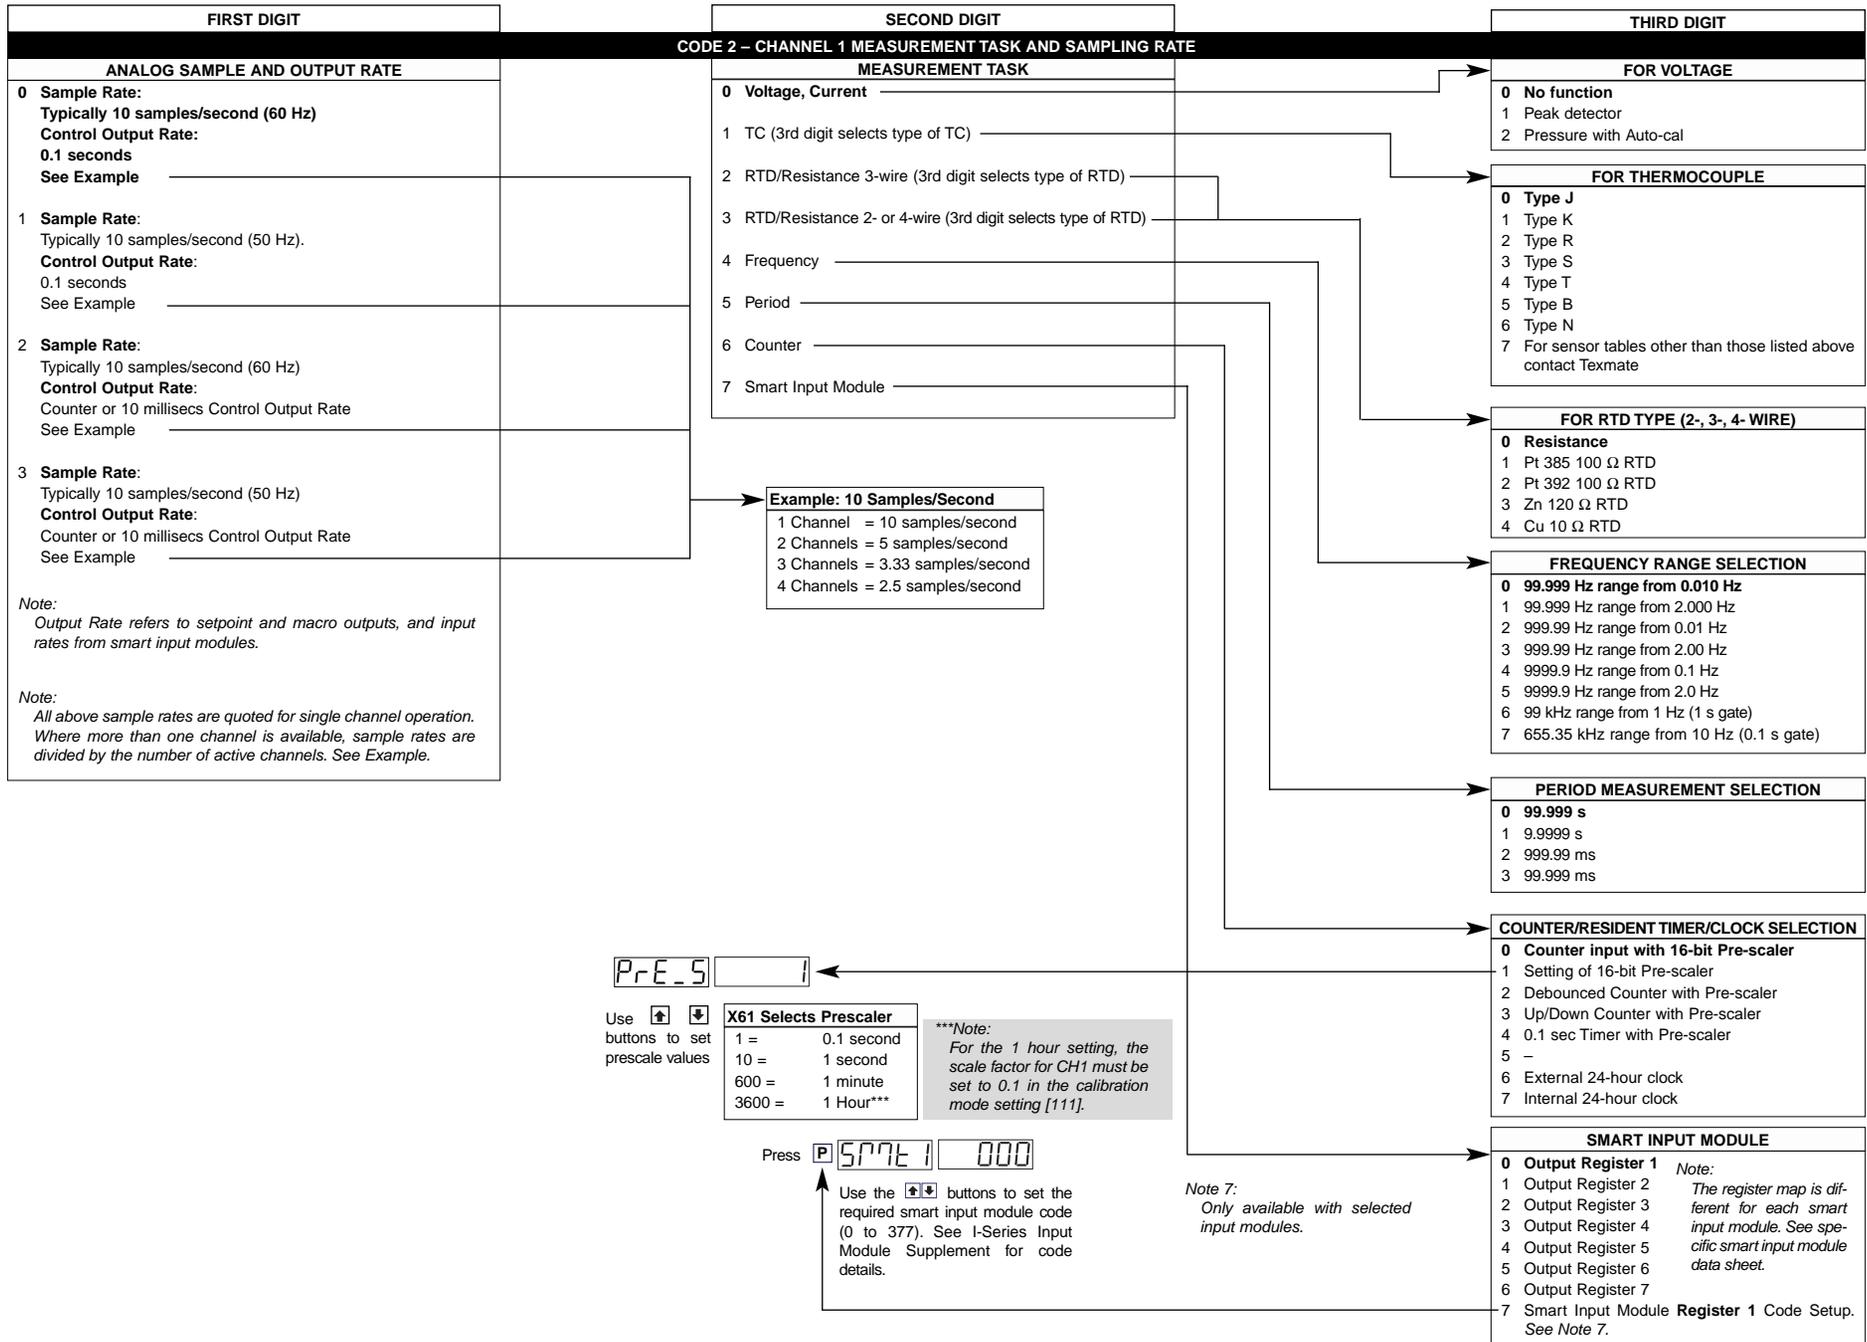

CODES 3 to 5

FIRST DIGIT	SECOND DIGIT	THIRD DIGIT
CODE 3 – CHANNEL 1 FUNCTIONS (POST PROCESSING & SERIAL MODE)		
CHANNEL 1 POST PROCESSING	32-POINT LINEARIZATION FOR CHANNEL 1	SERIAL MODE
0 Direct Display of Input (no processing) 1 Square Root of Channel 1 2 Inverse of Channel 1 3 -	0 No Linearization on CH1 1 32-point Linearization on CH1 using Table 1 2 32-point Linearization on CH1 using Table 2. See Note 5 3 32-point Linearization on CH1 using Table 3. See Note 5 4 32-point Linearization on CH1 using Table 4. See Note 5 5 125-point Linearization on CH1 (Tables 1 to 4 cascaded). See Note 5 6 32-point Linearization on CH1 (Tables 1 to 4 selected from the rear pins of selected input modules). The selected table is not available if CH2, CH3, or CH4 is operating in the analog output mode. CH1 must be set to Voltage, Current in Code 2 [XOX]. See Note 5 7 - <i>Note:</i> All linearization tables are set up in the Calibration Mode [24X].	0 ASCII Mode 1 Modbus Mode 2 Master mode (used to customize print mode protocols via macro) 3 Print Mode 4 Ethernet Mode. See Note 6 5 Devicenet Mode (requires Devicenet hardware module). See Note 6 <i>Note 6:</i> These functions are not available on all models and in some cases require additional hardware.

FIRST DIGIT	SECOND DIGIT	THIRD DIGIT
CODE 5 – CHANNEL 3 FUNCTIONS		
CH3 POST PROCESSING	MEASUREMENT TASK	FOR THERMOCOUPLE
0 Direct Display of Input (no processing) 1 Square Root of Channel 3 2 Inverse of Channel 3 3 4 kilobits Meters NO Linearization 32 kilobits Meters 32-point Linearization of CH3 using Table 3 <i>Note:</i> All linearization tables are set up in the Calibration Mode [24X].	0 No Function 1 Voltage, current 2 TC (3rd digit selects type of TC) 3 RTD/Resistance (3rd digit selects type of RTD) 4 Real Time Clock & Timer (3rd digit selects type) 5 - 6 - 7 Smart Input Module (3rd digit selects register)	0 Type J 1 Type K 2 Type R 3 Type S 4 Type T 5 Type B 6 Type N 7 For sensor tables other than those listed above contact Texmate FOR RTD TYPE (2-, 3-, 4- WIRE) 0 Resistance 1 Pt 385 100 Ω RTD 2 Pt 392 100 Ω RTD 3 Zn 120 Ω RTD 4 Cu 10 Ω RTD FOR REAL-TIME CLOCK & TIMER 0 HRS:MIN:SEC 1 HRS:MIN 2 - 3 - 4 1 Second Count UP Timer 5 1 Second Count DOWN Timer 6 - 7 - FOR SMART INPUT MODULE 0 Output Register 1 1 Output Register 2 2 Output Register 3 3 Output Register 4 4 Output Register 5 5 Output Register 6 6 Output Register 7 7 Smart Input Module Register 2 Code Setup

CODE 4 – CHANNEL 2 MEASUREMENT TASK AND 32-POINT LINEARIZATION											
MEASUREMENT TASK	FOR VOLTAGE & CURRENT										
0 Voltage, Current 1 TC (type as per 2nd digit) 2 RTD/Resistance (type as per 2nd digit) 3 Second Digital Input Channel (type as per 2nd digit)	0 Channel 2 Disabled 1 Direct (no post processing) 2 Square Root of Channel 2 3 Inverse of Channel 2 4 Output Register 1 (smart module)* 5 Output Register 2 (smart module)* 6 Output Register 3 (smart module)* 7 Output Register 4 (smart module)* FOR THERMOCOUPLE 0 Type J 1 Type K 2 Type R 3 Type S 4 Type T 5 Type B 6 Type N 7 For sensor tables other than those listed above contact Texmate FOR RTD TYPE (3-WIRE) 0 Resistance 1 Pt 385 100 Ω RTD 2 Pt 392 100 Ω RTD 3 Zn 120 Ω RTD 4 Cu 10 Ω RTD DIGITAL INPUT 0 Frequency - 99.999 Hz range from 0.001 Hz 1 Frequency - 999.99 Hz range from 0.01 Hz 2 Frequency - 99.999 kHz range from 1 Hz (1 s gate) 3 Frequency - 500 kHz range from 10 Hz (0.1 s gate) 4 Period - 9.9999 s (100 μs resolution) 5 Period - 999.99 ms (10 μs resolution) 6 Up/Down Counter with Prescaler 7 Set Prescaler										
	32-POINT LINEARIZATION FOR CH2										
	0 No user defined Linearization on CH2 1 32-point Linearization on CH2 using Table 1 2 32-point Linearization on CH2 using Table 2. See Note 5 3 32-point Linearization on CH2 using Table 3. See Note 5 4 32-point Linearization on CH2 using Table 4. See Note 5 5 125-point Linearization on CH2 (Tables 1 to 4 cascaded). See Note 5 6 - 7 - <i>*Note:</i> Selecting 040 to 070 in the 2nd digit of Code 4 selects one of the following settings in the installed smart input module's output register map: <table border="1"> <thead> <tr> <th>2nd Digit</th> <th>Input module's output register map</th> </tr> </thead> <tbody> <tr> <td>4 selects</td> <td>0</td> </tr> <tr> <td>5 selects</td> <td>1</td> </tr> <tr> <td>6 selects</td> <td>2</td> </tr> <tr> <td>7 selects</td> <td>3</td> </tr> </tbody> </table> <i>Note:</i> The register map is different for each smart input module. See installed input module data sheet for specific smart register 1 function map.	2nd Digit	Input module's output register map	4 selects	0	5 selects	1	6 selects	2	7 selects	3
2nd Digit	Input module's output register map										
4 selects	0										
5 selects	1										
6 selects	2										
7 selects	3										

Note:
The function of the output register selected varies according to the input module installed.

PRE_S [] Use [] [] buttons to set prescale values

X61 Selects Prescaler	
1 =	0.1 second
10 =	1 second
600 =	1 minute
3600 =	1 Hour***

****Note:*
For the 1 hour setting, the scale factor for CH1 must be set to 0.1 in the calibration mode setting [111].

Press P 5772 000

Use the [] [] buttons to set the required smart input module code (0 to 377). See I-Series Input Module Supplement for code details.

CODES 6 to 9

FIRST DIGIT	SECOND DIGIT	THIRD DIGIT
CODE 6 – CHANNEL 4 FUNCTIONS		
CH4 POST PROCESSING	MEASUREMENT TASK	FOR THERMOCOUPLE
0 Direct Display of Input (no processing) 1 Square Root of Channel 4 2 Inverse of Channel 4 3 4 kilobits Meters NO Linearization 32 kilobits Meters 32-point Linearization of CH4 using Table 4 <i>Note:</i> All linearization tables are set up in the Calibration Mode [24X].	0 No Function 1 Voltage, Current 2 TC (3rd digit selects type of TC). See Note 7 3 RTD/Resistance (3rd digit selects type of RTD). 4 Real Time Clock and Timer (3rd digit selects type) 5 - 6 - 7 Smart Input Module (3rd digit selects register)	0 Type J 1 Type K 2 Type R 3 Type S 4 Type T 5 Type B 6 Type N 7 For sensor tables other than those listed above contact Texmate FOR RTD TYPE (2-, 3-, 4- WIRE) 0 Resistance 1 Pt 385 100 Ω RTD 2 Pt 392 100 Ω RTD 3 Zn 120 Ω RTD 4 Cu 10 Ω RTD FOR REAL-TIME CLOCK & TIMER 0 HRS:MIN:SEC 1 HRS:MIN 2 - 3 - 4 1 Second Count UP Timer 5 1 Second Count DOWN Timer 6 - 7 - FOR SMART INPUT MODULE 0 Output Register 1 1 Output Register 2 2 Output Register 3 3 Output Register 4 4 Output Register 5 5 Output Register 6 6 Output Register 7 7 Smart Input Module Register 3 Code Setup

Note 5:
 If only 4 kilobits of memory is installed, only Table 1 is available for:

- CH1 in Code 3, 2nd digit.
- CH2 in Code 4, 3rd digit.
- CH3 in Code 5, 1st digit.
- CH4 in Code 6, 1st digit.
- RESULT in Code 7, 2nd digit.

Note 7:
 For future development.

Note:
 The function of the output register selected varies according to the input module installed.

FIRST DIGIT	SECOND DIGIT	THIRD DIGIT
CODE 8 – DATA LOGGING AND PRINT MODE OPTIONS		
DATA LOG BUFFER TYPE	DATE & TIME STAMP OPTIONS	LOG OR PRINT TRIGGER
0 No Data Logging 1 Cyclic Buffer 2 Linear FIFO Buffer. 3 Reset Buffer Number to 0. <i>Note:</i> Setting Code 8 to [3XX] resets the data log buffer to 0. Once reset, Code 8 must be set back to the required data log buffer setting.	0 Printer Format – No time stamp with print/log 1 Printer Format – Time stamp format 1 [Mth-Day-Yr Hrs:Min:Sec] (with <CR><LF>) 2 Printer Format – Time stamp format 2 [Day-Mth-Yr Hrs:Min:Sec] (with <CR><LF>) 3 Printer Format – Time stamp format 3 [Hrs:Min:Sec] (with <CR><LF>) 4 Spreadsheet Format – No time stamp with print/log 5 Spreadsheet Format – Time stamp format 1 [Mth-Day-Yr Hrs:Min:Sec] 6 Spreadsheet Format – Time stamp format 2 [Day-Mth-Yr Hrs:Min:Sec] 7 Spreadsheet Format – Time stamp format 3 [Hrs:Min:Sec] ALL ABOVE ARE REAL-TIME CLOCK OPTIONS	0 No trigger 1 Trigger on Demand from PROGRAM Button 2 Trigger on Demand from F1 Button 3 Trigger on Demand from F2 Button 4 Trigger on Demand from HOLD Pin 5 Trigger on Demand from LOCK Pin 6 - 7 - <i>Note:</i> Log and/or Print will only trigger if enabled.

CODE 9 – FUNCTIONS FOR DIGITAL INPUT PINS		
DISPLAY TEST PIN	HOLD PIN	LOCK PIN
0 Display test only 1 Reset Counter Channel 1 and total 2 at Power-up 2 Reset Counters Channel 1, 2, 3, 4, Total 1, and Total 2 at Power-up 3 Reset Total 1, and Total 2 at Power-up	0 Display Hold 1 Reset Channel 1 2 Reset Total 1 and Total 2 3 Reset Total 2 4 Reset Peak, Valley 5 Clear Tare 6 Set Tare 7 Unlatch (de-energize) all Setpoints	0 Key Lock 1 Reset Channel 1 2 Reset Channel 2 3 Reset Channel 3 4 Reset Channel 4 5 Clear Tare 6 Reset Total 1 7 Unlatch (de-energize) all Setpoints

Press **P** **577E3** **000**

Use the **↔** buttons to set the required smart input module code (0 to 377). See I-Series Input Module Supplement for code details.

CODE 7 – RESULT PROCESSING		
RESULT PROCESSING	32-POINT LINEARIZATION FOR RESULT	MATHS FUNCTIONS FOR RESULT
0 Direct Display of Result as per processing performed in 2nd and 3rd digits 1 Square Root of Result 2 Inverse of Result 3 -	0 No Linearization on Result 1 32-point Linearization on Result using Table 1 2 32-point Linearization on Result using Table 2. See Note 5 3 32-point Linearization on Result using Table 3. See Note 5 4 32-point Linearization on Result using Table 4. See Note 5 5 125-point Linearization on Result (Tables 1 to 4 cascaded). See Note 5 6 32-point Linearization on Result (Tables 1 to 4 selected from the rear of the meter). The selected table is not available if CH2, CH3, or CH4 is operating in the analog mode. CH1 must be set to Voltage, Current in Code 2 [X0X]. See Note 5 7 -	0 Result Register not Updated 1 pH Meter (CH1 = Tbuff, CH2 = pH) 2 Result = CH1, Setpoint 2 = CH2 3 Result = CH1 + CH2 4 Result = CH1 - CH2 5 Result = CH1 x CH2/10 000 6 Result = (CH1 x 20 000)/CH2 7 Result = CH1

SETPOINT PROGRAMMING MODE – SPC_1 to SPC_6

Setpoint Setup Sequence

Follow These Steps

The following procedures are written for SP1, all other setpoints are configured in a similar manner.

- 1) Press the **[P]** and **[D]** buttons at the same time. This enters the setpoint programming mode. The display toggles between [SP_1] and [18000].

This is SP1 of the **Setpoint Activation Values Mode**. Use the **[+]** and **[–]** buttons to set SP1 or the **[P]** button to move to the required setpoint.

- 2) After all required setpoint **activation values** have been set, press the **[P]** button until [SPC_1] appears. This is the **Setpoint & Relay Control Settings Mode**.

SPC_1 is the **setpoint and relay control settings** programming menu for SP1. Set the three digits according to the codes in the *Setpoint and Relay Control Function Settings* opposite in the following order:

Third Digit – Setpoint Delay Mode

Set to [XX5] and program the hysteresis, deviation, or PID functions as required for SP1.

Reset back to [XX0].

Third Digit – Setpoint Timer Mode

Set to [XX6] and program the timer mode functions as required for SP1.

Reset back to [XX0].

Third Digit – Setpoint Reset & Trigger Functions

Set to [XX7] and program the reset and trigger functions as required for SP1.

Reset back to [XX0].

Second Digit – Setpoint Activation Source Mode

Set to [X1X] to select the setpoint activation source for SP1 from any channel or selected register shown above. Reset back to [X0X].

If the SP source is from an external digital input, set to one of either [X2X] to [X7X] to select the setpoint activation source from one of six digital inputs (2 to 7). See **Note at 2nd digit*.

First Digit – Relay Energize Mode

Select the relay energize mode for SP1 from 0 to 3.

Third Digit – Relay Latching & Manual Reset Functions

Program the third digit setpoint relay latching and manual reset functions between 0 to 4 as required.

- 3) Press the **[P]** button to move to move to [SPC_2].
- 4) Repeat Step 2 for all required setpoints.

FIRST DIGIT	SECOND DIGIT	THIRD DIGIT
SETPOINT AND RELAY CONTROL FUNCTION SETTINGS		
Relay Energize Function	SP Activation Source	SP Functions
<p>0 Energizes ABOVE setpoint value</p> <p>HYSTERESIS selected – relay energizes AT OR ABOVE setpoint value plus hysteresis counts. De-energizes BELOW setpoint value minus hysteresis counts.</p> <p><i>Note:</i> If hysteresis set with ZERO counts, relay energizes AT OR ABOVE the setpoint value.</p> <p>DEVIATION selected – relay energizes INSIDE deviation band (setpoint ± deviation counts). De-energizes OUTSIDE deviation band (setpoint ± deviation counts).</p> <p>PID selected – controls ABOVE setpoint value.</p>	<p>0 Activate Setpoint Source from Selected Register</p> <p>1 Select Source for Setpoint</p> <p><i>Note:</i> [X1X] is a register selection procedure only. To finish, reset to [X0X] to activate the selection, or reset to 2-7 as required for digital input selection.</p> <p>2 Digital Input – Capture Pin 3 Digital Input – D1 (selected input modules) 4 Digital Input – D2 (selected input modules) 5 Digital Input – D3 (selected input modules) 6 HOLD Pin 7 LOCK Pin</p> <p><i>*Note:</i> If the setpoint source is set to [oFF] or a digital input, the setpoint activation value will have no effect and will not be displayed.</p>	<p>0 No Latching</p> <p>1 Relay Latched 2 Manual Relay Reset 3 Relay Latched and Manual Relay Reset 4 Relay Latched Off</p> <p>5 Hysteresis, Deviation & PID Mode (includes SP Tracking) → Go to Page 10</p> <p>6 Timer Modes:</p> <ul style="list-style-type: none"> •OFF. •Normal Delay. •Repeat ON. •Pulse ON. •1-Shot ON. •Repeat OFF. •Pulse OFF. •1-Shot OFF. <p><i>Note:</i> In PID Mode, all Timer Modes on SP1 set in [XX6] are not functional. → Go to Page 11</p> <p>7 Advanced Functions Mode:</p> <ul style="list-style-type: none"> •OFF. •Reset Trigger. •Reset Destination. •Reset Mode. •Reset Constant. •Trigger Print from SP. •Trigger Log from SP. <p><i>Note:</i> [XX5], [XX6], and [XX7] are set up procedures only. To finish, reset to 0-4 as required for setpoint latching and relay reset modes.</p>
<p>1 Energizes BELOW setpoint value</p> <p>HYSTERESIS selected – relay energizes BELOW setpoint value minus hysteresis counts. De-energizes AT OR ABOVE setpoint value plus hysteresis counts.</p> <p><i>Note:</i> If hysteresis set with ZERO counts, relay energizes BELOW the setpoint value.</p> <p>DEVIATION selected – relay energized OUTSIDE deviation band (setpoint ± deviation counts). De-energized INSIDE deviation band (setpoint ± deviation counts).</p> <p>PID selected – controls BELOW setpoint value.</p>		
<p>2 Energizes AT OR ABOVE setpoint value with FALLING INPUT SIGNAL INITIAL START-UP INHIBIT</p> <p>HYSTERESIS selected – relay energizes AT OR ABOVE setpoint value plus hysteresis counts with FALLING INPUT SIGNAL INITIAL START-UP INHIBIT. De-energizes BELOW setpoint value minus hysteresis counts with FALLING INPUT SIGNAL INITIAL START-UP INHIBIT.</p> <p><i>Note:</i> If hysteresis set with ZERO counts, relay energizes AT OR ABOVE the setpoint value.</p> <p>DEVIATION selected – relay energizes INSIDE deviation band (setpoint ± deviation counts) with FALLING INPUT SIGNAL INITIAL START-UP INHIBIT. De-energizes OUTSIDE deviation band (setpoint ± deviation counts) with FALLING INPUT SIGNAL INITIAL START-UP INHIBIT.</p> <p>PID selected – controls ABOVE setpoint value.</p>		
<p>3 Energizes BELOW setpoint value with RISING INPUT SIGNAL INITIAL START-UP INHIBIT</p> <p>HYSTERESIS selected – relay energizes BELOW setpoint value plus hysteresis counts with RISING INPUT SIGNAL INITIAL START-UP INHIBIT. De-energizes BELOW setpoint value minus hysteresis counts with RISING INPUT SIGNAL INITIAL START-UP INHIBIT.</p> <p><i>Note:</i> If hysteresis set with ZERO counts, relay energizes BELOW the setpoint value.</p> <p>DEVIATION selected – relay energizes OUTSIDE deviation band (setpoint ± deviation counts) with RISING INPUT SIGNAL INITIAL START-UP INHIBIT. De-energizes INSIDE deviation band (setpoint ± deviation counts) with RISING INPUT SIGNAL INITIAL START-UP INHIBIT.</p> <p>PID selected – controls BELOW setpoint value.</p>		

Select Source for Setpoint Functions

[P] SourC [oFF]


Use the **[+]** **[–]** buttons to cycle through the menu

Use the **[+]** **[–]** buttons to select register as data source for setpoint

[1 to 244] [tARE] [VALEY] [PEAK] [tot_2] [Ch2] [Ch3] [Ch4] [tot_1]

Set Up Hysteresis, Deviation & PID Mode Settings

From Page 8, third digit [XX5]

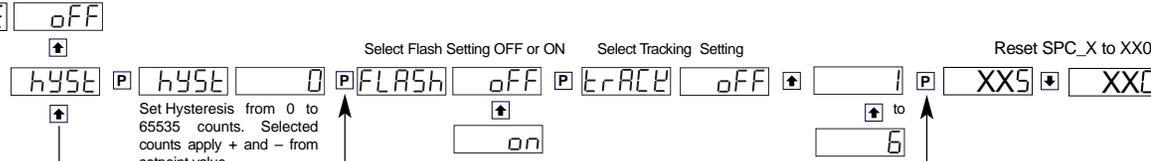

Set Hysteresis from 0 to 65535 counts. Selected counts apply + and - from setpoint value

Set Deviation from 1 to 65535 counts. Selected counts apply + and - from setpoint value

- OFF= Tracking Off
- 1 = SPX tracks SP1
- 2 = SPX tracks SP2
- 3 = SPX tracks SP3
- 4 = SPX tracks SP4
- 5 = SPX tracks SP5
- 6 = SPX tracks SP6



Programming Tip


If you do not require any of the functions in this mode, ensure it is set to:

Mode [off]

Note: If minimum cycle time is set to 0, the relevant relay is disabled. PID functions still operate

Note: If PID is selected in [XX5], the Timer Delay [XX6] and Reset and Trigger Functions [XX7] revert to [ModE][off] and cannot be adjusted.

PID FROM SETPOINT 1 AND 2 ONLY

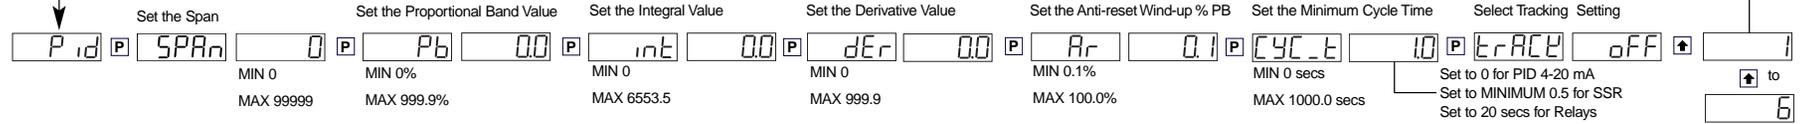

Set the Span

MIN 0
MAX 99999

Set the Proportional Band Value

MIN 0%
MAX 999.9%

Set the Integral Value

MIN 0
MAX 6553.5

Set the Derivative Value

MIN 0
MAX 999.9

Set the Anti-reset Wind-up % PB

MIN 0.1%
MAX 100.0%

Set the Minimum Cycle Time

MIN 0 secs
MAX 1000.0 secs

Select Tracking Setting

Set to 0 for PID 4-20 mA
Set to MINIMUM 0.5 for SSR
Set to 20 secs for Relays




Programming Tip

If you do not require any of the functions in this mode, ensure it is set to:

Timer [off]

From Page 8, third digit [XX6]

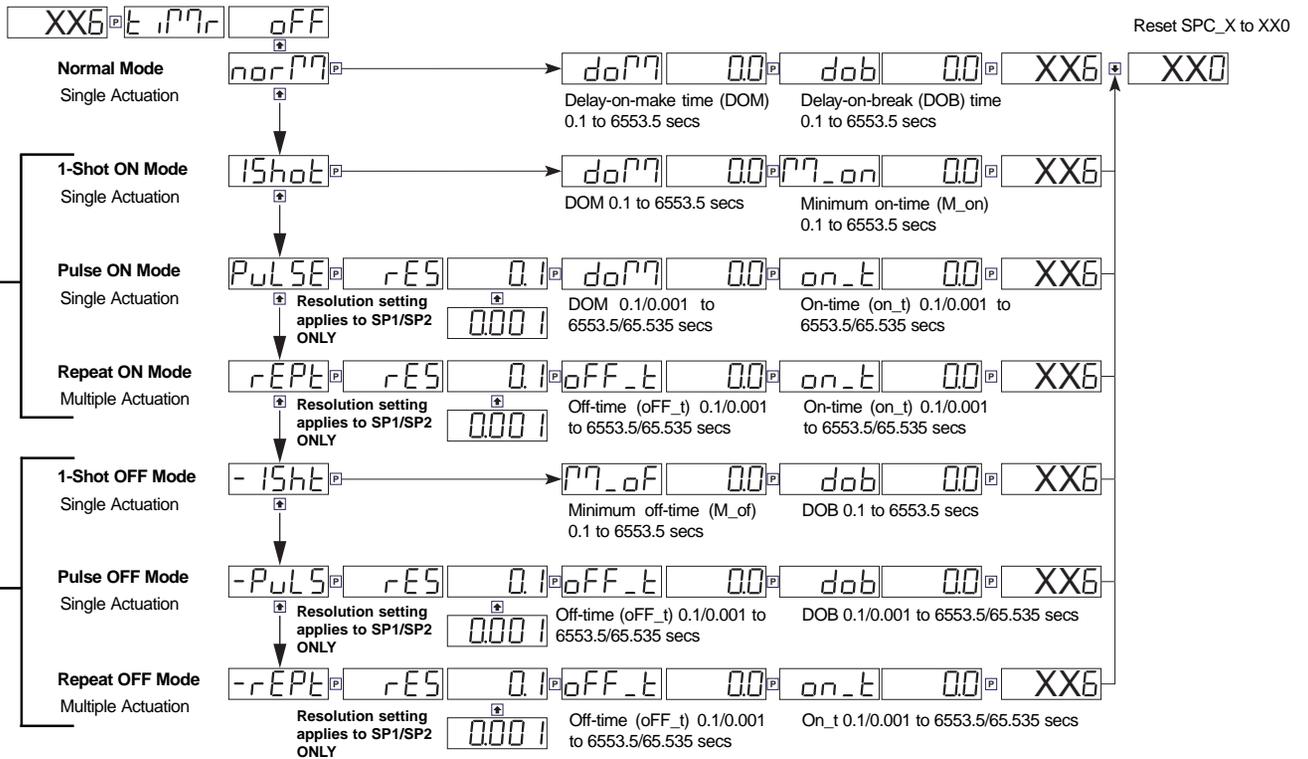

Normal Mode
Single Actuation

norm [off]

Delay-on-make time (DOM)
0.1 to 6553.5 secs

Delay-on-break (DOB) time
0.1 to 6553.5 secs

1-Shot ON Mode
Single Actuation

1shot [off]

DOM 0.1 to 6553.5 secs

Minimum on-time (M_on)
0.1 to 6553.5 secs

Pulse ON Mode
Single Actuation

pulse [off]

Resolution setting applies to SP1/SP2 ONLY

DOM 0.1/0.001 to 6553.5/65.535 secs

On-time (on_t) 0.1/0.001 to 6553.5/65.535 secs

Repeat ON Mode
Multiple Actuation

rept [off]

Resolution setting applies to SP1/SP2 ONLY

Off-time (oFF_t) 0.1/0.001 to 6553.5/65.535 secs

On-time (on_t) 0.1/0.001 to 6553.5/65.535 secs

1-Shot OFF Mode
Single Actuation

1shot [off]

Minimum off-time (M_of)
0.1 to 6553.5 secs

DOB 0.1 to 6553.5 secs

Pulse OFF Mode
Single Actuation

rpulse [off]

Resolution setting applies to SP1/SP2 ONLY

Off-time (oFF_t) 0.1/0.001 to 6553.5/65.535 secs

DOB 0.1/0.001 to 6553.5/65.535 secs

Repeat OFF Mode
Multiple Actuation

rrept [off]

Resolution setting applies to SP1/SP2 ONLY

Off-time (oFF_t) 0.1/0.001 to 6553.5/65.535 secs

On_t 0.1/0.001 to 6553.5/65.535 secs

Normally OFF/Pulsed ON Modes

These are time control modes where the relay is normally OFF (de-energizes) and pulses ON (energizes) when the setpoint activates.

Normally ON/Pulsed OFF Modes

These are time control modes where the relay is normally ON (energizes) and pulses OFF (de-energizes) when the setpoint activates.

Advanced Functions Mode – Set Up Register Reset and Setpoint Trigger Functions



Programming Tip

If you do not require any of the functions in this mode, ensure it is set to:


tr 0 OFF



Programming Tip

This mode can not be accessed if SPC_1 or SPC_2 is in the PID mode.

From Page 8, third digit [XX7]

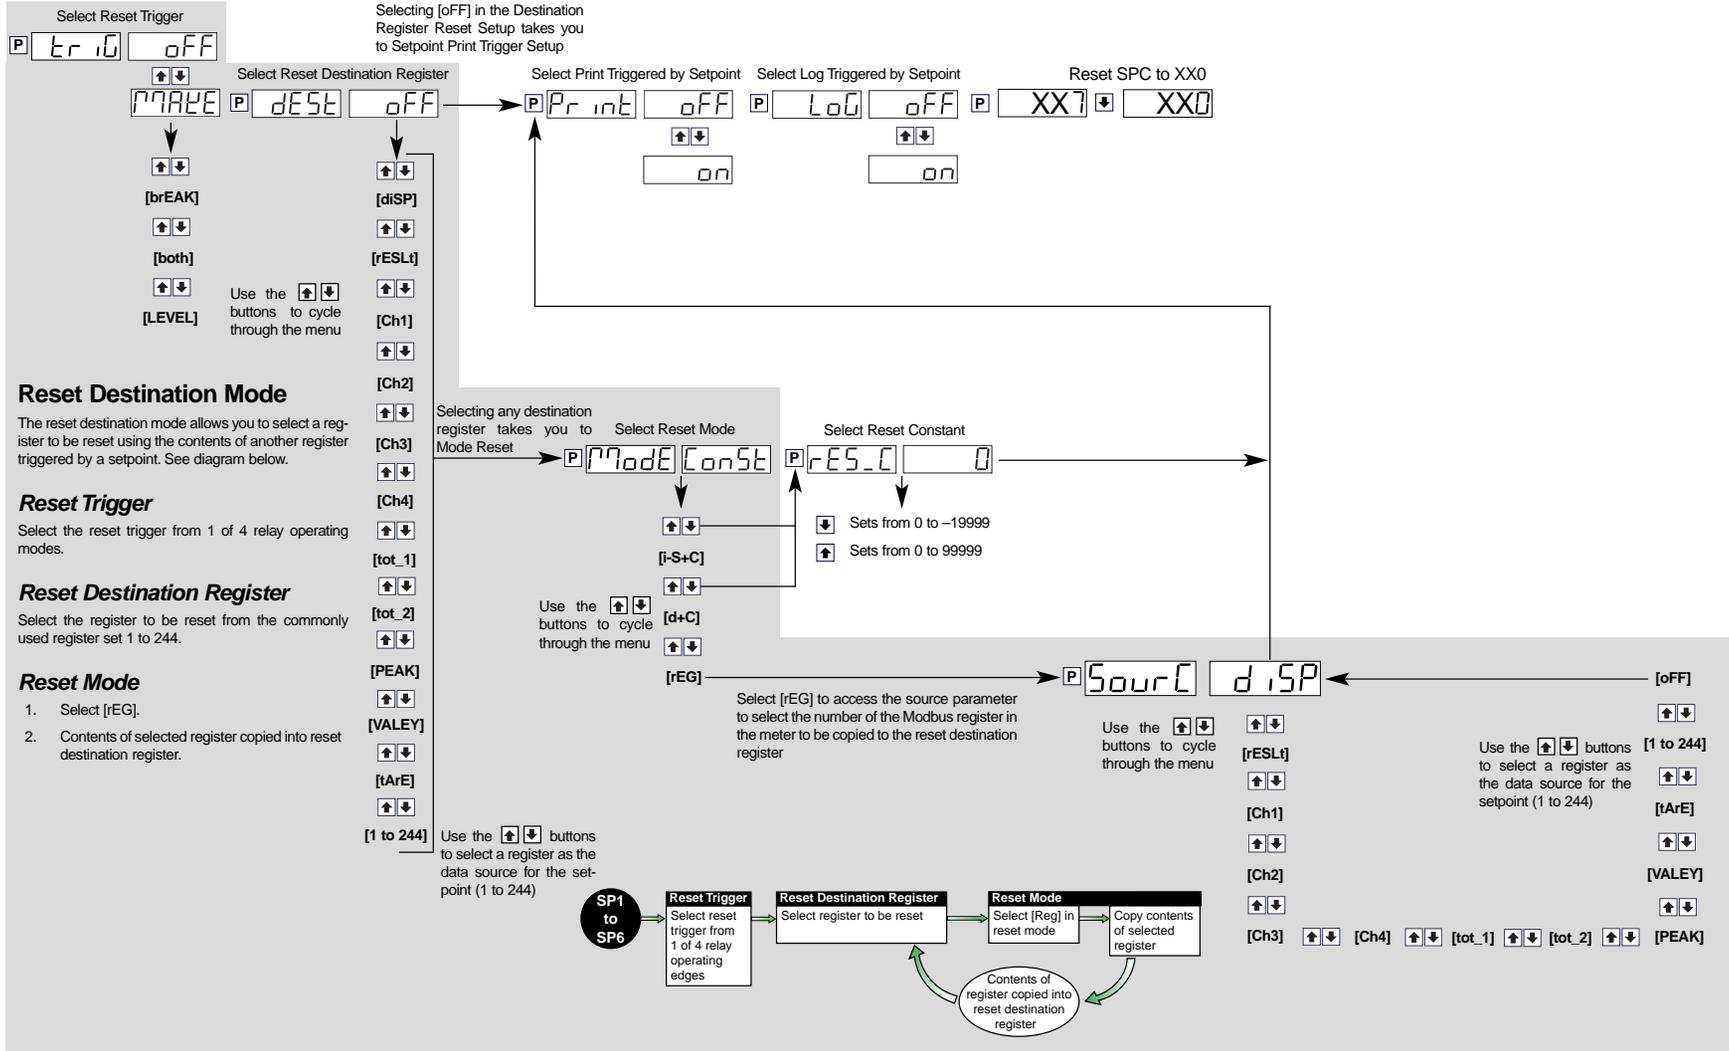

Customer Code Settings – Main Programming Mode

CALIBRATION MODE [CAL]

1st DIGIT	2nd DIGIT	3rd DIGIT	SUB-SETTINGS	1st DIGIT	2nd DIGIT	3rd DIGIT	SUB-SETTINGS
ON DEMAND FUNCTIONS				CALIBRATION PROCEDURES			
RESULT				Manual Calibration			
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	010	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	100 OFFSET SCALE
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	020 SPAN INPUT	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	101 OFFSET SCALE
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	030 ZERO INPUT SPAN INPUT	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	102 OFFSET SCALE
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	040 CHANNEL	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	103 OFFSET SCALE
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	050 CHANNEL	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	104 OFFSET SCALE
CH1				Two-point Calibration			
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	011	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	110 ZERO INPUT SPAN INPUT
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	021 SPAN INPUT	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	111 ZERO INPUT SPAN INPUT
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	031 ZERO INPUT SPAN INPUT	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	112 ZERO INPUT SPAN INPUT
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	041 CHANNEL	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	113 ZERO INPUT SPAN INPUT
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	051 CHANNEL	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	114 ZERO INPUT SPAN INPUT
CH2				Calibrate Thermocouple			
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	012	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	121 ZERO INPUT 32°F SPAN INPUT 2500°F
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	022 SPAN INPUT	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	122 ZERO INPUT 32°F SPAN INPUT 2500°F
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	032 ZERO INPUT SPAN INPUT	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	123 ZERO INPUT 32°F SPAN INPUT 2500°F
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	042 CHANNEL	Calibrate Analog Output			
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	052 CHANNEL	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	151 CAL LOW OUTPUT CAL HIGH OUTPUT
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	152 CAL LOW OUTPUT CAL HIGH OUTPUT
CH3							
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	013				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	023 SPAN INPUT				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	033 ZERO INPUT SPAN INPUT				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	043 CHANNEL				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	053 CHANNEL				
CH4							
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	014				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	024 SPAN INPUT				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	034 ZERO INPUT SPAN INPUT				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	044 CHANNEL				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	054 CHANNEL				

CALIBRATION MODE [CAL] Continued

1st DIGIT 2nd DIGIT 3rd DIGIT **SUB-SETTINGS**

RELATED CALIBRATION FUNCTIONS

Serial Output

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	200	BAUD	<input type="checkbox"/>	PARITY	<input type="checkbox"/>	ADDRESS	<input type="checkbox"/>	TIME DELAY	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	201	BAUD	<input type="checkbox"/>	PARITY	<input type="checkbox"/>	ADDRESS	<input type="checkbox"/>	TIME DELAY	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	202	BAUD	<input type="checkbox"/>	PARITY	<input type="checkbox"/>	ADDRESS	<input type="checkbox"/>	TIME DELAY	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	203	BAUD	<input type="checkbox"/>	PARITY	<input type="checkbox"/>	ADDRESS	<input type="checkbox"/>	TIME DELAY	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	204	BAUD	<input type="checkbox"/>	PARITY	<input type="checkbox"/>	ADDRESS	<input type="checkbox"/>	TIME DELAY	<input type="checkbox"/>

Auto Zero Maintenance

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	210	AZ CAPTURE	<input type="checkbox"/>	AZ MOTION	<input type="checkbox"/>	AZ APERTURE	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	211	AZ CAPTURE	<input type="checkbox"/>	AZ MOTION	<input type="checkbox"/>	AZ APERTURE	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	212	AZ CAPTURE	<input type="checkbox"/>	AZ MOTION	<input type="checkbox"/>	AZ APERTURE	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	213	AZ CAPTURE	<input type="checkbox"/>	AZ MOTION	<input type="checkbox"/>	AZ APERTURE	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	214	AZ CAPTURE	<input type="checkbox"/>	AZ MOTION	<input type="checkbox"/>	AZ APERTURE	<input type="checkbox"/>

Averaging Samples & Averaging Window

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	220	AVERAGE SAMPLES	<input type="checkbox"/>	AVERAGE WINDOW	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	221	AVERAGE SAMPLES	<input type="checkbox"/>	AVERAGE WINDOW	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	222	AVERAGE SAMPLES	<input type="checkbox"/>	AVERAGE WINDOW	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	223	AVERAGE SAMPLES	<input type="checkbox"/>	AVERAGE WINDOW	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	224	AVERAGE SAMPLES	<input type="checkbox"/>	AVERAGE WINDOW	<input type="checkbox"/>

K Factor & Totalizer Cutoff

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	231	SCALE FACTOR	<input type="checkbox"/>	CUTOFF	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	232	SCALE FACTOR	<input type="checkbox"/>	CUTOFF	<input type="checkbox"/>

32-point Linearization Tables

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	240	MODE	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	241	MODE	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	242	MODE	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	243	MODE	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	244	MODE	<input type="checkbox"/>

Scale Analog Output

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	251	ZERO	<input type="checkbox"/>	FULL SCALE	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	252	ZERO	<input type="checkbox"/>	FULL SCALE	<input type="checkbox"/>

CODE 1			
1st DIGIT	2nd DIGIT	3rd DIGIT	SUB-SETTINGS
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X50 SOURCE <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X51 SOURCE <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X52 SOURCE <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X53 SOURCE <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X54 SOURCE <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X55 SOURCE <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X56 SOURCE <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X57 SOURCE <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X60 DISPLAY <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X61 DISPLAY <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X62 DISPLAY <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X63 DISPLAY <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X64 DISPLAY <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X65 DISPLAY <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X66 DISPLAY <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X67 DISPLAY <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X70 CHARACTER <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X71 CHARACTER <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X72 CHARACTER <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X73 CHARACTER <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X74 CHARACTER <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X75 CHARACTER <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X76 CHARACTER <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	X77 CHARACTER <input type="checkbox"/>

CODE 2			
1st DIGIT	2nd DIGIT	3rd DIGIT	PRESCALER
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

CODE 3			
1st DIGIT	2nd DIGIT	3rd DIGIT	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

CODE 4			
1st DIGIT	2nd DIGIT	3rd DIGIT	PRESCALER
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

CODE 5			
1st DIGIT	2nd DIGIT	3rd DIGIT	SMART INPUT MODULE SETTINGS
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

CODE 6			
1st DIGIT	2nd DIGIT	3rd DIGIT	SMART INPUT MODULE SETTINGS
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

CODE 7			
1st DIGIT	2nd DIGIT	3rd DIGIT	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

CODE 8			
1st DIGIT	2nd DIGIT	3rd DIGIT	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

CODE 9			
1st DIGIT	2nd DIGIT	3rd DIGIT	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

CODE 10			
1st DIGIT	2nd DIGIT	3rd DIGIT	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

BARGRAPH COLORS	
2XX	COLOR 1 <input type="checkbox"/>
	COLOR 2 <input type="checkbox"/>
	COLOR 3 <input type="checkbox"/>
	COLOR 4 <input type="checkbox"/>
	COLOR 5 <input type="checkbox"/>
	COLOR 6 <input type="checkbox"/>
	COLOR 7 <input type="checkbox"/>

SCALING FOR LINEAR BARGRAPH			
3X0	BAR LOW	<input type="checkbox"/>	BAR HIGH <input type="checkbox"/>
3X1	BAR LOW	<input type="checkbox"/>	BAR HIGH <input type="checkbox"/>
	BAR NOMINAL	<input type="checkbox"/>	
	BAR NOMINAL	<input type="checkbox"/>	

SCALING FOR LOGARITHMIC BARGRAPH			
3X3	REFERENCE	<input type="checkbox"/>	BAR NOMINAL <input type="checkbox"/>
3X4	REFERENCE	<input type="checkbox"/>	BAR NOMINAL <input type="checkbox"/>
3X5	REFERENCE	<input type="checkbox"/>	BAR NOMINAL <input type="checkbox"/>
3X6	REFERENCE	<input type="checkbox"/>	BAR NOMINAL <input type="checkbox"/>
3X7	REFERENCE	<input type="checkbox"/>	BAR NOMINAL <input type="checkbox"/>

Customer Code Settings – Setpoint Programming Mode

SP ACTIVATION VALUES

SETPOINT	VALUE
SP1	
SP2	
SP3	
SP4	
SP5	
SP6	

SETPOINT & RELAY CONTROL SETTINGS MODE SPC_1 TO SPC_6

SELECT DATA SOURCE			DELAY MODE SETTINGS								
SPC_1	_ 1 _		SPC_1	_ 5	HYSTERESIS	ANNUNCIATOR FLASHING	SP TRACKING		DEVIATION	ANNUNCIATOR FLASHING	SP TRACKING
SPC_2	_ 1 _		SPC_2	_ 5	HYSTERESIS	ANNUNCIATOR FLASHING	SP TRACKING		DEVIATION	ANNUNCIATOR FLASHING	SP TRACKING
SPC_3	_ 1 _		SPC_3	_ 5	HYSTERESIS	ANNUNCIATOR FLASHING	SP TRACKING		DEVIATION	ANNUNCIATOR FLASHING	SP TRACKING
SPC_4	_ 1 _		SPC_4	_ 5	HYSTERESIS	ANNUNCIATOR FLASHING	SP TRACKING		DEVIATION	ANNUNCIATOR FLASHING	SP TRACKING
SPC_5	_ 1 _		SPC_5	_ 5	HYSTERESIS	ANNUNCIATOR FLASHING	SP TRACKING		DEVIATION	ANNUNCIATOR FLASHING	SP TRACKING
SPC_6	_ 1 _		SPC_6	_ 5	HYSTERESIS	ANNUNCIATOR FLASHING	SP TRACKING		DEVIATION	ANNUNCIATOR FLASHING	SP TRACKING

PID CONTROL SETTINGS

SPC_1	_ 5	SPAN	PB	INT	DER	ARW	MCT	SP TRACKING
SPC_2	_ 5	SPAN	PB	INT	DER	ARW	MCT	SP TRACKING
SPC_3	_ 5	SPAN	PB	INT	DER	ARW	MCT	SP TRACKING
SPC_4	_ 5	SPAN	PB	INT	DER	ARW	MCT	SP TRACKING
SPC_5	_ 5	SPAN	PB	INT	DER	ARW	MCT	SP TRACKING
SPC_6	_ 5	SPAN	PB	INT	DER	ARW	MCT	SP TRACKING

TIMER MODE SETTINGS

SPC SETTING	NORMAL	NORMALLY OFF / PULSED ON MODES				NORMALLY ON / PULSED OFF MODES						
		REPEAT ON	PULSE ON	1-SHOT ON	1-SHOT OFF	PULSE OFF	REPEAT OFF					
SPC_1	_ 6	DOM	Resolution	OFF T	Resolution	DOM	DOM	M OFF	Resolution	OFF T	Resolution	OFF T
		DOB		ON T		ON T	M ON	DOB		DOB		ON T
SPC_2	_ 6	DOM	Resolution	OFF T	Resolution	DOM	DOM	M OFF	Resolution	OFF T	Resolution	OFF T
		DOB		ON T		ON T	M ON	DOB		DOB		ON T
SPC_3	_ 6	DOM	Resolution	OFF T	Resolution	DOM	DOM	M OFF	Resolution	OFF T	Resolution	OFF T
		DOB		ON T		ON T	M ON	DOB		DOB		ON T
SPC_4	_ 6	DOM	Resolution	OFF T	Resolution	DOM	DOM	M OFF	Resolution	OFF T	Resolution	OFF T
		DOB		ON T		ON T	M ON	DOB		DOB		ON T
SPC_5	_ 6	DOM	Resolution	OFF T	Resolution	DOM	DOM	M OFF	Resolution	OFF T	Resolution	OFF T
		DOB		ON T		ON T	M ON	DOB		DOB		ON T
SPC_6	_ 6	DOM	Resolution	OFF T	Resolution	DOM	DOM	M OFF	Resolution	OFF T	Resolution	OFF T
		DOB		ON T		ON T	M ON	DOB		DOB		ON T

REGISTER RESET & TRIGGER FUNCTIONS SETTINGS

SPC_1	_ 7	[triG]	[dESt]	[ModE]	[rES_C]	[SourC]	[Print]	[LoG]
SPC_2	_ 7	[triG]	[dESt]	[ModE]	[rES_C]	[SourC]	[Print]	[LoG]
SPC_3	_ 7	[triG]	[dESt]	[ModE]	[rES_C]	[SourC]	[Print]	[LoG]
SPC_4	_ 7	[triG]	[dESt]	[ModE]	[rES_C]	[SourC]	[Print]	[LoG]
SPC_5	_ 7	[triG]	[dESt]	[ModE]	[rES_C]	[SourC]	[Print]	[LoG]
SPC_6	_ 7	[triG]	[dESt]	[ModE]	[rES_C]	[SourC]	[Print]	[LoG]

SETPOINT FINAL SETTINGS

	1st DIGIT	2nd DIGIT	3rd DIGIT
SPC_1			
SPC_2			
SPC_3			
SPC_4			
SPC_5			
SPC_6			

Commonly Used Registers

A Tiger 320 Series meter has 6,144 registers which are provided for use by the operating system and the powerful Custom Macro Programming system).

40 Manually Selectable Registers

Using the front panel buttons, there are 40 registers that may be selected for use within the following functions:

- **[CodE_1] - Display Configuration [X50].** Selection of a register as the data source for displays, peak and valley, totalizers and analog outputs.
- **Setpoint Control Settings [X1X].** Selection of a register as the data source for a setpoint.
- **Setpoint Control Settings [XX7].** Selection of a destination register that is to be reset by a setpoint with the contents of a selected source register.
- **Setpoint Control Settings [XX7].** Select which register's contents are to be copied into the destination register by a setpoint.

The 40 registers that can be selected as a data source, a reset source or a reset destination for the functions above are shown in the table on the right.


The table shows, in seven columns, the functions where these registers can be used.

Where a register is more likely to be used in a particular function, a closed circle ● is shown in the column. For those functions where a register is less likely to be used, an open circle ○ is shown.

No register number is shown for the first 11 functions, because these 11 functions are identified in the display menu for direct selection by their code names.

When cycling through the Registers Menu and then Registers 1 to 244, the numerical Register Set will increment through each decade in turn, from 1 to 0, while the button is held down. When [200] is reached, [oFF] or [tArE] will be displayed. To select a specific number set, the button should be released and pressed again each time the left most decade displays the desired number for that decade.

To quickly exit the numerical 1 to 244 Register Set, hold the button down while cycling through the decades, and release it when [oFF] or [tArE] appears.

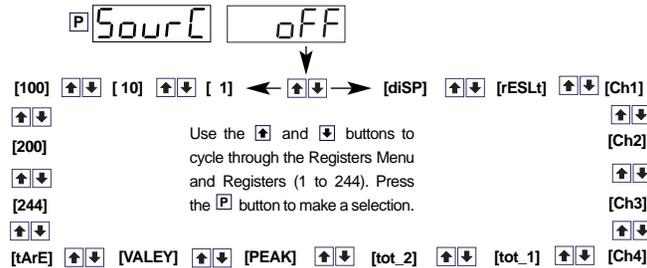

Register Functions	Register Numbers	Data Source for Displays	Data Source for Peak & Valley	Data Source for Analog Outputs 1 & 2	Data Source for Totalizers 1 & 2	Data Source for Setpoints	Reset Source	Reset Dest.
Display [diSP]	-	●	●	●	●	●		
Result [rESLt]	-	●	●	●	●	●	●	●
CH1 [Ch1]	-	●	●	●	●	●	●	●
CH2 [Ch2]	-	●	●	●	●	●	●	●
CH3 [Ch3]	-	●	●	●	●	●	●	●
CH4 [Ch4]	-	●	●	●	●	●	●	●
Total 1 [tot_1]	-	●	●	●	●	●	●	●
Total 2 [tot_2]	-	●	●	●	●	●	●	●
Peak [PEAK]	-	○				●	○	●
Valley [VALEY]	-	○				●	○	●
Tare [tArE]	-	○	○	○		○	○	●
PID Output 1	50	○	○	○		○		
PID Output 2	51	○	○	○		○		
Smart Result 1	54	○	○	○				○
Smart Result 2	55	○	○	○				○
Smart Result 3	56	○	○	○				○
Smart Result 4	57	○	○	○				○
Smart Result 5	58							○
Smart Result 6	59							○
Smart Result 7	60							○
Analog Output 1	83	○				○	○	○
Analog Output 2	84	○				○	○	○
Timer 1	95	○				○	○	○
Timer 2	96	○				○	○	○
Smart Reset Offset 1	121							●
Smart Reset Offset 2	122							●
Clock - Seconds	213					○		
Clock - Minutes	214					○		
Clock - Hours	215					○		
Clock - Days	216					○		
Clock - Date	217					○		
Clock - Month	218					○		
Clock - Year	219					○		
Setpoint Latch	221							●
Relay De-energize	222							●
Zero Offset - Result	227					○		
Zero Offset - CH1	228					○		
Zero Offset - CH2	229					○		
Zero Offset - CH3	230					○		
Zero Offset - CH4	231					○		

Registers that Should Not be Used


The following registers are contained within the selectable 1 to 244 Register Set, but they should not be selected because they are either reserved for future use, or for use by the operating system only:

- 15, 38, 47-48, 52-53, 61-64, 123-128, 140-141, 234-244

Any selection of these Registers may cause a malfunction.

Resetting and Incrementing Using Setpoints

Setpoints may be used to reset and/or increment registers. In the example shown on the right, 2 liter soft drink bottles are being filled and packed 12 to a case. Using the setpoint reset and increment feature, the number of bottles and the total number of filled cases is easily calculated and displayed. Totalizer 1 counts from 0 to 2, resets, and repeats. CH 2 counts from 0 to 12, resets, and repeats.

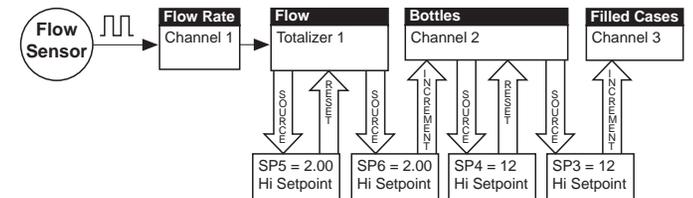

USING SETPOINTS TO INCREMENT AND RESET REGISTERS

User Notes

User Notes

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.



995 Park Center Drive • Vista, CA 92081-8397

Tel: 1-760-598-9899 • USA 1-800-839-6283 • That's 1-800-TEXMATE

Fax: 1-760-598-9828 • Email: sales@texmate.com • Web: www.texmate.com

Texmate has facilities in Japan, New Zealand, Taiwan, and Thailand. We also have authorized distributors throughout the USA and in 28 other countries.

For product details visit www.texmate.com

Local Distributor Address