



LYNX FAMILY

## DX-35

Lynx Panel Meter  
3 1/2 DIGIT 0.56" or 0.8" LED  
in a 1/8 DIN Case



Large display option  
0.8" red or green LED

A versatile digital panel meter with standard or large display, for monitoring and measurement applications.

### General Features

- External transmitters or signal conditioners can be eliminated by directly connecting the sensor to more than 33 **I-Series** Plug-in Input Signal Conditioners that include:
  - AC Current
  - AC Voltage
  - DC Current
  - DC Voltage
  - Load Cell
  - Pressure
  - Process
  - Prototype
  - Resistance
  - Strain-gage
  - Temperature
  - 4 to 20 mA
- Pre-calibrated **I-Series** Input Signal Conditioning modules, that have span or zero potentiometers, can be interchanged between any **I-Series** compatible meter, without recalibration, because all of the analog scaling and reference circuitry is self-contained within the module.
- 24 V DC excitation is available to power external transmitters and 5 or 10 V DC excitation is available for strain-gages, load cells and resistance bridge type sensors.
- AC/DC Auto-sensing power supply. For voltages between **85-265 V AC / 95-370 V DC (PS1)** or 15-48 V AC / 10-72 V DC (PS2).
- Standard red or optional green or super bright red 3 1/2-digit 0.56" LED with display range –1999 to 1999 (4000 counts).
- Red or green 0.8" LED large display option.
- Display brightness may be externally controlled.
- 1/8 DIN (96 x 48mm ) case easily mounts in thin or thick panels (up to 2"). May be ordered with optional extra fire resistant metal case.
- Optional NEMA-4X, IP-65 hinged, lockable, water and dust proof cover.

### Input Module Compatibility

**LYNX FAMILY:** More than 33 different Plug-in **I-Series** Input Signal Conditioners are approved for Texmate's Lynx Family of meters. As shown on pages 3 to 5.



LYNX

See [www.texmate.com](http://www.texmate.com) for an up to date listing.


### Specifications

**Input Specs:** .....Depends on input signal conditioner  
**A/D Converter:** .....12 bit dual slope  
**Accuracy:** .....±(0.05% of reading + 2 counts)  
**Temp. Coeff.:** .....100 ppm/°C (Typical)  
**Warm up time:** .....2 minutes  
**Conversion Rate:** .....3 conversions per second (Typical)  
**Display:** .....**3 1/2 digit 0.56" Red LED display (std)**,  
 0.56" or 0.8" Green or Super Bright Red (optn). Range –1999 to 1999 counts.  
**Polarity:** .....Assumed positive. Displays – negative  
**Decimal Selection:** .....Header under face plate, X•X•X•X  
**Positive Overrange:**...1 (MSD) is displayed with all other digits blank.  
**Negative Overrange:** 1 (MSD) and – sign are displayed with all other digits blank.  
**Power Supply:** .....AC/DC Auto sensing wide range supply  
**PS1 (std)** .....**85-265 VAC / 95-370 VDC @ 2.5W**  
**PS2** .....15-48 VAC / 10-72 VDC @ 2.5W  
**Operating Temp.:** .....0 to 60 °C  
**Storage Temp:** .....–20 °C to 70 °C.  
**Relative Humidity:** .....95% (non condensing)  
**Case Dimensions:** ....1/8 DIN, Bezel: 96x48 mm (3.78"x1.89")  
 Depth behind bezel: 117 mm (4.61")  
 Plus 11.8 mm (0.47") for Right-angled connector or plus 20 mm (0.79") for Straight-thru connector.  
**Weight:** .....8 oz., 11 oz when packed.

### Index


Case Dimensions .....	7	Input Module Calibration Procedures .....	6-7
Component Layout .....	3	Input Module Compatibility .....	1
Connector Pinouts .....	2	Input Module Component Glossary .....	6
Connectors .....	2	Ordering Information .....	8
Functional Diagram .....	2	Pin Descriptions .....	2
General Features .....	1	Specifications .....	1
<b>I-Series</b> Input Signal Conditioning Modules .....	3-5		

# Functional Diagram

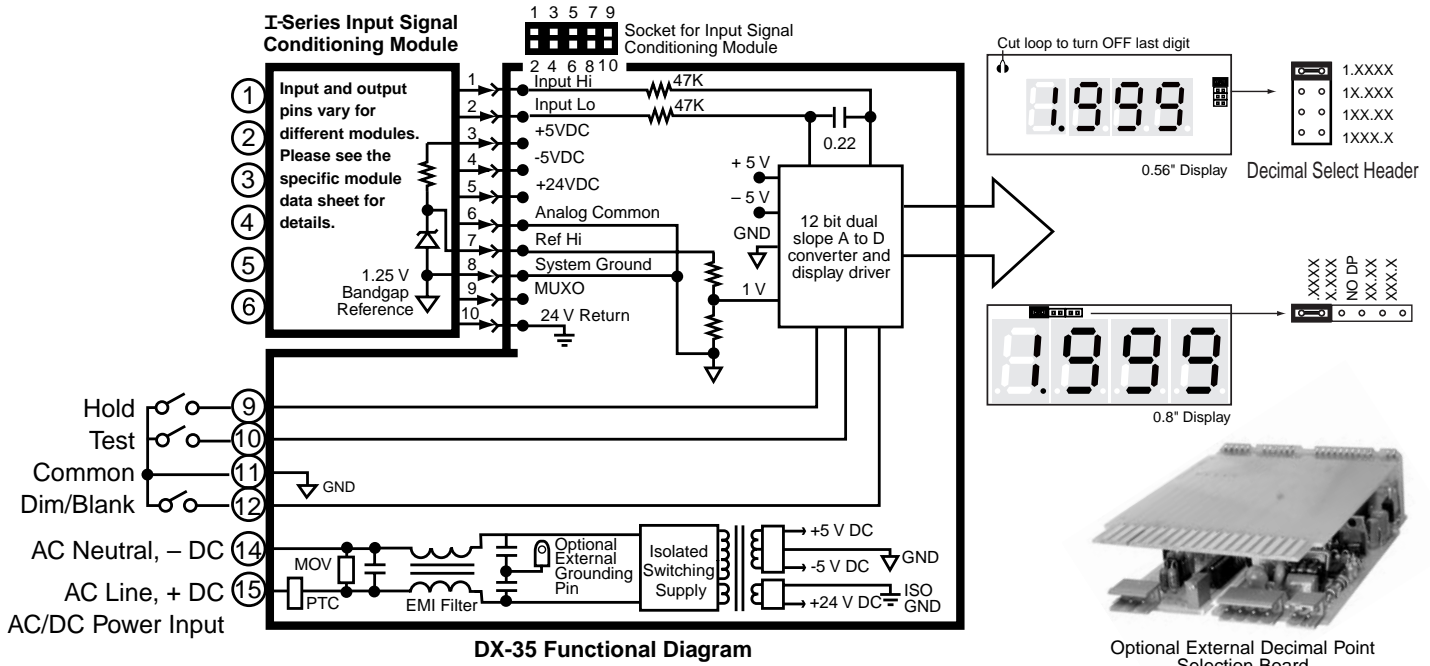


## Connector Pinouts

This meter uses plug-in type screw terminal connectors for all connections.

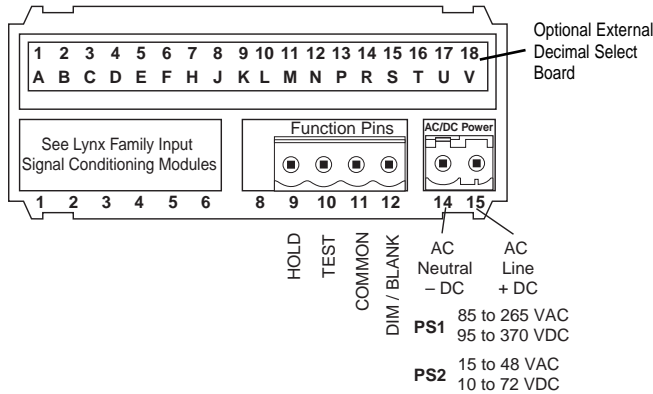

## Connectors

This meter uses plug-in type screw terminal connectors for all input and output connections. The power supply connections (pins 14 and 15) have a unique plug and socket outline to prevent cross connection. The main board uses standard right-angled connectors.

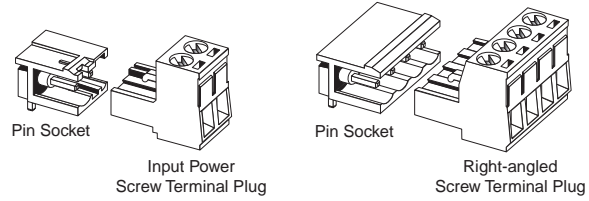

**WARNING:** AC and DC input signals and power supply voltages can be hazardous. Do Not connect live wires to screw terminal plugs, and do not insert, remove or handle screw terminal plugs with live wires connected.

## Pin Descriptions

**Pins 1 to 6 - Input Module:** See the individual pin out of the input signal conditioning module selected. Usually Pin 1 is the Signal Input High pin and Pin 3 is the Signal Input Low pin. All calibration and scaling functions are performed on the individual input signal conditioner module. See pages 6 and 7.

**Pin 9 - Hold:** If this pin is left unconnected the meter will operate in a free running mode. When this pin is connected to the Common Pin 11, the meter display will be latched. A/D conversions will continue, but the display will not be updated until Pin 9 is disconnected from Pin 11.

**Pin 10 - Display Test:** When this pin is connected to the Common Pin 11, all segments of the display light up and 1888 is displayed. This is used to detect any missing segments in the display.

**Pin 11 - Common:** To Hold, Test or Dim the display, the respective pins have to be connected to this Common Pin.

**Pin 12 - Dim/Blank:** When this pin is connected to the Common Pin 11 the display is blanked out. If it is connected through an external 1KΩ pot, the display may be dimmed.


**Pin 14 & 15 - AC/DC Power Input:** These pins are the power pins of the meter and they only accept a special polarized screw terminal plug that can not be inserted into any other input socket. The standard meter has a auto sensing AC/DC power supply that operates from 85-265 VAC/95-370 VDC (PS1 Std). An optional isolated low voltage power supply that operates from 15-48 VAC/10-72 VDC (PS2) is also available.

### OPTIONAL EXTERNAL DECIMAL POINT SELECTION BOARD


- Pins 6, F - Decimal Common:** Connect to these pins to activate decimals.
- Pins 7, H - Decimal XXXX.:** Connect to pin 6 or pin F to activate decimal XXXX..
- Pins 8, J - Decimal XXX.X:** Connect to pin 6 or pin F to activate decimal XXX.X.
- Pins 9, K - Decimal XX.XX:** Connect to pin 6 or pin F to activate decimal XX.XX.
- Pins 10, L - Decimal X.XXX:** Connect to pin 6 or pin F to activate decimal X.XXX.

# Component Layout

## DX-35-XX-PS1 (High Voltage)

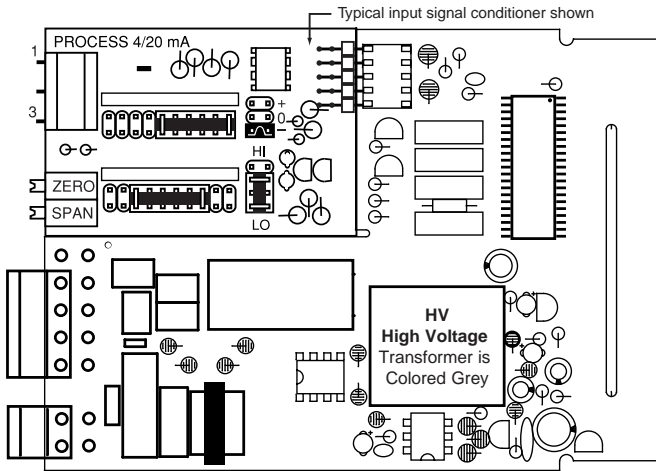

## DX-35-XX-PS2 (Low Voltage)

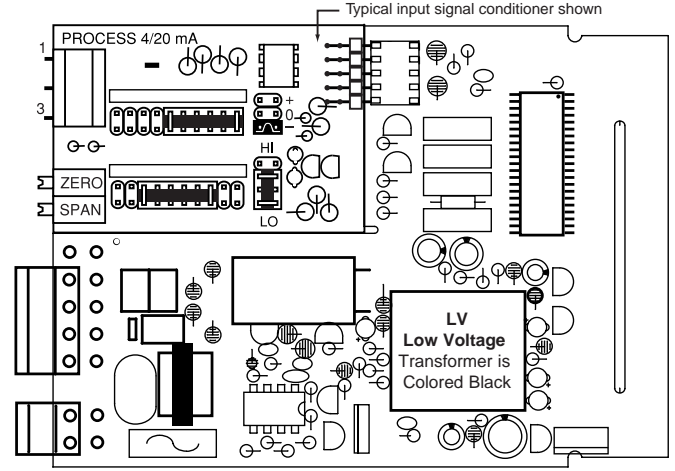

## I-Series Input Signal Conditioning Modules

Many additional input modules are available and others are constantly being developed. Check with your local distributor or [www.texmate.com](http://www.texmate.com) for updated information.


Precalibrated **I-Series** input modules, that have span or zero potentiometers, can be interchanged between any **I-Series** compatible meter, without recalibration, because all of the analog scaling and reference circuitry is self-contained within the module. Where appropriate, all the standard ranges shown are designed to be header selectable by the user, and Texmate's unique SPAN ADJUST Header facilitates scaling to almost any required engineering unit. See Input Module Component Glossary and Calibration on pages 6 and 8.

Unless otherwise specified Texmate will ship all modules precalibrated with factory preselected ranges and/or scalings as shown in **BOLD** type. Other precalibrated standard ranges or custom ranges may be ordered. Factory installed custom scaling and other custom options are also available (see Ordering Information, Special Options on last page).


### Symbols Indicate Module Compatibility Within Meter Families

TIGER Family	TIGER Family	TIGER Family
LEOPARD Family	LEOPARD Family	LEOPARD Family
LYNX Family	LYNX Family	LYNX Family
<b>ALL MODELS</b>	<b>SOME MODELS</b>	<b>MODEL SPECIFIC</b>

### IA03: AC Milliamps Scaled RMS, 2/**20**/200mA AC

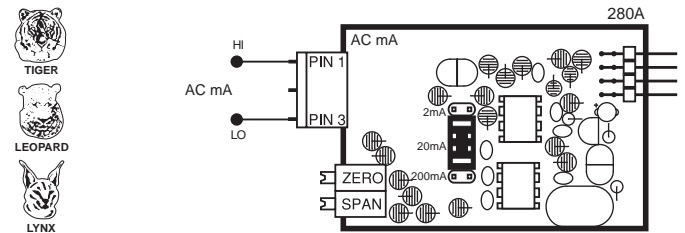


### IA01: AC Volts Scaled RMS, 200/**600V** AC

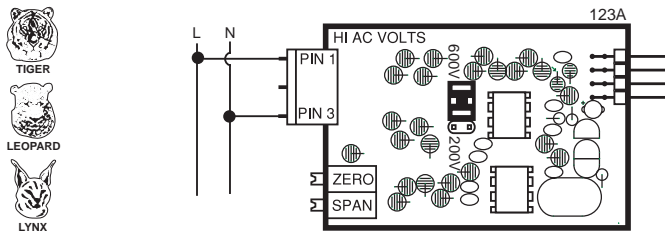


### IA04: AC Amps Scaled RMS, **1 Amp AC**


### IA05: AC Amps Scaled RMS, **5 Amp AC**

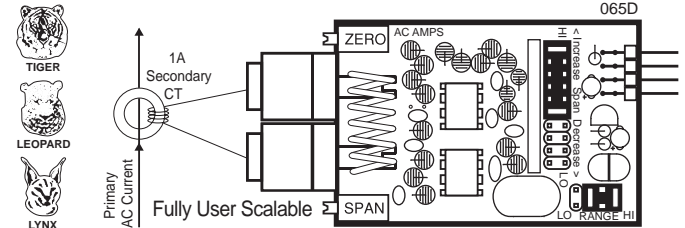


### IA02: AC Volts Scaled RMS, 200mV/**2V**/**20V** AC

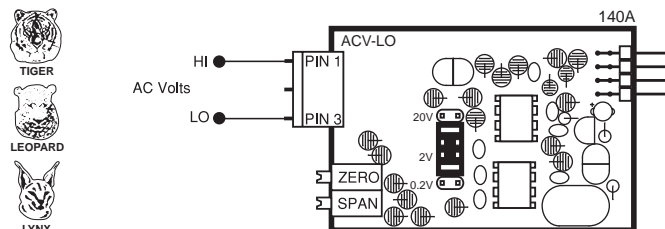


### IA06: AC Volts True RMS, **300/600V** AC

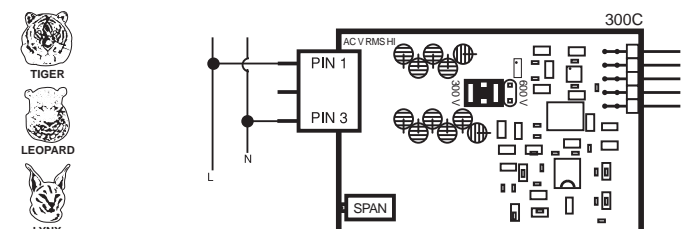


**IA07: AC Volts True RMS, 200mV/2V/20V AC**

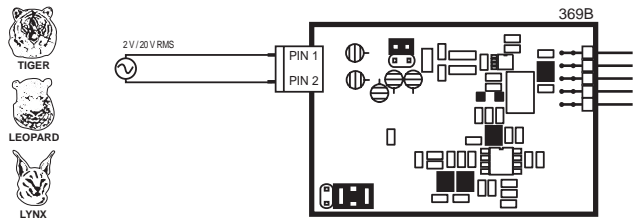


**IA08: AC Milliamps True RMS, 2/20/200mA AC**

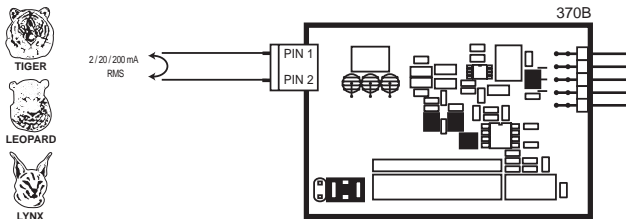


**IA09: AC Amps True RMS, 1 Amp AC**  
**IA11: AC Amps True RMS, 5 Amp AC**

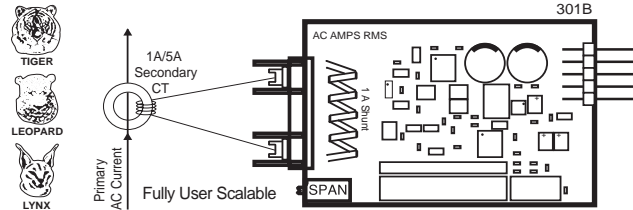


**IA10 AC Millivolts, Scaled RMS, 100mV AC**

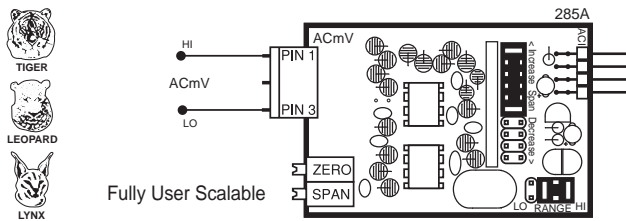


**IA12: AC Millivolt RMS Sigma Delta**

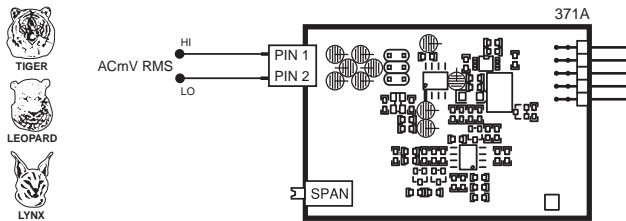


**ID01: DC Volts, 2/20/200V/Custom w/24V DC Exc**

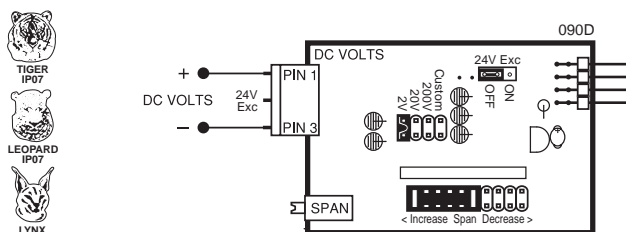


**ID02: DC Millivolts, 20/50/100/200mV DC w/24V DC Exc**

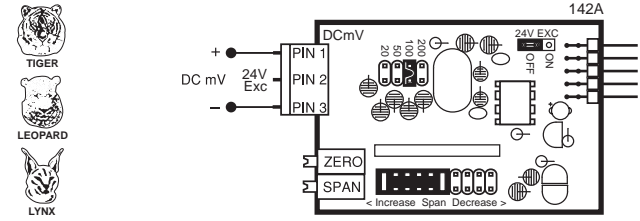


**ID03: DC Milliamps, 2/20/200mA DC w/24V DC Exc**

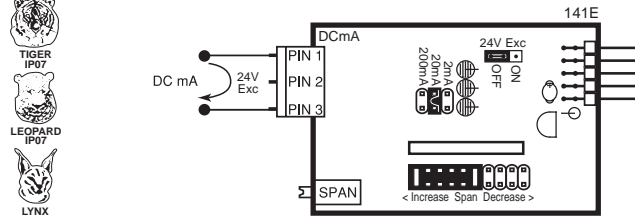


**ID04: DC Amps, 5A DC**  
**ID09: DC Amps, 1A DC**

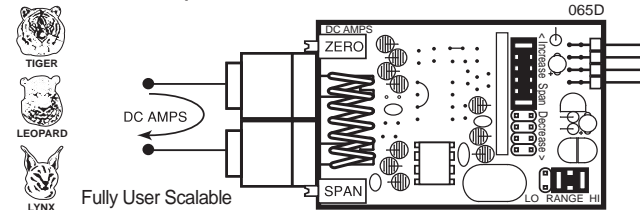


**ID05: DC Volts 2/20/200/Custom V DC with Offset and 24V Exc.**

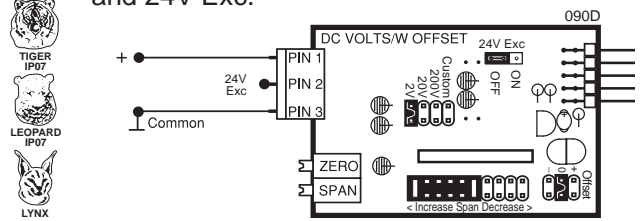

**ID07: DC Milliamps, 2/20/200mA DC with Offset and 24V Exc**

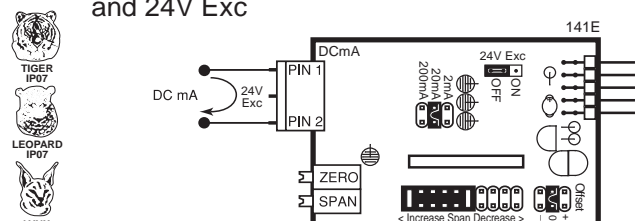


**IF02: Line Frequency**

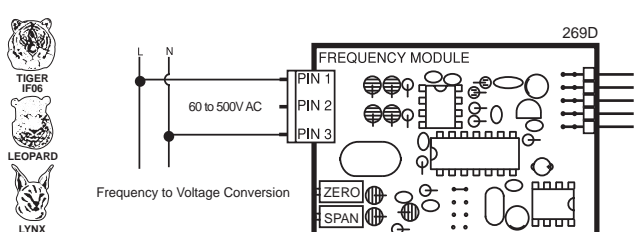


# I-Series Input Signal Conditioning Modules Continued

**IGYZ: Universal Direct Pressure (Absolute or Differential/Gage)**  
See below for ordering code options

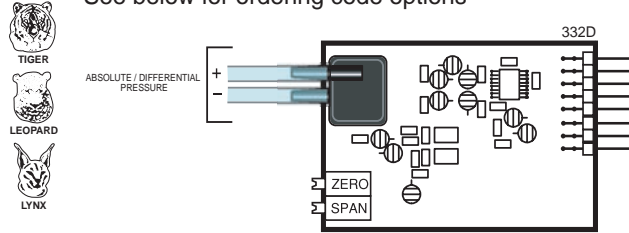

**IRO4: Resistance 2KΩ (Lynx only)**  
**IRO5: Resistance 2KΩ (Leopard only)**

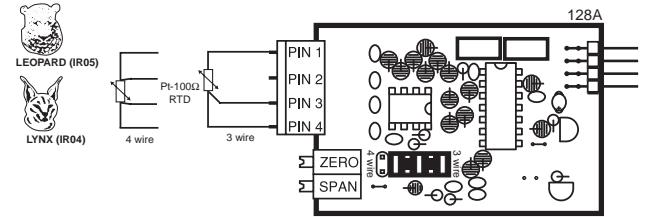


**Ordering Code Options for Direct Pressure (IGYX, IGY & IGYZ)**

Sensor Range	CH1 Order Code	CH2 Order Code
1 psi Absolute	A	A
1 psi Differential	B	B
5 psi Absolute	C	C
5 psi Differential	D	D
15 psi Absolute	E	E
15 psi Differential	F	F
30 psi Absolute	G	G
30 psi Differential	H	H
100 psi Absolute	J	J
100 psi Differential	K	K


For Single Channel IGYX with two digital inputs, the last digit of order code is always X.

For Universal Direct Pressure IGYZ, the last digit of order code is always Z.


**ISO5: Pressure/Load Cell 20/2mV/V, 5/10V Exc 4-wire**

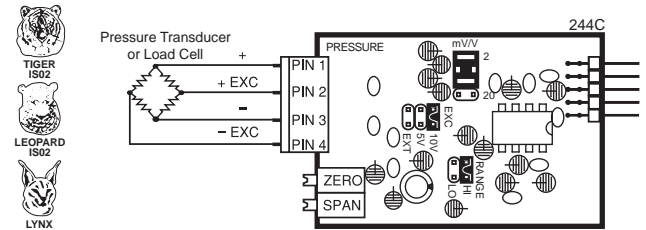


**IPO1: Process Loop, 4-20mA**  
**IPO2: Process Loop, 4-20mA with 24VDC EXC**

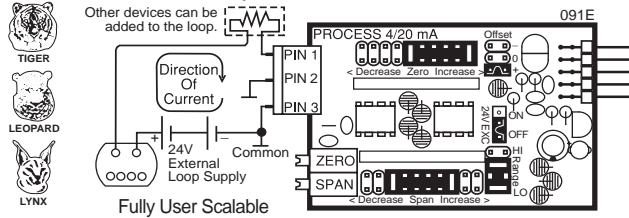


**ISO6: Pressure/Load Cell Ext Exc., 20/2mV/V, 4-wire**

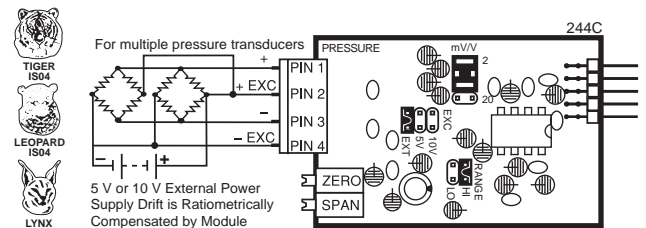


**IPO3: Process Input, 1-5V DC with Offset, 24V Exc**

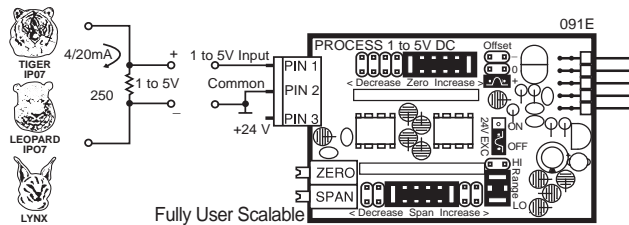


**IT03: RTD, 100 Pt. 2/ 3/4-wire (-200 to 800°C)**  
**IT04: RTD, 100 Pt. 2/ 3/4-wire (-200 to 1470°F)**  
**IT05: RTD, 100Ω Pt. 2/3/4-wire (-199.9 to 199.9°F)**  
**IT14: RTD, 100Ω Pt. 2/3/4-wire (-199.9 to 199.9°C)**

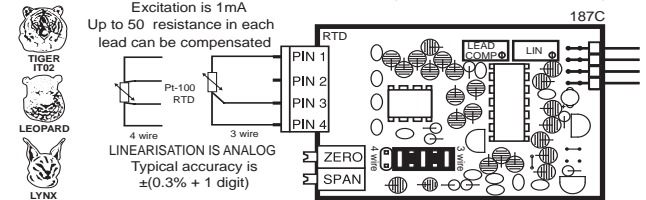


**IRO2: 3 wire Potentiometer 1K min (0-F.S.)**

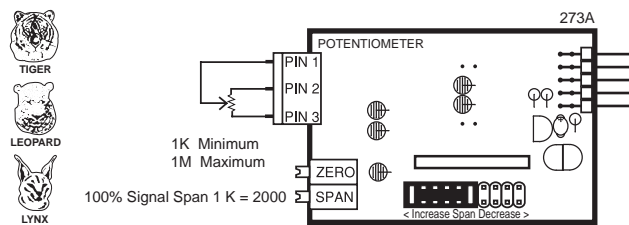


**IT06: Thermocouple, J Type (0-1400 °F)**  
**IT08: Thermocouple, J Type (0-760 °C)**

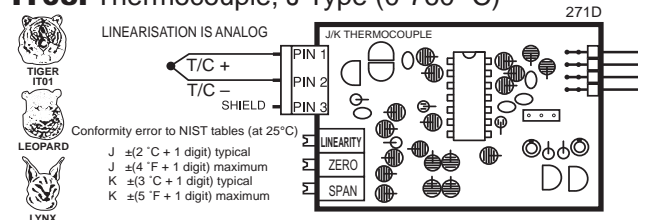


**IRO3: Linear Potentiometer 1KΩ min**

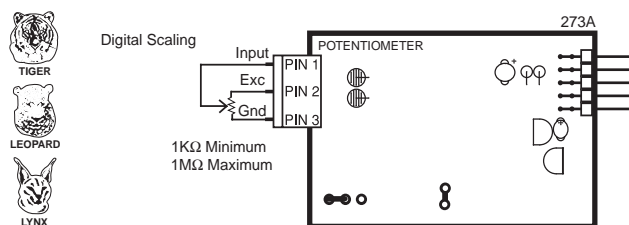


**IT07: Thermocouple, K Type (0-1999 °F)**  
**IT09: Thermocouple, K Type (0-1260 °C)**

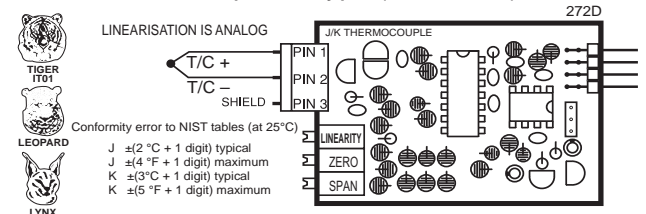




**Input and Output Pins**

On most modules Pin 1 is the Signal High input and Pin 3 is the Signal Low input. Typically Pin 2 is used for Excitation Voltage output.




**24V DC Output Header**

On some modules this header enables a 24V DC 25mA (max) Excitation/Auxiliary output to be connected to Pin 2.




**INPUT RANGE Header**

Range values are marked on the PCB. Typically two to four positions are provided, which are selected with either a single or multiple jumper clip. When provided, a custom range position is only functional when the option has been factory installed.

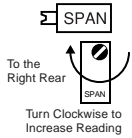


**SPAN Potentiometer (Pot)**

If provided, the 15 turn SPAN pot is always on the right side (as viewed from the rear of the meter). Typical adjustment is 20% of the input signal range.




**SPAN ADJUST Header**

This unique five-position header expands the adjustment range of the SPAN pot into five equal 20% steps, across 100% of the input Signal Span. Any input Signal Span can then be precisely scaled down to provide any required Digital Display span from 1999 counts to 001 (one count).




**SPAN RANGE Header**


When this header is provided it works in conjunction with the SPAN ADJUST Header by splitting its adjustment range into a Hi and a Lo range. This has the effect of dividing the adjustment range of the SPAN pot into ten equal 10% steps across 100% of the input Signal Span.



SPAN Adjust Header position	1	2	3	4	5
SPAN Pot %	20%	20%	20%	20%	20%
Signal Span %	20%	40%	60%	80%	100%




**ZERO OFFSET RANGE Header**



When provided, this three position header increases the ZERO pot's capability to offset the input signal, to  $\pm 25\%$  of the digital display span. For example a Negative offset enables a 1 to 5V input to display 0 to full scale. The user can select negative offset, positive offset, or no offset (ZERO pot disabled for two step non-interactive span and offset calibration).

NEGATIVE OFFSET Decreases Digital Reading		POSITIVE OFFSET Increases Digital Reading	
ZERO Pot%	- 100% of Offset	No Offset Zero Pot Disabled	+ 100% of Offset
Offset Range	$\approx - 500$ Counts		$\approx + 500$ Counts

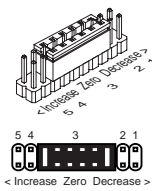

**ZERO ADJUST Header**

When this header is provided, it works in conjunction with the ZERO OFFSET RANGE Header, and expands the ZERO pot's offset capability into five equal negative steps or five equal positive steps. This enables virtually any degree of input signal offset required to display any desired engineering unit of measure.

NEGATIVE OFFSET Decreases Zero		POSITIVE OFFSET Increases Zero	
ZERO Adjust Header position	5 4 3 2 1	No Offset Zero Pot Disabled	1 2 3 4 5
ZERO Pot %	-20% -20% -20% -20% -20%		+20% +20% +20% +20% +20%
Offset Range	-1200 or more counts		+1200 or more counts



**Input Module Calibration**



**WARNING:** AC and DC input signals and power supply voltages can be hazardous. Do Not insert, remove or handle modules with live wires connected to any terminal plugs.

**Basic standard range calibration of direct reading modules that utilize either Auto Zero or a ZERO pot, an INPUT RANGE Header and or a SPAN pot.**

- 1 If the module has an INPUT RANGE Header, reposition the jumper clip to select the desired input signal range.
2. Apply a zero input or short the input pins. The display will auto zero, or if the module has a ZERO pot, it should be adjusted until the display reads zero.
- 3 Apply a known input signal that is at least 20% of the full scale input range and adjust the SPAN pot until the display reads the exact input value.
- 4 Decimal Points. The selection or positioning of decimal points has no effect on the calibration of the modules


**Wide range scaling, in engineering units not requiring offsets, with modules that utilize auto-zero or a ZERO pot, a SPAN RANGE Header and or a SPAN ADJUST Header.**

Texmate's unique SPAN ADJUST and SPAN RANGE Headers provide the circuit equivalent of an ultra-precision one megohm 75 or 150 turn potentiometer that can infinitely scale down any Input Signal SPAN to provide any full scale Digital Display Span from 1999 (counts) to 001 (one count).



**ZERO Potentiometer (Pot)**

If provided, the ZERO pot is always to the left of the SPAN pot (as viewed from the rear of the meter). Typically it enables the input signal to be offset  $\pm 5\%$  of full scale (-100 to +100 counts).



## Input Module Calibration Procedures Continued

If the module has an INPUT RANGE Header, and the required full scale Digital Display Span (counts) is to be larger than the directly measured value of the input Signal Span, then the next lower range on the INPUT RANGE Header should be selected. The resulting over range Signal Span is then scaled down, by selecting the position of the SPAN RANGE Header and or the SPAN ADJUST Header, which will reduce the input Signal Span to a percentage, that the required Digital Display Span can be reached by calibration with the SPAN pot.

**Example A:** 0 to 10 V to read 0 to 1800 gallons.

Signal Span = 10V, Digital Display Span = 1800 counts

- 1 Select the 2 V INPUT RANGE Header position. This will provide a digital display of 1800 counts with an input of only 1.8 V which is  $(1.8 \div 10) = 18\%$  of the examples 10 V Signal Span.
- 2 To scale down the Signal Span to 18% select the 20% Signal Span position on the SPAN ADJUST Header (position 1) or if the module has a SPAN RANGE Header, select (LO Range) and 20% Signal Span position on the SPAN ADJUST Header (position 2).
- 3 Apply a zero input or short the input pins. The display will auto zero, or if the module has a ZERO pot, it should be adjusted until the display reads zero.
- 4 Apply 10 V and adjust the SPAN pot until the display reads 1800.

### Large offset scaling and calibration of process signal inputs with modules that utilize ZERO ADJUST Headers and or ZERO OFFSET RANGE Headers.

Texmate's unique ZERO OFFSET RANGE Header enables the use of a simple two step scaling and calibration procedure for those process signals that require large offsets. This eliminates the back and forth interaction, between zero and span settings, that is often required to calibrate less finely engineered products.

The first step is to set the ZERO OFFSET RANGE Header to the center position (No Offset) and scale down the Input Signal Span to a percentage that will enable calibration with the SPAN pot to reach the required Digital Display Span.

The second step is to set the ZERO ADJUST and or ZERO OFFSET RANGE Header to provide a positive or negative offset of sufficient counts that calibration with the ZERO pot will offset the Digital Display

Span to produce the required digital reading.

**Example B:** 1 to 5 V to read -100 to 1500 °C.

Signal Span = 4V, Digital Display Span = 1600 counts


- 1 If the module has an INPUT RANGE Header the 2 V position should be selected. This will provide a digital display of 1600 counts for an input of 1.6 V which is  $(1.6 \div 4) = 40\%$  of the examples 4 V signal span. To scale down the Signal Span to 40% select the 40% Signal Span position on the SPAN ADJUST Header (position 2).
- 2 If the module is a Process Input 1-5 V DC type, select the (Hi Range) position on the SPAN RANGE Header and the 100% Signal Span position on the SPAN ADJUST Header (position 5, max increase). This will provide a digital display of 1600 counts for an input of 4V which is 100% of the examples 4V Signal Span.
- 3 Set the ZERO OFFSET RANGE Header to the center position (no offset). Apply 1 V and adjust the SPAN pot until the display reads 400 . A 4V input would then read 1600 counts.
- 4 Set the ZERO OFFSET RANGE Header to the negative offset position. If the module has a ZERO ADJUST Header select the position that will provide a negative offset of  $\approx -500$  counts. Apply 1 V and adjust the ZERO pot until the display reads -100. Apply 5 V and check that the display reads 1500.

**Example C:** 4 to 20 mA to read 00.0 to +100.0%


Signal Span = 16 mA, Digital Display Span = 1000 counts.

- 1 The full scale Signal Span of the Process Input 4-20 mA modules is 0 to 20 mA for a full scale Digital Display Span of 0 to 2000 counts. This will provide a digital display of 1000 counts with an input of only 10 mA which is  $(10 \div 16) = 62.5\%$  of the examples 16 mA signal span.
- 2 To scale down the Signal Span to 62.5% select the (Hi Range) Position on the Span Range Header and the 70% Signal Span position on the SPAN ADJUST Header (position 2).
- 3 Set the ZERO OFFSET RANGE Header to the center position (no offset). Apply 4 mA and adjust the SPAN pot until the display reads 250 . A 16 mA input would then read 1000 counts.
- 4 Set the ZERO OFFSET RANGE Header to the positive offset position. If the module has a ZERO ADJUST Header select the position that will provide a negative offset of  $\approx -250$  counts. Apply 4 mA and adjust the ZERO pot until the display reads 000. Apply 20 mA and check that the display reads 1000. Select decimal point 1XX.X to display 00.0 to 100.0.

## Case Dimensions

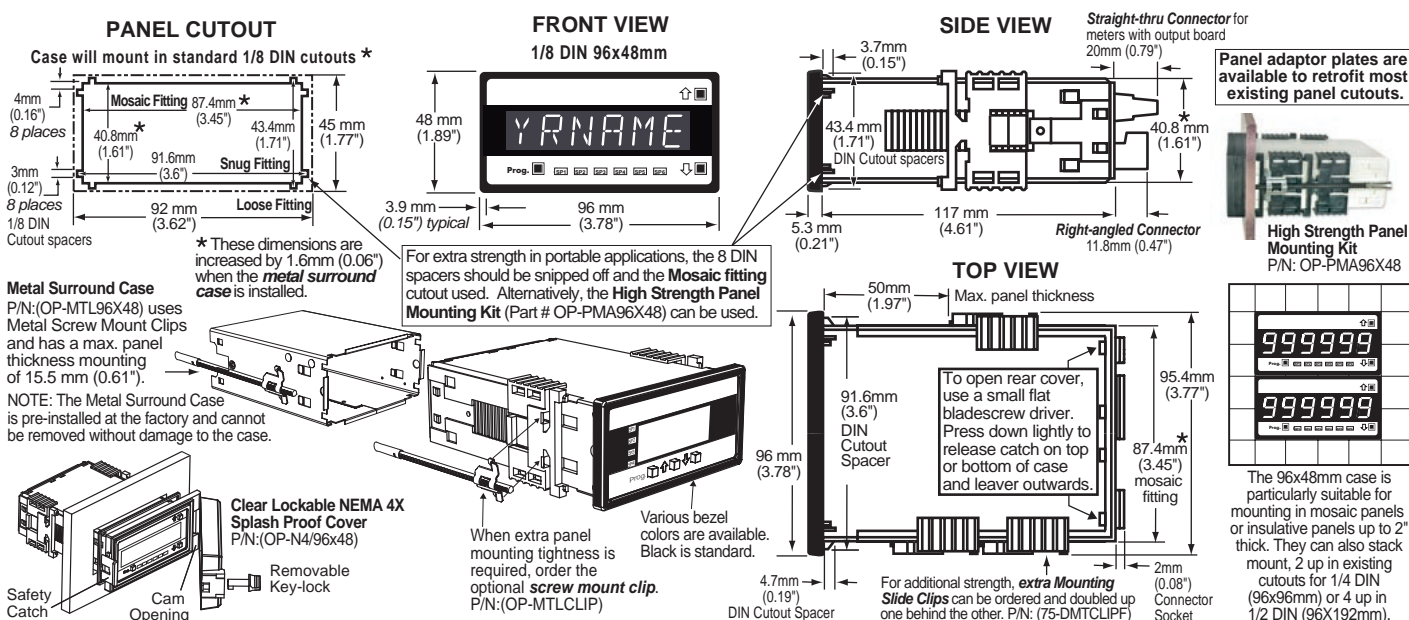

# Ordering Information



Add to the basic model number the order code suffix for each standard option required. The last suffix is to indicate how many different special options and or accessories that you require to be included with this product.

**Ordering Example: DX-35-DR-PS1-IA01-OA2, the 2 OA's are, CR-CHANGE and an OP-N4X/96x48,**

**► BASIC MODEL NUMBER**

DX-35 . . . . 96x48mm. Lynx, 3.5 Digit . . . . .

**Standard Options for this Model Number**

Order Code Suffix	Description	List
<b>► DISPLAY</b>		
DR	.Red LED, 0.56 inch high . . . . .	
DB	.Super-bright Red LED, 0.56 inch high . . . . .	
DG	.Green LED, 0.56 inch high . . . . .	
LG	.Large Green LED, 0.8 inch high . . . . .	
LR	.Large Red LED, 0.8 inch high . . . . .	
<b>► POWER SUPPLY</b>		
PS1	.85-265VAC/95-370VDC . . . . .	
PS2	.15-48VAC/10-72VDC . . . . .	

**► INPUT MODULES (Partial List. See www.texmate.com)**  
 Unless otherwise specified Texmate will ship all modules precalibrated with factory preselected ranges and/or scalings as shown in **BOLD** type.

IA01	.AC-Volts Scaled RMS, 200/ <b>600V</b> AC . . . . .	
IA02	.AC-Volts Scaled RMS, 200mV/ <b>2V/20V</b> AC . . . . .	
IA03	.AC-mA Scaled RMS, 2/ <b>20/200mA</b> AC . . . . .	
IA04	.AC-Amps Scaled RMS, <b>0-1 Amp AC (0-100.00)</b> . . . . .	
IA05	.AC-Amps Scaled RMS, <b>0-5 Amp AC (0-100.00)</b> . . . . .	
IA06	.AC-Volts True RMS, 200/ <b>600V</b> AC . . . . .	
IA07	.AC-Volts True RMS, 200mV/ <b>2V/20V</b> AC . . . . .	
IA08	.AC-mA True RMS, 2/ <b>20/200mA</b> AC . . . . .	
IA09	.AC-Amps True RMS, <b>0-1 Amp AC (0-100.00)</b> . . . . .	
IA10	.AC-Millivolt, Scaled RMS, <b>100mV AC</b> . . . . .	
IA11	.AC-Amps True RMS, <b>0-5 Amp AC (0-100.00)</b> . . . . .	
IA12	.AC-Millivolt, True RMS, <b>100mV AC</b> . . . . .	
ID01	.DC-Volts, 2/ <b>20/200V/Custom</b> w/24V DC Exc . . . . .	
ID02	.DC-Millivolt, 20/50/ <b>100/200mV</b> DC w/24V DC Exc . . . . .	
ID03	.DC-Milliamp, 2/ <b>20/200mA</b> DC w/24V DC Exc . . . . .	
ID04	.DC-Amps, <b>5A DC</b> . . . . .	
ID05	.DC-Volts 2/ <b>20/200/Custom</b> V DC w/Offset and 24V Exc. . . . .	
ID07	.DC-Milliamp, 2/ <b>20/200mA</b> DC w/Offset and 24V Exc . . . . .	
ID09	.DC-Amps, <b>1A DC</b> . . . . .	
IF02	.Line Frequency, 50-500VAC, 199.9Hz, or optional 400Hz . . . . .	
IGYZ*	.Universal Direct Pressure . . . . .	

\*View the IG- Ordering Code on page 5 to determine the value for Y & Z (IGAZ to IGKZ)  
 IP01 . . Process Loop, **4-20mA(0-100.00)** . . . . .  
 IP02 . . Process Loop, **4-20mA(0-100.00)** w/24VDC Exc . . . . .

IP03	.Process Input, <b>1-5V DC(0-100.00)</b> w/Offset, 24V Exc . . . . .	
IPT1	.Prototype Board for Custom Design . . . . .	
IR02	.3-Wire Potentiometer 1K $\Omega$ min (0-F.S.) . . . . .	
IR03	.Linear Potentiometer, 3-wire, 1K $\Omega$ min . . . . .	
IR04	.Resistance 2K $\Omega$ . . . . .	
IS04	.Pressure Ext Exc., 20/2mV/V, <b>4/6-wire</b> . . . . .	
IS05	.Pressure/Load Cell 20/2mV/V, 5/10V Exc 4-wire . . . . .	
IS06	.Pressure/Load Cell Ext Exc., 20/2mV/V, 4-wire . . . . .	
IT03	.RTD, 100 $\Omega$ Pt. 2/3/4-wire ( <b>-200 to 800°C</b> ) . . . . .	
IT04	.RTD, 100 $\Omega$ Pt. 2/3/4-wire ( <b>-200 to 1470°F</b> ) . . . . .	
IT05	.RTD, 100 $\Omega$ Pt. 2/3/4-wire ( <b>-190.0 to 199.0°F</b> ) . . . . .	
IT06	.Thermocouple, J Type ( <b>0-1400 °F</b> ) . . . . .	
IT07	.Thermocouple, K Type ( <b>0-1999°F</b> ) . . . . .	
IT08	.Thermocouple, J Type ( <b>0-760 °C</b> ) . . . . .	
IT09	.Thermocouple, K Type ( <b>0-1260°C</b> ) . . . . .	
IT14	.RTD, 100 $\Omega$ Pt. 2/3/4-wire ( <b>-199.0 to 199.0°C</b> ) . . . . .	

**Special Options and Accessories (OA's)**

Part Number	Description	List
<b>► SPECIAL OPTIONS (Specify Input &amp; Req. Reading)</b>		
CR-CHANGE	.Calibrated Range Change to another Standard Range . . . . .	
CS-3/3.5/4	.Custom Scaling within any Std. or Custom Selectable Range . . . . .	
CSR-SETUP	.NRC to Set-up Custom Selectable Range . . . . .	
CSR-INSTL	.Installation of Custom Selectable Range . . . . .	
CSS-SETUP	.NRC to Set-up Custom Special Scaling . . . . .	
CSS-34/INSTL	.Installation of Custom Special Scaling of Digits . . . . .	
OP-DXEXTDP	.External Dec. Pt. W/Conn. Option - Factory Installed . . . . .	

<b>► ACCESSORIES (Specify Serial # for Custom Artwork Installation)</b>		
75-DBBZ9648F	.Extra Black Bezel for 96x48mm Case . . . . .	
75-DMTCLIPF	.Side Slide Brackets (2 pc) - extra set, extra strength . . . . .	
76-D35G-N4	.NEMA 4 Green LED Faceplate, Factory Installed . . . . .	
76-D35LG-N4	.NEMA 4 Large Green LED Faceplate, Factory Installed . . . . .	
76-D35LR-N4	.NEMA 4 Large Red LED Faceplate, Factory Installed . . . . .	
76-D35R-N4	.NEMA 4 Red LED Faceplate, Factory Installed . . . . .	
CN-L18	.Dual Row 18 Pin Edge Connector, Solder Type . . . . .	
DN.CAS96X48A	.Complete 96 X 48 mm Case with bezel . . . . .	
OP-MTLCLIP	.Screw Mount Clips (2 pc) - to screw tighten slide brackets . . . . .	
OP-MTL96X48	.Metal Surround Case, includes screw mounting clips . . . . .	
OP-N4X/96X48	.96x48mm clear lockable front cover-NEMA 4X, splash proof . . . . .	

Many other options and accessories are available. See full price list for more details.  
 Prices subject to change without notice.

**WARRANTY**

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

**USER'S RESPONSIBILITY**

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, **NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE** is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.



450 State Place, Escondido, CA 92029  
 Tel: 1-760-598-9899 • USA 1-800-839-6283 • That's 1-800-TEXMATE  
 Fax: 1-760-598-9828 • Email: orders@texmate.com • Web: www.texmate.com

Texmate has facilities in Japan, New Zealand, Taiwan, and Thailand. We also have authorized distributors throughout the USA and in 28 other countries.

**For product details visit www.texmate.com**  
 Local Distributor Address