


# Tiger 320 Series PROGRAMMING CODE SHEET

## Front panel programming

This programming code sheet (PCS) is a quick reference document that allows you to quickly view the meter's programming codes.

When you become familiar with the meter and the programming code structure, the PCS can be used in place of the user manual.

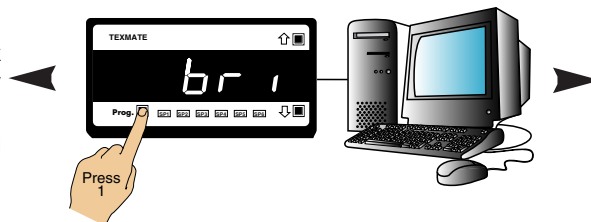

## Programming via PC

### Meter configuration utility program

With a serial output module installed, the meter can be fully configured through the **meter configuration utility program**. In addition to all application function settings, the configuration program also provides access to added features such as:

- Code blanking.
- Display text editing.
- Configuration data copying.
- Downloading macros to the meter.

## Macros

Texmate has a growing library of macros to suit a wide range of standard customer applications. Macros can be installed in the meter, via the compiler or configuration program, and run automatically when the meter is powered up.

## Tamper-proof settings


All Tiger 320 Series meters have tamper-proof lockout switches to prevent users' configuration settings from being inadvertently changed.

Code blanking is also used (via the PC) to blank out codes not used, making them operator tamper-proof, but leaving selected codes open for operator adjustment.

### Note:

All displays shown in this code sheet are for a 5-digit, 7-segment display. 6-digit and alphanumeric displays will be slightly different.

To configure the meter's programming codes, the meter uses the three right-hand side display digits. These are known as the first, second, and third digits and can be seen in the diagram opposite.

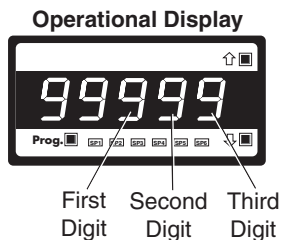

The logic diagram on Page 2 shows the code structure of the Tiger 320 Series meter range. Also, the difference between the E and T version of the Tiger range is described. The diagrams on the following pages show the three-digit settings available for each code.

## Code blanking

Code blanking blanks out all function codes not required by the application. This means that procedures such as recalibration and setpoint reprogramming can be achieved in a few simple steps from the front panel buttons.

## Display text editing

This function allows displayed text, such as setpoint titles, to be edited to suit your applications.

For example, a setpoint could be edited to read [TNK\_Lo] for tank level low, or [brKoF] for brake off.


## Configuration data copying

This function allows the current meter configuration settings to be copied and saved for later referral or for restoration.



### Programming Tips

- 1) Use the **[P]** button to step through the codes of the **Main** or **Setpoint** Programming Mode.
- 2) To save a **Main** Programming Mode code setting and return directly to the operational display, press the **[P]** button and then the **[P]** and **[↕]** buttons at the same time.
- 3) To save a **Setpoint** Programming Mode setting and return directly to the operational display, press the **[P]** button and then the **[P]** and **[↕]** buttons at the same time.
- 4) When configuring the three-digit code and setpoint settings, pressing the **[↕]** and **[↕]** buttons at the same time increases the displayed parameter in increments of 100 counts.

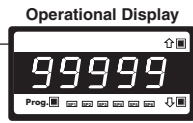

To enter press the **P** and **↑** buttons at the same time

To enter press the **P** and **↓** buttons at the same time

## Main Programming Mode

- [bri]** **Display Brightness**  
**P** Allows you to adjust the display brightness in a range of 8 settings. 0 being dull, 7 being bright.
- [CAL]** **Calibration Modes for Input and Output**  
**P** See Page 2 for code settings to calibrate the meter's input and output signals.
- [Cod\_1]** **Code 1 – Display Configuration**  
**P** See Page 3 for code settings to configure the setpoint annunciators and other display functions.
- [Cod\_2]** **Code 2 – CH1 Measurement Task & Sampling Rate**  
**P** See Page 4 for code settings to configure the CH1 measurement task and sampling rate.
- [Cod\_3]** **Code 3 – CH1 Post Processing & Serial Mode Functions**  
**P** See Page 5 for code settings to configure CH1 post processing and serial mode functions.
- [Cod\_4]** **Code 4 – CH2 Measurement Task & 32-point Linearization**  
**P** See Page 5 for code settings to configure the second channel (CH2) measurement task and 32-point linearization settings when using dual input signal conditioners.
- [Cod\_5]** **Code 5 – CH3 Functions**  
**P** See Page 5 for code settings to configure the third channel (CH3) when using triple input signal conditioners.
- [Cod\_6]** **Code 6 – CH4 Functions**  
**P** See Page 6 for code settings to configure the fourth channel (CH4) when using quad input signal conditioners.
- [Cod\_7]** **Code 7 – Result Processing**  
**P** See Page 6 for code settings to configure the meter for processing the result of CH1 and CH2.
- [Cod\_8]** **Code 8 – Data Logging & Print Mode**  
**P** See Page 6 for code settings to configure data logging and data printing using the meter.
- [Cod\_9]** **Code 9 – Functions for Digital Input Pins**  
**P** See Page 6 for code settings to configure the meter for inputs from external sources through the digital input pins.
- [Cod10]** **Code 10 – Bargraph Setup**  
**P** See Page 7 for code settings to configure the meter's bargraph display.



## Setpoint Programming Mode

### Setpoint Activation Values Mode

Enter these menus to set setpoint (SP) activation values

- [SP\_1]** **Setpoint 1** Default setting = 18000  
**P**
- [SP\_2]** **Setpoint 2** Default setting = -18000  
**P**
- [SP\_3]** **Setpoint 3** Default setting = 5000  
**P**
- [SP\_4]** **Setpoint 4** Default setting = -5000  
**P**
- [SP\_5]** **Setpoint 5** Default setting = 10000  
**P**
- [SP\_6]** **Setpoint 6** Default setting = -10000  
**P**

### Setpoint & Relay Control Settings Mode

Enter these menus to configure SP control settings

- [SPC\_1]** **Setpoint 1** →
- [SPC\_2]** **Setpoint 2** →
- [SPC\_3]** **Setpoint 3** →
- [SPC\_4]** **Setpoint 4** →
- [SPC\_5]** **Setpoint 5** →
- [SPC\_6]** **Setpoint 6** →

The *Setpoint and Relay Control Settings* diagram on Pages 8, 9, and 10 shows the three digit configuration settings that are applied individually to each setpoint.



## E/T Versions of Tiger 320 Series Programmable Meter Controller

Tiger 320 Series Programmable Meter Controllers (PMCs) come in two versions: the economy E version, or the top-of-the-line T version.

The standard E version comes with 4 kilobits of EEPROM installed, whereas the standard T version comes with 32 kilobits of EEPROM installed. Also, the T version can have a macro installed.

The standard 4-kilobit E version can be upgraded to 32 or 512 kilobits. The standard 32-kilobit T version can be upgraded to 512 kilobits. The amount of EEPROM installed in the controller determines the range of functions it is capable of performing. The following table lists the functions that require specific amounts of memory.

| Version | Memory (kilobits) | Functions                                       | Remarks   |
|---------|-------------------|---|---|
| E       | 4 (standard)      | 1 linearization table                           | Table 1 is available to be applied to channels 1 to 4 and result.   |
|         | 32                | 4 linearization tables                          | Tables 1 to 4 are available to be applied to channels 1 and 2 and result.<br><br>Table 3 can be applied to channel 3.<br><br>Table 4 can be applied to channel 4.<br><br>All four tables can be cascaded to form a single 125-point linearization table available to be applied to channels 1 and 2 and result. |
| T       | 512               | Data logging                                    | With 512 kilobits installed, the controller can perform data logging functions along with complete linearization functionality. With a real-time clock installed, date and time stamps can be included.   |
|         | 32 (standard)     | 4 linearization tables<br><br>Macro programming | As for E version with 32 kilobits installed.<br><br>A macro can be programmed to suit a user's logic control application.   |
|         | 512               | Data logging                                    | As for E version with 512 kilobits installed, but with macro programming functionality available.   |

# CALIBRATION MODE

This is the default 3rd digit box. If not pointing to another 3rd digit box, all 2nd digit settings should be regarded as pointing to here.

| CALIBRATION MODES FOR INPUT AND OUTPUT  |  | OBJECT FOR 2nd DIGIT                            |             |  |
|---|--|---|-------------|--|
| FIRST DIGIT   | SECOND DIGIT   | THIRD DIGIT                                     | THIRD DIGIT |  |
| 0 Functions Activated by Pressing the PROGRAM Button  | 0 No function  | 0 Result  | 0 -         |  |
|   | 1 On Demand TARE from the PROGRAM button   | 1 Channel 1                                     | 1 CH1       |  |
|   | 2 On Demand Single-point Calibration from the PROGRAM button (requires single input source)  | 2 Channel 2                                     | 2 CH2       |  |
|   | 3 On Demand Two-point Calibration from the PROGRAM button (requires dual input source)   | 3 Channel 3                                     | 3 CH3       |  |
|   | 4 On Demand Primary Input Compensation Mode from the PROGRAM button  | 4 Channel 4                                     | 4 CH4       |  |
|   | 5 On Demand Manual Loader Mode (no increase / decrease with HOLD active)   |   |             |  |
|   | 6 -  |   |             |  |
|   | 7 -  |   |             |  |
|   | Note:<br>When in the TARE mode, a decimal point appears at the right of the display indicating that the tare value is NOT zero.  |   |             |  |
|   | 1 Calibration Procedures   | 0 Manual Calibration (requires NO input source) |             |  |
| 1 Two-point Calibration (requires dual input source)  |  |   |             |  |
| 2 Calibrate Thermocouple (requires K type thermocouple input source)  |  |   |             |  |
| 3 Calibrate RTD (requires RTD 385 input source)   |  |   |             |  |
| 4 Calibrate Smart Input Module. Note: This function is not available on all input modules   |  |   |             |  |
| 5 Calibrate Analog Output mA/V (requires multimeter connected to pins 16 and 17)  |  |   |             |  |
| 2 Related Calibration Functions   | 0 Serial Communications Properties   |   |             |  |
|   | 1 Set Auto Zero Maintenance for 3rd digit  |   |             |  |
|   | 2 Set Averaging Samples & Averaging Window for 3rd digit   |   |             |  |
|   | 3 Totalizer Settings Mode  |   |             |  |
|   | 4 Setup 32-point Linearization Tables  |   |             |  |
|   | 5 Scale Analog Output LOW/HIGH Display Readings  |   |             |  |
|   | 6 -  |   |             |  |
|   | 7 -  |   |             |  |
|   | Note:<br>Select the method of configuring the user defined linearization table: <b>manual</b> or <b>auto</b> setup mode. Then set the table number, date, and serial number before setting the linearization points. Or select [init] to re-initialize the default table settings. |   |             |  |
|   | Note:<br>The input channel setting in the 3rd digit is <b>not</b> relevant to the <b>manual setup mode</b> .   |   |             |  |
| Note:<br>The correct input signal channel must be selected in the 3rd digit when configuring a linearization table using the <b>auto setup mode</b> . |  |   |             |  |

### Converting °F to °C

- 1) Calibrate the meter to suit the temperature sensor input. Use K type thermocouple input for thermocouples. Use RTD 385 for RTDs.
- 2) To convert °F to °C enter the calibration mode and set [CAL] to [10X].
- 3) On a 5-digit meter set the scale factor to [0.5555] and the offset to [-178] counts.
- 4) On a 6-digit meter set the scale factor to [0.55555] and the offset to [-178] counts.

**Ignore the decimal point on OFFSET settings**

| THIRD DIGIT |
|-------------|
| 0 -         |
| 1 CH1       |
| 2 CH2       |
| 3 CH3       |

| THIRD DIGIT |
|-------------|
| 0 -         |
| 1 CH1       |
| 2 CH2       |
| 3 CH3       |
| 4 CH4       |

| THIRD DIGIT       |
|-------------------|
| 0 -               |
| 1 Analog Output 1 |
| 2 Analog Output 2 |


| THIRD DIGIT |
|-------------|
| 0 -         |
| 1 Total 1   |
| 2 Total 2   |

| THIRD DIGIT |
|-------------|
| 0 -         |
| 1 CH1       |
| 2 CH2       |
| 3 CH3       |
| 4 CH4       |

| THIRD DIGIT       |
|-------------------|
| 0 -               |
| 1 Analog Output 1 |
| 2 Analog Output 2 |



# CODE 2

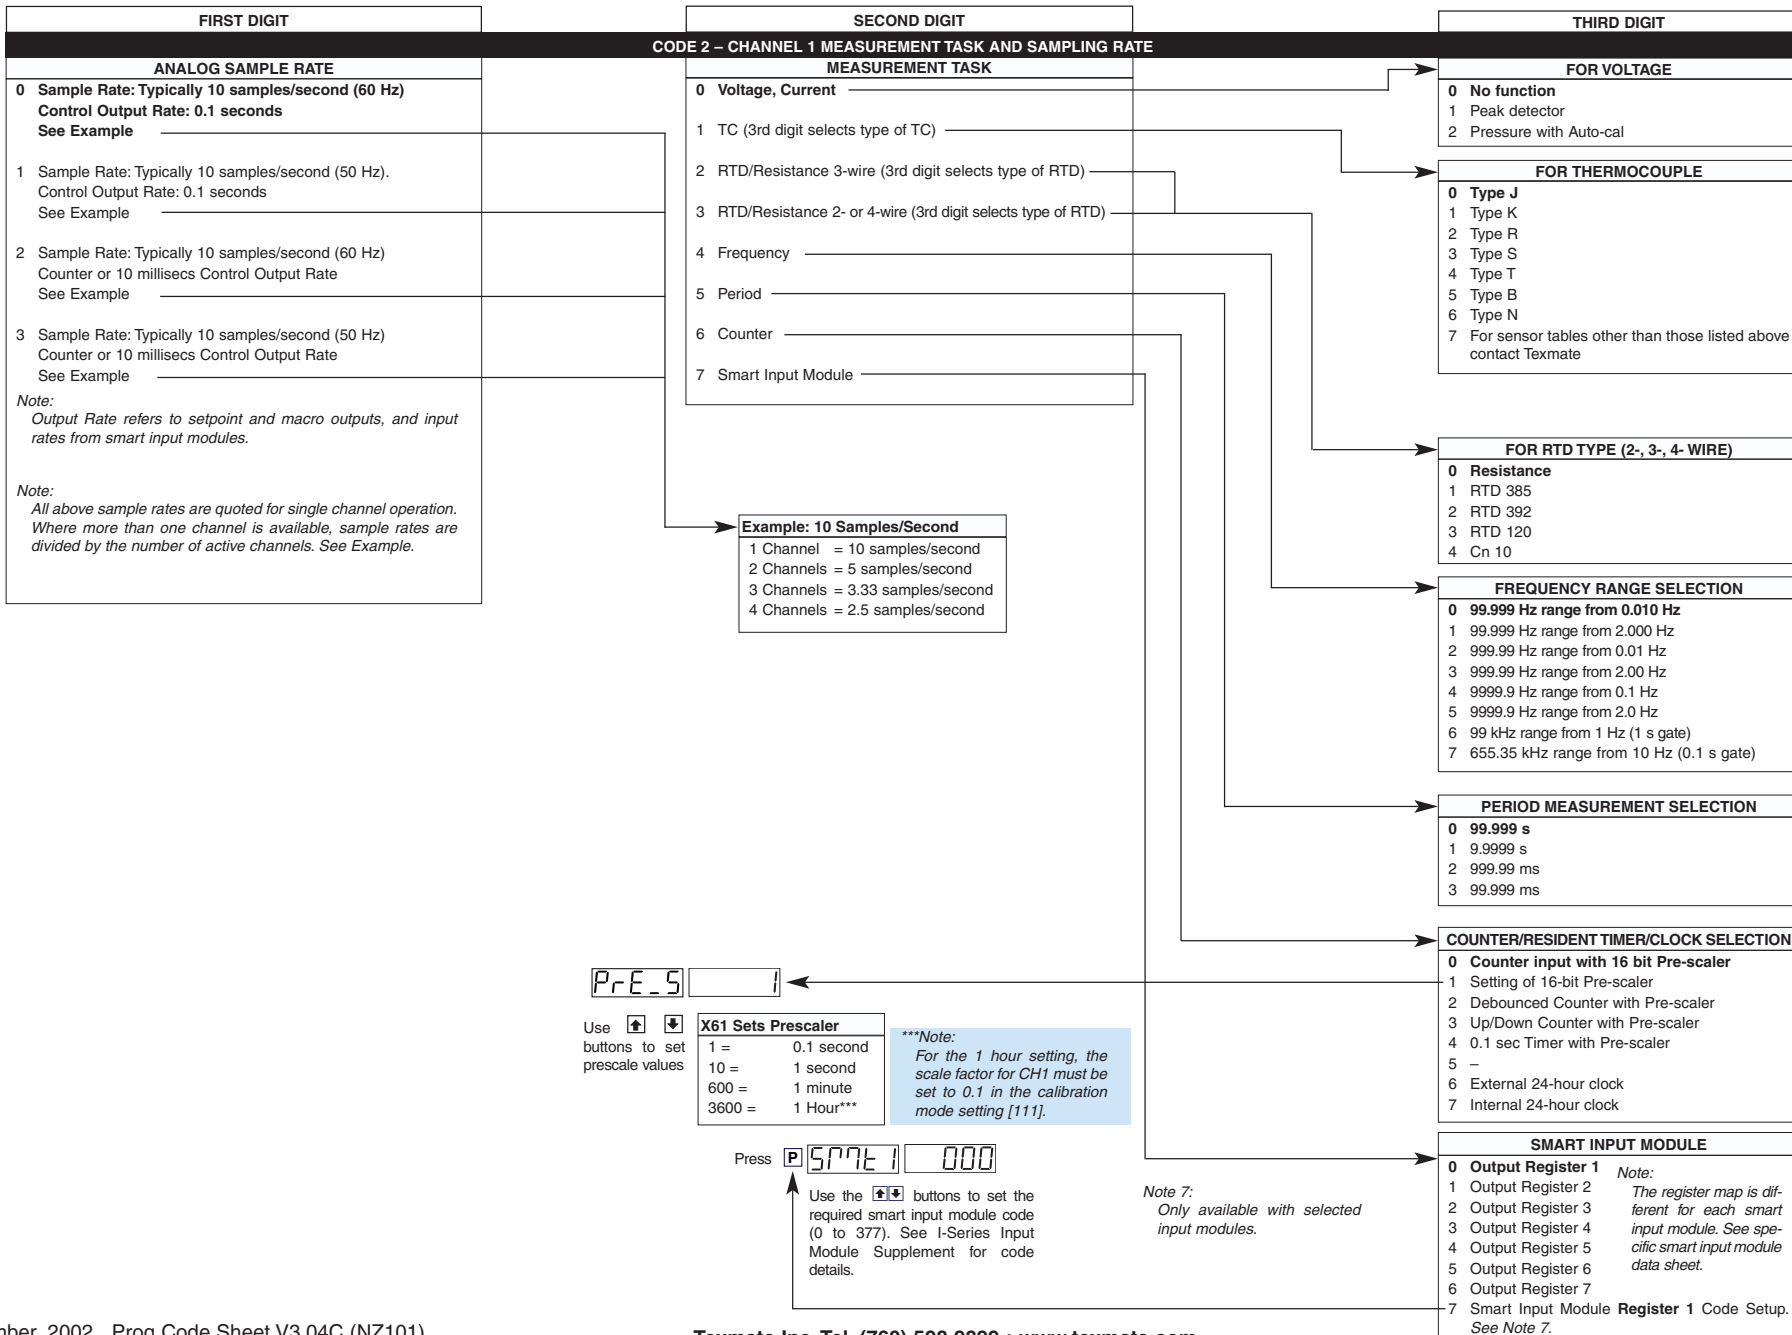

# CODES 3 to 5

| FIRST DIGIT   | SECOND DIGIT   | THIRD DIGIT  |
|---|--|--|
| <b>CODE 3 – CHANNEL 1 FUNCTIONS (POST PROCESSING &amp; SERIAL MODE)</b>   |  |  |
| <b>CHANNEL 1 POST PROCESSING</b>  | <b>32-POINT LINEARIZATION FOR CHANNEL 1</b>  | <b>SERIAL MODE</b>   |
| <b>0 Direct Display of Input (no processing)</b><br>1 Square Root of Channel 1<br>2 Inverse of Channel 1<br>3 - | <b>0 No Linearization on CH1</b><br>1 32-point Linearization on CH1 using Table 1<br>2 32-point Linearization on CH1 using Table 2. <i>See Note 5</i><br>3 32-point Linearization on CH1 using Table 3. <i>See Note 5</i><br>4 32-point Linearization on CH1 using Table 4. <i>See Note 5</i><br>5 125-point Linearization on CH1 (Tables 1 to 4 cascaded). <i>See Note 5</i><br>6 32-point Linearization on CH1 (Tables 1 to 4 selected from the rear pins of selected input modules).<br>The selected table is not available if CH2, CH3, or CH4 is operating in the analog output mode. CH1 must be set to Voltage, Current in Code 2 [X0X]. <i>See Note 5</i><br>7 -<br><br><i>Note:</i><br>All linearization tables are set up in the Calibration Mode [24X]. | <b>0 ASCII Mode</b><br>1 Modbus Mode<br>2 Master mode (used to customize print mode protocols via macro)<br>3 Print Mode<br>4 Ethernet Mode. <i>See Note 6</i><br>5 Devicenet Mode (requires Devicenet hardware module). <i>See Note 6</i><br><br><i>Note 6:</i><br>These functions are not available on all models and in some cases require additional hardware. |

*Note 5:*  
 If only 4 kB of memory is installed, only Table 1 is available for:

- CH1 in Code 3, 2nd digit.
- CH2 in Code 4, 3rd digit.
- CH3 in Code 5, 1st digit.
- CH4 in Code 6, 1st digit.
- RESULT in Code 7, 2nd digit.

| FIRST DIGIT  | SECOND DIGIT   | THIRD DIGIT   |
|--|--|---|
| <b>CODE 5 – CHANNEL 3 FUNCTIONS</b>  |  |   |
| <b>CH3 POST PROCESSING</b>   | <b>MEASUREMENT TASK</b>  | <b>FOR THERMOCOUPLE</b>   |
| <b>0 Direct Display of Input (no processing)</b><br>1 Square Root of Channel 3<br>2 Inverse of Channel 3<br>3 <b>4 kB Meters</b><br>NO Linearization<br><b>32 kB Meters</b><br>32-point Linearization of CH3 using Table 3<br><br><i>Note:</i><br>All linearization tables are set up in the Calibration Mode [24X]. | <b>0 No Function</b><br>1 Voltage, current<br>2 TC (3rd digit selects type of TC)<br>3 RTD/Resistance (3rd digit selects type of RTD)<br>4 Real Time Clock & Timer (3rd digit selects type)<br>5 -<br>6 -<br>7 Smart Input Module (3rd digit selects register) | <b>0 Type J</b><br>1 Type K<br>2 Type R<br>3 Type S<br>4 Type T<br>5 Type B<br>6 Type N<br>7 For sensor tables other than those listed above contact Texmate<br><br><b>FOR RTD TYPE (2-, 3-, 4- WIRE)</b><br><b>0 Resistance</b><br>1 RTD 385<br>2 RTD 392<br>3 RTD 120<br>4 Cn 10<br><br><b>FOR REAL-TIME CLOCK &amp; TIMER</b><br><b>0 HRS:MIN:SEC</b><br>1 HRS:MIN<br>2 -<br>3 -<br>4 1 Second Count UP Timer<br>5 1 Second Count DOWN Timer<br>6 -<br>7 -<br><br><b>FOR SMART INPUT MODULE</b><br><b>0 Output Register 1</b><br>1 Output Register 2<br>2 Output Register 3<br>3 Output Register 4<br>4 Output Register 5<br>5 Output Register 6<br>6 Output Register 7<br>7 Smart Input Module <b>Register 2</b> Code Setup |

*Note:*  
 The function of the output register selected varies according to the input module installed.

Use the buttons to set the required smart input module code (0 to 377). See I-Series Input Module Supplement for code details.

| CODE 4 – CHANNEL 2 MEASUREMENT TASK AND 32-POINT LINEARIZATION  |  |           |                                    |           |   |           |   |           |   |           |   |
|---|--|-----------|------------------------------------|-----------|---|-----------|---|-----------|---|-----------|---|
| <b>MEASUREMENT TASK</b>   | <b>FOR VOLTAGE &amp; CURRENT</b>   |           |                                    |           |   |           |   |           |   |           |   |
| <b>0 Voltage, Current</b><br>1 TC (type as per 2nd digit)<br>2 RTD/Resistance (type as per 2nd digit)<br>3 Second Digital Input Channel (type as per 2nd digit) | <b>0 Channel 2 Disabled</b><br>1 Direct (no post processing)<br>2 Square Root of Channel 2<br>3 Inverse of Channel 2<br>4 Output Register 1 (smart module)*<br>5 Output Register 2 (smart module)*<br>6 Output Register 3 (smart module)*<br>7 Output Register 4 (smart module)*<br><br><b>FOR THERMOCOUPLE</b><br><b>0 Type J</b><br>1 Type K<br>2 Type R<br>3 Type S<br>4 Type T<br>5 Type B<br>6 Type N<br>7 For sensor tables other than those listed above contact Texmate<br><br><b>FOR RTD TYPE (3-WIRE)</b><br><b>0 Resistance</b><br>1 RTD 385<br>2 RTD 392<br>3 RTD 120<br>4 Cn10<br><br><b>DIGITAL INPUT</b><br><b>0 Frequency - 99.999 Hz range from 0.001 Hz</b><br>1 Frequency - 999.99 Hz range from 0.01 Hz<br>2 Frequency - 99.999 kHz range from 1 Hz (1 s gate)<br>3 Frequency - 500 kHz range from 10 Hz (0.1 s gate)<br>4 Period - 9.9999 s (100 µs resolution)<br>5 Period - 999.99 ms (10 µs resolution)<br>6 Up/Down Counter with Prescaler<br>7 Set Prescaler   |           |                                    |           |   |           |   |           |   |           |   |
|   | <b>32-POINT LINEARIZATION FOR CH2</b>  |           |                                    |           |   |           |   |           |   |           |   |
|   | <b>0 No user defined Linearization on CH2</b><br>1 32-point Linearization on CH2 using Table 1<br>2 32-point Linearization on CH2 using Table 2. <i>See Note 5</i><br>3 32-point Linearization on CH2 using Table 3. <i>See Note 5</i><br>4 32-point Linearization on CH2 using Table 4. <i>See Note 5</i><br>5 125-point Linearization on CH2 (Tables 1 to 4 cascaded). <i>See Note 5</i><br>6 -<br>7 -<br><br><i>*Note:</i><br>Selecting 040 to 070 in the 2nd digit of Code 4 selects one of the following settings in the installed smart input module's output register map:<br><br><table border="1"> <thead> <tr> <th>2nd Digit</th> <th>Input module's output register map</th> </tr> </thead> <tbody> <tr> <td>4 selects</td> <td>0</td> </tr> <tr> <td>5 selects</td> <td>1</td> </tr> <tr> <td>6 selects</td> <td>2</td> </tr> <tr> <td>7 selects</td> <td>3</td> </tr> </tbody> </table><br><i>Note:</i><br>The register map is different for each smart input module. See installed input module data sheet for specific smart register 1 function map. | 2nd Digit | Input module's output register map | 4 selects | 0 | 5 selects | 1 | 6 selects | 2 | 7 selects | 3 |
| 2nd Digit   | Input module's output register map   |           |                                    |           |   |           |   |           |   |           |   |
| 4 selects   | 0  |           |                                    |           |   |           |   |           |   |           |   |
| 5 selects   | 1  |           |                                    |           |   |           |   |           |   |           |   |
| 6 selects   | 2  |           |                                    |           |   |           |   |           |   |           |   |
| 7 selects   | 3  |           |                                    |           |   |           |   |           |   |           |   |

PRE\_S

Use buttons to set prescale values from 1 to 32767 counts

Press

# CODES 6 to 9

| FIRST DIGIT  | SECOND DIGIT  | THIRD DIGIT   |
|--|---|---|
| <b>CODE 6 – CHANNEL 4 FUNCTIONS</b>  |   |   |
| <b>CH4 POST PROCESSING</b>   | <b>MEASUREMENT TASK</b>   | <b>FOR THERMOCOUPLE</b>   |
| <b>0 Direct Display of Input (no processing)</b><br>1 Square Root of Channel 4<br>2 Inverse of Channel 4<br><b>3 4 kB Meters</b><br>NO Linearization<br><b>32 kB Meters</b><br>32-point Linearization of CH4 using Table 4<br><br><i>Note:</i><br>All linearization tables are set up in the Calibration Mode [24X]. | 0 No Function<br><br>1 Voltage, Current<br><br>2 TC<br>(3rd digit selects type of TC).<br><i>See Note 7</i><br><br>3 RTD/Resistance<br>(3rd digit selects type of RTD).<br><i>See Note 7</i><br><br>4 Real Time Clock and Timer<br>(3rd digit selects type)<br><br>5 -<br><br>6 -<br><br>7 Smart Input Module<br>(3rd digit selects register) | 0 Type J<br>1 Type K<br>2 Type R<br>3 Type S<br>4 Type T<br>5 Type B<br>6 Type N<br>7 For sensor tables other than those listed above contact Texmate<br><br><b>FOR RTD TYPE (2-, 3-, 4- WIRE)</b><br>0 Resistance<br>1 RTD 385<br>2 RTD 392<br>3 RTD 120<br>4 Cn 10<br><br><b>FOR REAL-TIME CLOCK &amp; TIMER</b><br><b>0 HRS:MIN:SEC</b><br>1 HRS:MIN<br>2 -<br>3 -<br>4 1 Second Count UP Timer<br>5 1 Second Count DOWN Timer<br>6 -<br>7 -<br><br><b>FOR SMART INPUT MODULE</b><br>0 Output Register 1<br>1 Output Register 2<br>2 Output Register 3<br>3 Output Register 4<br>4 Output Register 5<br>5 Output Register 6<br>6 Output Register 7<br>7 Smart Input Module <b>Register 3</b><br>Code Setup |

*Note 5:*  
If only 4 kB of memory is installed, only Table 1 is available for:

- CH1 in Code 3, 2nd digit.
- CH2 in Code 4, 3rd digit.
- CH3 in Code 5, 1st digit.
- CH4 in Code 6, 1st digit.
- RESULT in Code 7, 2nd digit.

*Note 7:*  
For future development.

*Note:*  
The function of the output register selected varies according to the input module installed.

| FIRST DIGIT  | SECOND DIGIT  | THIRD DIGIT  |
|--|---|--|
| <b>CODE 8 – DATA LOGGING AND PRINT MODE OPTIONS</b>  |   |  |
| <b>DATA LOG BUFFER TYPE</b>  | <b>DATE &amp; TIME STAMP OPTIONS</b>  | <b>LOG OR PRINT TRIGGER</b>  |
| <b>0 No Data Logging</b><br>1 Cyclic Buffer<br>2 Linear FIFO Buffer.<br>3 Reset Buffer Number to 0.<br><br><i>Note:</i><br>Setting Code 8 to [3XX] resets the data log buffer to 0. Once reset, Code 8 must be set back to the required data log buffer setting. | <b>0 Printer Format – No time stamp with print/log</b><br>1 Printer Format – Time stamp format 1 [Mth-Day-Yr Hrs:Min:Sec] (with <CR><LF>)<br>2 Printer Format – Time stamp format 2 [Day-Mth-Yr Hrs:Min:Sec] (with <CR><LF>)<br>3 Printer Format – Time stamp format 3 [Hrs:Min:Sec] (with <CR><LF>)<br>4 Spreadsheet Format – No time stamp with print/log<br>5 Spreadsheet Format – Time stamp format 1 [Mth-Day-Yr Hrs:Min:Sec]<br>6 Spreadsheet Format – Time stamp format 2 [Day-Mth-Yr Hrs:Min:Sec]<br>7 Spreadsheet Format – Time stamp format 3 [Hrs:Min:Sec]<br><br><b>ALL ABOVE ARE REAL-TIME CLOCK OPTIONS</b> | <b>0 No trigger</b><br>1 Trigger on Demand from PROGRAM Button<br>2 Trigger on Demand from F1 Button<br>3 Trigger on Demand from F2 Button<br>4 Trigger on Demand from HOLD Pin<br>5 Trigger on Demand from LOCK Pin<br>6 -<br>7 -<br><br><i>Note:</i><br>Log and/or Print will only trigger if enabled. |

| <b>CODE 9 – FUNCTIONS FOR DIGITAL INPUT PINS</b>  |   |   |
|---|---|---|
| DISPLAY TEST PIN  | HOLD PIN  | LOCK PIN  |
| <b>0 Display test only</b><br>1 Reset Counter Channel 1 and total 2 at Power-up<br>2 Reset Counters Channel 1, 2, 3, 4, Total 1, and Total 2 at Power-up<br>3 Reset Total 1, and Total 2 at Power -up | <b>0 Display Hold</b><br>1 Reset Channel 1<br>2 Reset Total 1 and Total 2<br>3 Reset Total 2<br>4 Reset Peak, Valley<br>5 Clear Tare<br>6 Set Tare<br>7 Unlatch (de-energize) all Setpoints | <b>0 Key Lock</b><br>1 Reset Channel 1<br>2 Reset Channel 2<br>3 Reset Channel 3<br>4 Reset Channel 4<br>5 Clear Tare<br>6 Reset Total 1<br>7 Unlatch (de-energize) all Setpoints |



Use the buttons to set the required smart input module code (0 to 377). See I-Series Input Module Supplement for code details.

| <b>CODE 7 – RESULT PROCESSING</b>  |   |  |
|--|---|--|
| RESULT PROCESSING  | 32-POINT LINEARIZATION FOR RESULT   | MATHS FUNCTIONS FOR RESULT   |
| <b>0 Direct Display of Result as per processing performed in 2nd and 3rd digits</b><br>1 Square Root of Result<br>2 Inverse of Result<br>3 - | <b>0 No Linearization on Result</b><br>1 32-point Linearization on Result using Table 1<br>2 32-point Linearization on Result using Table 2. <i>See Note 5</i><br>3 32-point Linearization on Result using Table 3. <i>See Note 5</i><br>4 32-point Linearization on Result using Table 4. <i>See Note 5</i><br>5 125-point Linearization on Result (Tables 1 to 4 cascaded). <i>See Note 5</i><br>6 32-point Linearization on Result (Tables 1 to 4 selected from the rear of the meter).<br>The selected table is not available if CH2, CH3, or CH4 is operating in the analog mode. CH1 must be set to Voltage, Current in Code 2 [X0X].<br><i>See Note 5</i><br>7 - | <b>0 Result Register not Updated</b><br>1 pH Meter (CH1 = Tbuff, CH2 = pH)<br>2 Result = CH1, Setpoint 2 = CH2<br>3 Result = CH1 + CH2<br>4 Result = CH1 - CH2<br>5 Result = CH1 x CH2/10 000<br>6 Result = (CH1 x 20 000)/CH2<br>7 Result = CH1 |

# CODE 10

Note:  
Code 10 is only available with bar-graph versions of the meter.

Note:  
Data source for the bargraph is set up in Code 1 [X51].

| FIRST DIGIT  | SECOND DIGIT  | THIRD DIGIT   |
|--|---|---|
| <b>CODE 10 – BARGRAPH SETUP</b>  |   |   |
| <b>BARGRAPH DISPLAY SETTINGS</b>   | <b>BARGRAPH DISPLAY FORMAT</b>  | <b>BARGRAPH TYPE</b>  |
| 0 No Function<br><br>1 Disable Overrange Flashing<br><br>2 Set up Colors<br><br>3 Set up Bar Scaling | 0 Setpoints on Bar<br>1 Peak, Valley on Bar<br>2 -<br>3 -<br>4 Min/Max with setpoints (low end of bar = VALLEY, high end of bar = PEAK)<br>5 -<br>6 -<br>7 Bar Only (no setpoints on the bar) | 0 Linear<br>1 Via linearization Table 1<br><br>2 -<br><br>3 Log – 10 Bar/Decade<br>4 Log – 20 Bar/Decade<br>5 Log – 25 Bar/Decade<br>6 Log – 33 Bar/Decade<br>7 Log – 50 Bar/Decade |

### Set Up Bargraph Colors

2XX P Colr1 [OFF] ↑

P Colr2 [rEd] ↑

P Colr3 [OrnGE] ↑

P Colr4 [GrEEen] ↑

P Colr5 [oFF] ↑

P Colr6 [OrnGE] ↓

P Colr7 [GrEEen] ↓

[OrnGE] ↓

[GrEEen] ↓

[OrnGE] ↓


[oFF] ↓

Pressing the ↑/↓ buttons at the same time returns to [oFF]

The bargraph colors are not applied to specific setpoints. They are applied to whichever setpoint is configured at the lowest setting and then to each next highest setpoint in turn.

If all six setpoints are used the colors are set as follows:

- Color 1** Color BELOW lowest setpoint  
This is the bargraph color before it reaches a setpoint.
- Color 2** Color ABOVE lowest setpoint
- Color 3** Color ABOVE next highest setpoint
- Color 4** Color ABOVE next highest setpoint
- Color 5** Color ABOVE next highest setpoint
- Color 6** Color ABOVE next highest setpoint
- Color 7** Color ABOVE highest setpoint

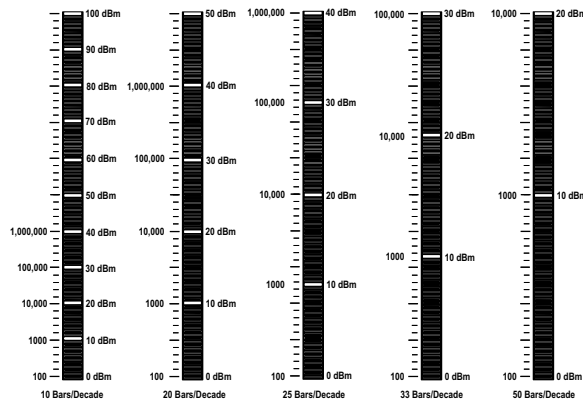

Example of Bars per Decade

### Set Up Scaling for Linear Bargraph

Bar Low [3X0] P Bar\_L [0] P Bar High [0] P Bar Nominal [0] P

OR

[3X1] P [49999] P [49999] P [49999] P

#### Bar Nominal

Bar Nominal sets the point on the bargraph at which the bar begins to light up. This can be any position between and including the bar low and bar high settings.

If bar nominal is set to the **bar low** setting, the bargraph behaves like a typical bargraph making the segments light up from the **bottom** of the bar and grow towards the top.

If bar nominal is set to the **bar high** setting, this makes all segments from the displayed signal to the **top** of the bar light up. As the signal increases, the number of lit segments between the signal and the bar high setting becomes steadily less. When the signal reaches the bar high setting no segments are lit.

Setting bar nominal to the midpoint between bar low and bar high makes the bargraph behave like a typical center zero bargraph. This means the bargraph lights up at the center of the bar and moves either up or down the bar depending on the displayed signal.

For example, if the meter's full scale range is 20,000 counts, the midpoint is 10,000 counts. If a signal of 10,000 counts is applied, only one segment at the 10,000 count mark lights up. If a signal of 17,000 counts is applied, the segments between the center segment (10,000 counts) and the 17,000 count mark light up.

If a signal of 5000 counts is applied, the segments between the center segment (10,000 counts) and the 5000 count mark light up.

An added feature of this bargraph is that it can also be non-symmetrical. This means that the bar nominal setting does not need to be set at the mid-point between bar low and bar high. For example, if the bargraph is configured to display -200 to 800 °C, bar low is set to -200 counts and bar high is set to 800 counts. Bar nominal is set to 0 counts. If a signal of -50 °C is applied, the bar lights from 0 down to -50. If a signal of 600 °C is applied, the bar lights from 0 up to 600.

### Set Up Scaling for Logirithmic Bargraph

Reference [3X3] P [rEF] P Bar Nominal [0] P

OR

[3X4] P [49999] P

OR

[3X5] P

OR

[3X6] P

OR

[3X7] P

#### Logirithmic Bargraph Scaling

In all logirithmic scales a reference level is required that is the level at 0 dB.

For example, in an RF measurement 0 dBm is at a reference of 1 mW.

The scale is calculated from:

$$10 \log_{10} \frac{\text{counts (input)}}{\text{reference}}$$

If the meter is scaled so that:

1 mW = 100 counts and 1 W = 100,000 counts

Then the reference for 0 dBm would be set to 100 counts:

$$10 \log_{10} \frac{\text{(input)}}{100} = 0 \text{ dBm}$$

**Reference.** This is the number of counts displayed for a 0 dB reference.

**Bar Nominal.** See Bar Nominal description above.

Now every 10 dBm represents a decade, the bargraph can be scaled to a different amount of bars per decade (as set in the 3rd digit).

See Example of Bars per Decade diagram opposite.

| Decade (Counts) | dBm |
|-----------------|-----|
| 1               | -20 |
| 10              | -10 |
| 100             | 0   |
| 1000            | 10  |
| 10,000          | 20  |
| 100,000         | 30  |
| 1,000,000       | 40  |



# SETPOINT PROGRAMMING MODE – SPC\_1 to SPC\_6

## Setpoint Setup Sequence

### Follow These Steps

The following procedures are written for SP1, all other setpoints are configured in a similar manner.

- 1) Press the **[P]** and **[M]** buttons at the same time. This enters the setpoint programming mode. The display toggles between [SP\_1] and [18000].

This is SP1 of the **Setpoint Activation Values Mode**. Use the **[M]** and **[D]** buttons to set SP1 or the **[P]** button to move to the required setpoint.

- 2) After all required setpoint **activation values** have been set, press the **[P]** button until [SPC\_1] appears. This is the **Setpoint & Relay Control Settings Mode**.

SPC\_1 is the **setpoint and relay control settings** programming menu for SP1. Set the three digits according to the codes in the *Setpoint and Relay Control Function Settings* opposite in the following order:

#### Third Digit – Setpoint Delay Mode

Set to [XX5] and program the hysteresis, deviation, or PID functions as required for SP1.

Reset back to [XX0].

#### Third Digit – Setpoint Timer Mode

Set to [XX6] and program the timer mode functions as required for SP1.

Reset back to [XX0].

#### Third Digit – Setpoint Reset & Trigger Functions

Set to [XX7] and program the reset and trigger functions as required for SP1.

Reset back to [XX0].

#### Second Digit – Setpoint Activation Source Mode

Set to [X1X] to select the setpoint activation source for SP1 from any channel or selected register shown above. Reset back to [X0X].

If the SP source is from an external digital input, set to one of either [X2X] to [X7X] to select the setpoint activation source from one of six digital inputs (2 to 7). See *\*Note at 2nd digit*.

#### First Digit – Relay Energize Mode

Select the relay energize mode for SP1 from 0 to 3.

#### Third Digit – Relay Latching & Manual Reset Functions

Program the third digit setpoint relay latching and manual reset functions between 0 to 4 as required.

- 3) Press the **[P]** button to move to [SPC\_2].
- 4) Repeat Step 2 for all required setpoints.

| FIRST DIGIT  | SECOND DIGIT  | THIRD DIGIT  |
|--|---|--|
| <b>SETPOINT AND RELAY CONTROL FUNCTION SETTINGS</b>  |   |  |
| <b>Relay Energize Function</b>   | <b>SP Activation Source</b>   | <b>SP Functions</b>  |
| <p><b>0 Energizes ABOVE setpoint value</b></p> <p><b>HYSTERESIS selected</b> – relay energizes AT OR ABOVE setpoint value plus hysteresis counts. De-energizes BELOW setpoint value minus hysteresis counts.</p> <p><i>Note:</i><br/>If hysteresis set with ZERO counts, relay energizes AT OR ABOVE the setpoint value.</p> <p><b>DEVIATION selected</b> – relay energizes INSIDE deviation band (setpoint ± deviation counts). De-energizes OUTSIDE deviation band (setpoint ± deviation counts).</p> <p><b>PID selected</b> – controls ABOVE setpoint value.</p> <p><b>1 Energizes BELOW setpoint value</b></p> <p><b>HYSTERESIS selected</b> – relay energizes BELOW setpoint value minus hysteresis counts. De-energizes AT OR ABOVE setpoint value plus hysteresis counts.</p> <p><i>Note:</i><br/>If hysteresis set with ZERO counts, relay energizes BELOW the setpoint value.</p> <p><b>DEVIATION selected</b> – relay energized OUTSIDE deviation band (setpoint ± deviation counts). De-energized INSIDE deviation band (setpoint ± deviation counts).</p> <p><b>PID selected</b> – controls BELOW setpoint value.</p> <p><b>2 Energizes AT OR ABOVE setpoint value with FALLING INPUT SIGNAL INITIAL START-UP INHIBIT</b></p> <p><b>HYSTERESIS selected</b> – relay energizes AT OR ABOVE setpoint value plus hysteresis counts with FALLING INPUT SIGNAL INITIAL START-UP INHIBIT. De-energizes BELOW setpoint value minus hysteresis counts with FALLING INPUT SIGNAL INITIAL START-UP INHIBIT.</p> <p><i>Note:</i><br/>If hysteresis set with ZERO counts, relay energizes AT OR ABOVE the setpoint value.</p> <p><b>DEVIATION selected</b> – relay energizes INSIDE deviation band (setpoint ± deviation counts) with FALLING INPUT SIGNAL INITIAL START-UP INHIBIT. De-energizes OUTSIDE deviation band (setpoint ± deviation counts) with FALLING INPUT SIGNAL INITIAL START-UP INHIBIT.</p> <p><b>PID selected</b> – controls ABOVE setpoint value.</p> <p><b>3 Energizes BELOW setpoint value with RISING INPUT SIGNAL INITIAL START-UP INHIBIT</b></p> <p><b>HYSTERESIS selected</b> – relay energizes BELOW setpoint value plus hysteresis counts with RISING INPUT SIGNAL INITIAL START-UP INHIBIT. De-energizes BELOW setpoint value minus hysteresis counts with RISING INPUT SIGNAL INITIAL START-UP INHIBIT.</p> <p><i>Note:</i><br/>If hysteresis set with ZERO counts, relay energizes BELOW the setpoint value.</p> <p><b>DEVIATION selected</b> – relay energizes OUTSIDE deviation band (setpoint ± deviation counts) with RISING INPUT SIGNAL INITIAL START-UP INHIBIT. De-energizes INSIDE deviation band (setpoint ± deviation counts) with RISING INPUT SIGNAL INITIAL START-UP INHIBIT.</p> <p><b>PID selected</b> – controls BELOW setpoint value.</p> | <p><b>0 Activate Setpoint Source from Selected Register</b></p> <p><b>1 Select Source for Setpoint</b></p> <p><i>Note:</i><br/>[X1X] is a register selection procedure only. To finish, reset to [X0X] to activate the selection, or reset to 2-7 as required for digital input selection.</p> <p><b>2 Digital Input – Capture Pin</b></p> <p><b>3 Digital Input – D1 (selected input modules)</b></p> <p><b>4 Digital Input – D2 (selected input modules)</b></p> <p><b>5 Digital Input – D3 (selected input modules)</b></p> <p><b>6 HOLD Pin</b></p> <p><b>7 LOCK Pin</b></p> <p><i>*Note:</i><br/>If the setpoint source is set to [oFF] or a digital input, the setpoint activation value will have no effect and will not be displayed.</p> | <p><b>0 No Latching</b></p> <p><b>1 Relay Latched</b></p> <p><b>2 Manual Relay Reset</b></p> <p><b>3 Relay Latched and Manual Relay Reset</b></p> <p><b>4 Relay Latched Off</b></p> <p><b>5 Hysteresis, Deviation &amp; PID Mode (includes SP Tracking)</b> → Go to Page 10</p> <p><b>6 Timer Modes:</b></p> <ul style="list-style-type: none"> <li>•OFF</li> <li>•Normal Delay.</li> <li>•Repeat ON.</li> <li>•Pulse ON.</li> <li>•1-Shot ON.</li> <li>•Repeat OFF.</li> <li>•Pulse OFF.</li> <li>•1-Shot OFF.</li> </ul> <p><i>Note:</i><br/>In PID Mode, all Timer Modes on SP1 set in [XX6] are not functional. → Go to Page 11</p> <p><b>7 Advanced Functions Mode:</b></p> <ul style="list-style-type: none"> <li>•OFF</li> <li>•Reset Trigger.</li> <li>•Reset Destination.</li> <li>•Reset Mode.</li> <li>•Reset Constant.</li> <li>•Trigger Print from SP.</li> <li>•Trigger Log from SP.</li> </ul> <p><i>Note:</i><br/>[XX5], [XX6], and [XX7] are set up procedures only. To finish, reset to 0-4 as required for setpoint latching and relay reset modes.</p> |
| <p><b>Select Source for Setpoint Functions</b></p> <p><b>[P] SourC [oFF]</b> [1 to 244]</p>  |   |  |
| <p>Use the <b>[M]</b> <b>[D]</b> buttons to cycle through the menu</p> <p><b>[diSP]</b></p> <p><b>[RESL]</b></p> <p><b>[Ch1]</b></p> <p><b>[Ch2]</b> <b>[Ch3]</b> <b>[Ch4]</b> <b>[tot_1]</b></p> <p>Use the <b>[M]</b> <b>[D]</b> buttons to select register as data source for setpoint</p> <p><b>[tArE]</b></p> <p><b>[VALE]</b></p> <p><b>[PEAK]</b></p> <p><b>[tot_2]</b></p>   |   |  |

Set Up Hysteresis, Deviation & PID Mode Settings




Programming Tip

If you do not require any of the functions in this mode, ensure it is set to:


Mode OFF

Note:  
If minimum cycle time is set to 0, the relevant relay is disabled. PID functions still operate

From Page 8, third digit [XX5]

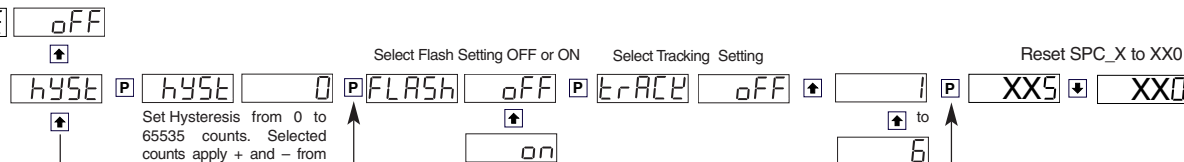

Note:  
If PID is selected in [XX5], the Timer Delay [XX6] and Reset and Trigger Functions [XX7] revert to [ModE][oFF] and cannot be adjusted.

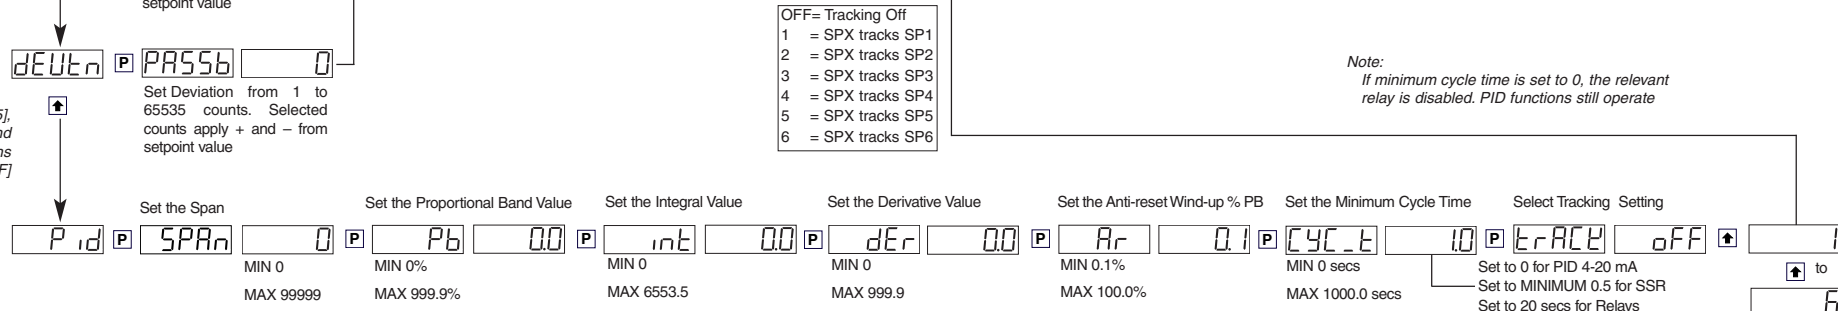

Programming Tip

If you do not require any of the functions in this mode, ensure it is set to:

TrACe OFF

From Page 8, third digit [XX6]



Normally OFF/Pulsed ON Modes

These are time control modes where the relay is normally OFF (de-energizes) and pulses ON (energizes) when the setpoint activates.

Normally ON/Pulsed OFF Modes

These are time control modes where the relay is normally ON (energizes) and pulses OFF (de-energizes) when the setpoint activates.

Advanced Functions Mode – Set Up Register Reset and Setpoint Trigger Functions



**Programming Tip**

If you do not require any of the functions in this mode, ensure it is set to:

tr 00 OFF




**Programming Tip**

This mode can not be accessed if SPC\_1 or SPC\_2 is in the PID mode.

From Page 8, third digit [XX7]

XX7

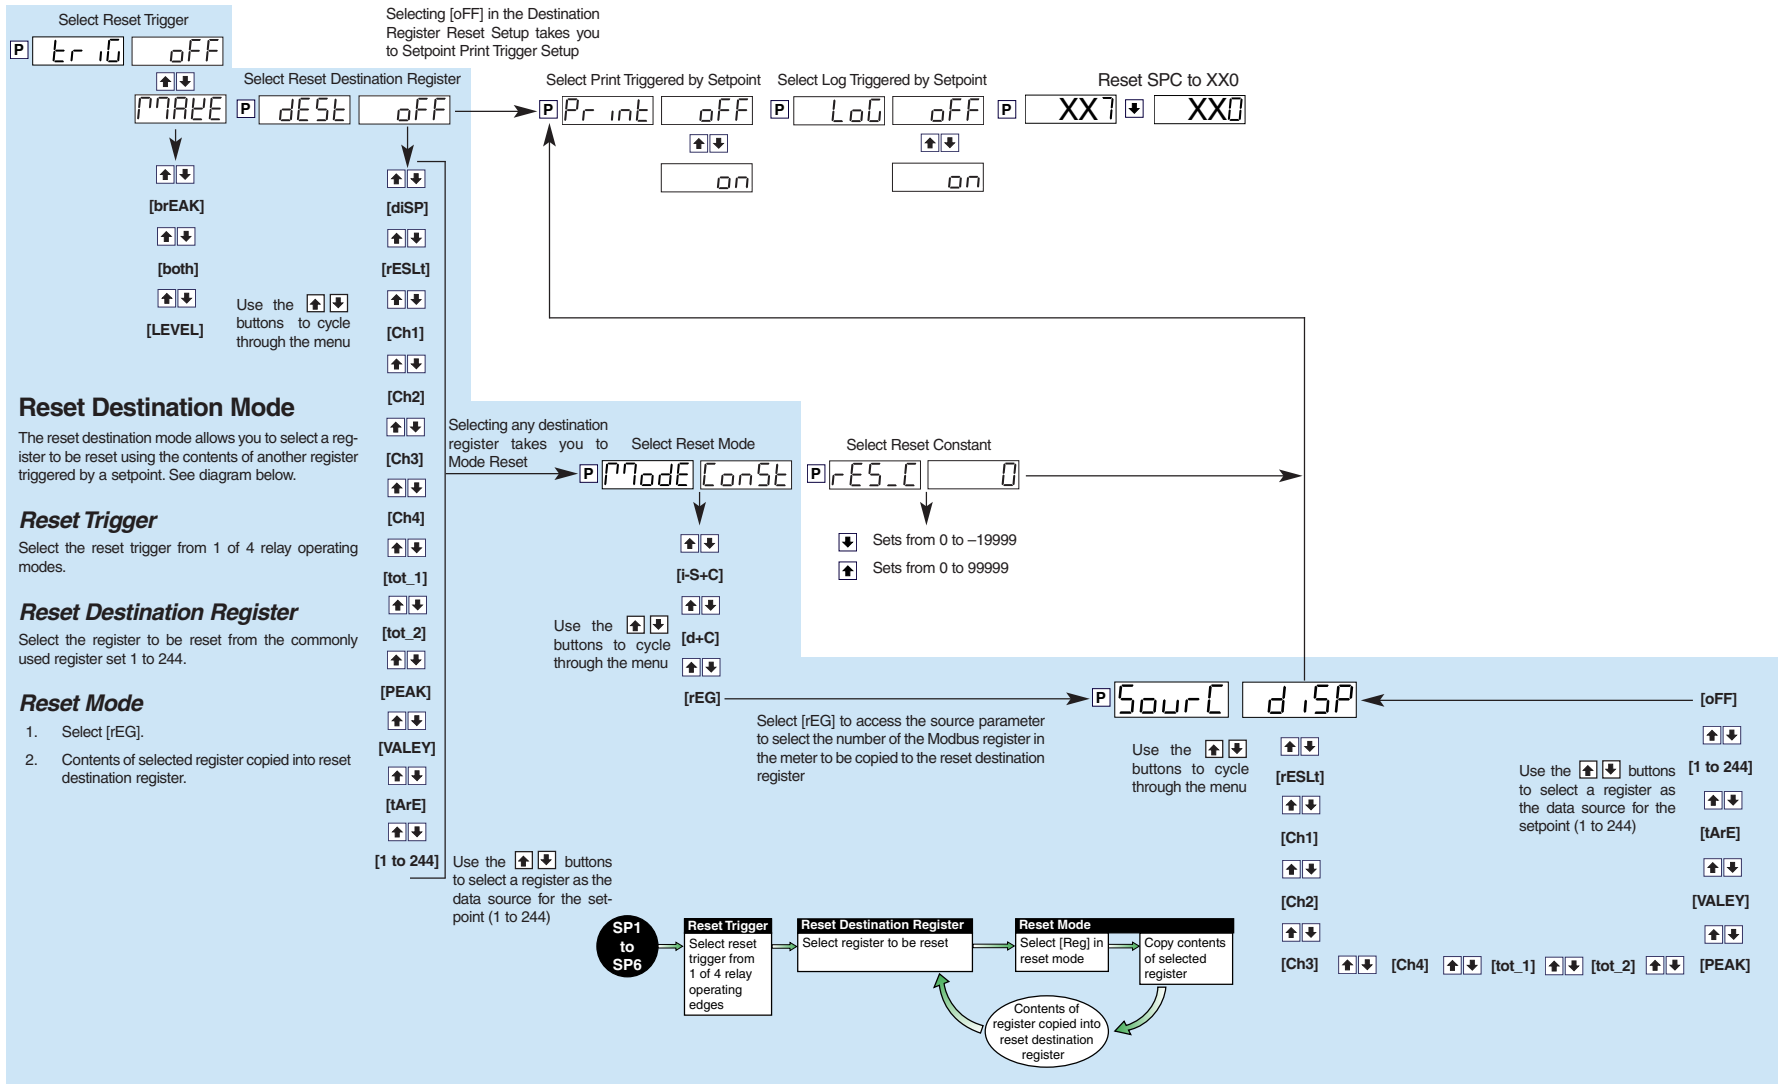

# Customer Code Settings – Main Programming Mode

## CALIBRATION MODE [CAL]

|           |           |           |              |           |           |           |              |
|-----------|-----------|-----------|--------------|-----------|-----------|-----------|--------------|
| 1st DIGIT | 2nd DIGIT | 3rd DIGIT | SUB-SETTINGS | 1st DIGIT | 2nd DIGIT | 3rd DIGIT | SUB-SETTINGS |
|-----------|-----------|-----------|--------------|-----------|-----------|-----------|--------------|

### ON DEMAND FUNCTIONS

#### RESULT

|                          |                          |                          |   |
|--------------------------|--------------------------|--------------------------|---|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 010   |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 020 SPAN <input type="text"/> INPUT <input type="text"/>  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 030 ZERO <input type="text"/> INPUT <input type="text"/> SPAN <input type="text"/> INPUT <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 040 CHANNEL <input type="text"/>  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 050 CHANNEL <input type="text"/>  |

#### CH1

|                          |                          |                          |   |
|--------------------------|--------------------------|--------------------------|---|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 011   |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 021 SPAN <input type="text"/> INPUT <input type="text"/>  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 031 ZERO <input type="text"/> INPUT <input type="text"/> SPAN <input type="text"/> INPUT <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 041 CHANNEL <input type="text"/>  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 051 CHANNEL <input type="text"/>  |

#### CH2

|                          |                          |                          |   |
|--------------------------|--------------------------|--------------------------|---|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 012   |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 022 SPAN <input type="text"/> INPUT <input type="text"/>  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 032 ZERO <input type="text"/> INPUT <input type="text"/> SPAN <input type="text"/> INPUT <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 042 CHANNEL <input type="text"/>  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 052 CHANNEL <input type="text"/>  |

#### CH3

|                          |                          |                          |   |
|--------------------------|--------------------------|--------------------------|---|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 013   |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 023 SPAN <input type="text"/> INPUT <input type="text"/>  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 033 ZERO <input type="text"/> INPUT <input type="text"/> SPAN <input type="text"/> INPUT <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 043 CHANNEL <input type="text"/>  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 053 CHANNEL <input type="text"/>  |

#### CH4

|                          |                          |                          |   |
|--------------------------|--------------------------|--------------------------|---|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 014   |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 024 SPAN <input type="text"/> INPUT <input type="text"/>  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 034 ZERO <input type="text"/> INPUT <input type="text"/> SPAN <input type="text"/> INPUT <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 044 CHANNEL <input type="text"/>  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 054 CHANNEL <input type="text"/>  |

### CALIBRATION PROCEDURES

#### Manual Calibration

|                          |                          |                          |     |        |                      |       |                      |
|--------------------------|--------------------------|--------------------------|-----|--------|----------------------|-------|----------------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 100 | OFFSET | <input type="text"/> | SCALE | <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 101 | OFFSET | <input type="text"/> | SCALE | <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 102 | OFFSET | <input type="text"/> | SCALE | <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 103 | OFFSET | <input type="text"/> | SCALE | <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 104 | OFFSET | <input type="text"/> | SCALE | <input type="text"/> |

#### Two-point Calibration

|                          |                          |                          |     |      |                      |       |                      |      |                      |       |                      |
|--------------------------|--------------------------|--------------------------|-----|------|----------------------|-------|----------------------|------|----------------------|-------|----------------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 110 | ZERO | <input type="text"/> | INPUT | <input type="text"/> | SPAN | <input type="text"/> | INPUT | <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 111 | ZERO | <input type="text"/> | INPUT | <input type="text"/> | SPAN | <input type="text"/> | INPUT | <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 112 | ZERO | <input type="text"/> | INPUT | <input type="text"/> | SPAN | <input type="text"/> | INPUT | <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 113 | ZERO | <input type="text"/> | INPUT | <input type="text"/> | SPAN | <input type="text"/> | INPUT | <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 114 | ZERO | <input type="text"/> | INPUT | <input type="text"/> | SPAN | <input type="text"/> | INPUT | <input type="text"/> |

#### Calibrate Thermocouple

|                          |                          |                          |     |      |                      |       |      |      |                      |       |        |
|--------------------------|--------------------------|--------------------------|-----|------|----------------------|-------|------|------|----------------------|-------|--------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 121 | ZERO | <input type="text"/> | INPUT | 32°F | SPAN | <input type="text"/> | INPUT | 2500°F |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 122 | ZERO | <input type="text"/> | INPUT | 32°F | SPAN | <input type="text"/> | INPUT | 2500°F |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 123 | ZERO | <input type="text"/> | INPUT | 32°F | SPAN | <input type="text"/> | INPUT | 2500°F |

#### Calibrate Analog Output

|                          |                          |                          |     |         |                      |        |                      |          |                      |        |                      |
|--------------------------|--------------------------|--------------------------|-----|---------|----------------------|--------|----------------------|----------|----------------------|--------|----------------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 151 | CAL LOW | <input type="text"/> | OUTPUT | <input type="text"/> | CAL HIGH | <input type="text"/> | OUTPUT | <input type="text"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 152 | CAL LOW | <input type="text"/> | OUTPUT | <input type="text"/> | CAL HIGH | <input type="text"/> | OUTPUT | <input type="text"/> |

**CALIBRATION MODE [CAL] Continued**

1st DIGIT    2nd DIGIT    3rd DIGIT    **SUB-SETTINGS**

**RELATED CALIBRATION FUNCTIONS**

**Serial Output**

|                          |                          |                          |     |      |                          |        |                          |         |                          |            |                          |
|--------------------------|--------------------------|--------------------------|-----|------|--------------------------|--------|--------------------------|---------|--------------------------|------------|--------------------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 200 | BAUD | <input type="checkbox"/> | PARITY | <input type="checkbox"/> | ADDRESS | <input type="checkbox"/> | TIME DELAY | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 201 | BAUD | <input type="checkbox"/> | PARITY | <input type="checkbox"/> | ADDRESS | <input type="checkbox"/> | TIME DELAY | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 202 | BAUD | <input type="checkbox"/> | PARITY | <input type="checkbox"/> | ADDRESS | <input type="checkbox"/> | TIME DELAY | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 203 | BAUD | <input type="checkbox"/> | PARITY | <input type="checkbox"/> | ADDRESS | <input type="checkbox"/> | TIME DELAY | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 204 | BAUD | <input type="checkbox"/> | PARITY | <input type="checkbox"/> | ADDRESS | <input type="checkbox"/> | TIME DELAY | <input type="checkbox"/> |

**Auto Zero Maintenance**

|                          |                          |                          |     |            |                          |           |                          |             |                          |
|--------------------------|--------------------------|--------------------------|-----|------------|--------------------------|-----------|--------------------------|-------------|--------------------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 210 | AZ CAPTURE | <input type="checkbox"/> | AZ MOTION | <input type="checkbox"/> | AZ APERTURE | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 211 | AZ CAPTURE | <input type="checkbox"/> | AZ MOTION | <input type="checkbox"/> | AZ APERTURE | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 212 | AZ CAPTURE | <input type="checkbox"/> | AZ MOTION | <input type="checkbox"/> | AZ APERTURE | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 213 | AZ CAPTURE | <input type="checkbox"/> | AZ MOTION | <input type="checkbox"/> | AZ APERTURE | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 214 | AZ CAPTURE | <input type="checkbox"/> | AZ MOTION | <input type="checkbox"/> | AZ APERTURE | <input type="checkbox"/> |

**Averaging Samples & Averaging Window**

|                          |                          |                          |     |                 |                          |                |                          |
|--------------------------|--------------------------|--------------------------|-----|-----------------|--------------------------|----------------|--------------------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 220 | AVERAGE SAMPLES | <input type="checkbox"/> | AVERAGE WINDOW | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 221 | AVERAGE SAMPLES | <input type="checkbox"/> | AVERAGE WINDOW | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 222 | AVERAGE SAMPLES | <input type="checkbox"/> | AVERAGE WINDOW | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 223 | AVERAGE SAMPLES | <input type="checkbox"/> | AVERAGE WINDOW | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 224 | AVERAGE SAMPLES | <input type="checkbox"/> | AVERAGE WINDOW | <input type="checkbox"/> |

**K Factor & Totalizer Cutoff**

|                          |                          |                          |     |              |                          |        |                          |
|--------------------------|--------------------------|--------------------------|-----|--------------|--------------------------|--------|--------------------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 231 | SCALE FACTOR | <input type="checkbox"/> | CUTOFF | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 232 | SCALE FACTOR | <input type="checkbox"/> | CUTOFF | <input type="checkbox"/> |

**32-point Linearization Tables**

|                          |                          |                          |     |      |                          |
|--------------------------|--------------------------|--------------------------|-----|------|--------------------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 240 | MODE | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 241 | MODE | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 242 | MODE | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 243 | MODE | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 244 | MODE | <input type="checkbox"/> |

**Scale Analog Output**

|                          |                          |                          |     |      |                          |            |                          |
|--------------------------|--------------------------|--------------------------|-----|------|--------------------------|------------|--------------------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 251 | ZERO | <input type="checkbox"/> | FULL SCALE | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 252 | ZERO | <input type="checkbox"/> | FULL SCALE | <input type="checkbox"/> |

# Customer Code Settings – Main Programming Mode

## CODE 1

| 1st DIGIT            | 2nd DIGIT            | 3rd DIGIT            | SUB-SETTINGS                       |
|----------------------|----------------------|----------------------|------------------------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> |                                    |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X50 SOURCE <input type="text"/>    |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X51 SOURCE <input type="text"/>    |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X52 SOURCE <input type="text"/>    |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X53 SOURCE <input type="text"/>    |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X54 SOURCE <input type="text"/>    |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X55 SOURCE <input type="text"/>    |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X56 SOURCE <input type="text"/>    |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X57 SOURCE <input type="text"/>    |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X60 DISPLAY <input type="text"/>   |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X61 DISPLAY <input type="text"/>   |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X62 DISPLAY <input type="text"/>   |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X63 DISPLAY <input type="text"/>   |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X64 DISPLAY <input type="text"/>   |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X65 DISPLAY <input type="text"/>   |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X66 DISPLAY <input type="text"/>   |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X67 DISPLAY <input type="text"/>   |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X70 CHARACTER <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X71 CHARACTER <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X72 CHARACTER <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X73 CHARACTER <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X74 CHARACTER <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X75 CHARACTER <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X76 CHARACTER <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | X77 CHARACTER <input type="text"/> |

## CODE 2

| 1st DIGIT            | 2nd DIGIT            | 3rd DIGIT            | PRESCALER            |
|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |

## CODE 3

| 1st DIGIT            | 2nd DIGIT            | 3rd DIGIT            |
|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> |

## CODE 4

| 1st DIGIT            | 2nd DIGIT            | 3rd DIGIT            | PRESCALER            |
|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |

## CODE 5

| 1st DIGIT            | 2nd DIGIT            | 3rd DIGIT            | SMART INPUT MODULE SETTINGS |
|----------------------|----------------------|----------------------|-----------------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/>        |

## CODE 6

| 1st DIGIT            | 2nd DIGIT            | 3rd DIGIT            | SMART INPUT MODULE SETTINGS |
|----------------------|----------------------|----------------------|-----------------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/>        |

## CODE 7

| 1st DIGIT            | 2nd DIGIT            | 3rd DIGIT            |
|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> |

## CODE 8

| 1st DIGIT            | 2nd DIGIT            | 3rd DIGIT            |
|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> |

## CODE 9

| 1st DIGIT            | 2nd DIGIT            | 3rd DIGIT            |
|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> |

## CODE 10

| 1st DIGIT            | 2nd DIGIT            | 3rd DIGIT            |
|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> |

### BARGRAPH COLORS

|     |         |                      |
|-----|---------|----------------------|
| 2XX | COLOR 1 | <input type="text"/> |
|     | COLOR 2 | <input type="text"/> |
|     | COLOR 3 | <input type="text"/> |
|     | COLOR 4 | <input type="text"/> |
|     | COLOR 5 | <input type="text"/> |
|     | COLOR 6 | <input type="text"/> |
|     | COLOR 7 | <input type="text"/> |

### SCALING FOR LINEAR BARGRAPH

|     |         |                      |          |                      |             |                      |
|-----|---------|----------------------|----------|----------------------|-------------|----------------------|
| 3X0 | BAR LOW | <input type="text"/> | BAR HIGH | <input type="text"/> | BAR NOMINAL | <input type="text"/> |
| 3X1 | BAR LOW | <input type="text"/> | BAR HIGH | <input type="text"/> | BAR NOMINAL | <input type="text"/> |

### SCALING FOR LOGIRITHMIC BARGRAPH

|     |           |                      |             |                      |
|-----|-----------|----------------------|-------------|----------------------|
| 3X3 | REFERENCE | <input type="text"/> | BAR NOMINAL | <input type="text"/> |
| 3X4 | REFERENCE | <input type="text"/> | BAR NOMINAL | <input type="text"/> |
| 3X5 | REFERENCE | <input type="text"/> | BAR NOMINAL | <input type="text"/> |
| 3X6 | REFERENCE | <input type="text"/> | BAR NOMINAL | <input type="text"/> |
| 3X7 | REFERENCE | <input type="text"/> | BAR NOMINAL | <input type="text"/> |

# Customer Code Settings – Setpoint Programming Mode

## SP ACTIVATION VALUES

| SETPOINT | VALUE |
|----------|-------|
| SP1      |       |
| SP2      |       |
| SP3      |       |
| SP4      |       |
| SP5      |       |
| SP6      |       |

## SETPOINT & RELAY CONTROL SETTINGS MODE SPC\_1 TO SPC\_6

| SELECT DATA SOURCE |       |  | DELAY MODE SETTINGS |     |            |                      |             |           |                      |             |  |
|--------------------|-------|--|---------------------|-----|------------|----------------------|-------------|-----------|----------------------|-------------|--|
| SPC_1              | _ 1 _ |  | SPC_1               | _ 5 | HYSTERESIS | ANNUNCIATOR FLASHING | SP TRACKING | DEVIATION | ANNUNCIATOR FLASHING | SP TRACKING |  |
| SPC_2              | _ 1 _ |  | SPC_2               | _ 5 | HYSTERESIS | ANNUNCIATOR FLASHING | SP TRACKING | DEVIATION | ANNUNCIATOR FLASHING | SP TRACKING |  |
| SPC_3              | _ 1 _ |  | SPC_3               | _ 5 | HYSTERESIS | ANNUNCIATOR FLASHING | SP TRACKING | DEVIATION | ANNUNCIATOR FLASHING | SP TRACKING |  |
| SPC_4              | _ 1 _ |  | SPC_4               | _ 5 | HYSTERESIS | ANNUNCIATOR FLASHING | SP TRACKING | DEVIATION | ANNUNCIATOR FLASHING | SP TRACKING |  |
| SPC_5              | _ 1 _ |  | SPC_5               | _ 5 | HYSTERESIS | ANNUNCIATOR FLASHING | SP TRACKING | DEVIATION | ANNUNCIATOR FLASHING | SP TRACKING |  |
| SPC_6              | _ 1 _ |  | SPC_6               | _ 5 | HYSTERESIS | ANNUNCIATOR FLASHING | SP TRACKING | DEVIATION | ANNUNCIATOR FLASHING | SP TRACKING |  |

## SETPOINT FINAL SETTINGS

|       | 1st DIGIT            | 2nd DIGIT            | 3rd DIGIT            |
|-------|----------------------|----------------------|----------------------|
| SPC_1 | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| SPC_2 | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| SPC_3 | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| SPC_4 | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| SPC_5 | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| SPC_6 | <input type="text"/> | <input type="text"/> | <input type="text"/> |

## PID CONTROL SETTINGS

|       |     |      |    |     |     |     |     |             |
|-------|-----|------|----|-----|-----|-----|-----|-------------|
| SPC_1 | _ 5 | SPAN | PB | INT | DER | ARW | MCT | SP TRACKING |
| SPC_2 | _ 5 | SPAN | PB | INT | DER | ARW | MCT | SP TRACKING |
| SPC_3 | _ 5 | SPAN | PB | INT | DER | ARW | MCT | SP TRACKING |
| SPC_4 | _ 5 | SPAN | PB | INT | DER | ARW | MCT | SP TRACKING |
| SPC_5 | _ 5 | SPAN | PB | INT | DER | ARW | MCT | SP TRACKING |
| SPC_6 | _ 5 | SPAN | PB | INT | DER | ARW | MCT | SP TRACKING |

## TIMER MODE SETTINGS

| SPC SETTING | NORMAL | NORMALLY OFF / PULSED ON MODES |          |            |            | NORMALLY ON / PULSED OFF MODES |            |            |       |            |       |
|-------------|--------|--------------------------------|----------|------------|------------|--------------------------------|------------|------------|-------|------------|-------|
|             |        | REPEAT ON                      | PULSE ON | 1-SHOT ON  | 1-SHOT OFF | PULSE OFF                      | REPEAT OFF |            |       |            |       |
| SPC_1       | DOM    | Resolution                     | OFF T    | Resolution | DOM        | DOM                            | M OFF      | Resolution | OFF T | Resolution | OFF T |
|             | DOB    | ON T                           | ON T     | ON T       | M ON       | DOB                            | DOB        | ON T       |       |            |       |
| SPC_2       | DOM    | Resolution                     | OFF T    | Resolution | DOM        | DOM                            | M OFF      | Resolution | OFF T | Resolution | OFF T |
|             | DOB    | ON T                           | ON T     | ON T       | M ON       | DOB                            | DOB        | ON T       |       |            |       |
| SPC_3       | DOM    | Resolution                     | OFF T    | Resolution | DOM        | DOM                            | M OFF      | Resolution | OFF T | Resolution | OFF T |
|             | DOB    | ON T                           | ON T     | ON T       | M ON       | DOB                            | DOB        | ON T       |       |            |       |
| SPC_4       | DOM    | Resolution                     | OFF T    | Resolution | DOM        | DOM                            | M OFF      | Resolution | OFF T | Resolution | OFF T |
|             | DOB    | ON T                           | ON T     | ON T       | M ON       | DOB                            | DOB        | ON T       |       |            |       |
| SPC_5       | DOM    | Resolution                     | OFF T    | Resolution | DOM        | DOM                            | M OFF      | Resolution | OFF T | Resolution | OFF T |
|             | DOB    | ON T                           | ON T     | ON T       | M ON       | DOB                            | DOB        | ON T       |       |            |       |
| SPC_6       | DOM    | Resolution                     | OFF T    | Resolution | DOM        | DOM                            | M OFF      | Resolution | OFF T | Resolution | OFF T |
|             | DOB    | ON T                           | ON T     | ON T       | M ON       | DOB                            | DOB        | ON T       |       |            |       |

## REGISTER RESET & TRIGGER FUNCTIONS SETTINGS

|       |     |        |        |        |         |         |         |       |
|-------|-----|--------|--------|--------|---------|---------|---------|-------|
| SPC_1 | _ 7 | [triG] | [dESt] | [ModE] | [rES_C] | [SourC] | [Print] | [LoG] |
| SPC_2 | _ 7 | [triG] | [dESt] | [ModE] | [rES_C] | [SourC] | [Print] | [LoG] |
| SPC_3 | _ 7 | [triG] | [dESt] | [ModE] | [rES_C] | [SourC] | [Print] | [LoG] |
| SPC_4 | _ 7 | [triG] | [dESt] | [ModE] | [rES_C] | [SourC] | [Print] | [LoG] |
| SPC_5 | _ 7 | [triG] | [dESt] | [ModE] | [rES_C] | [SourC] | [Print] | [LoG] |
| SPC_6 | _ 7 | [triG] | [dESt] | [ModE] | [rES_C] | [SourC] | [Print] | [LoG] |

# COMMONLY USED REGISTERS

## Commonly Used Registers

Registers 1 to 244 can be used to select the source or reset destination in the following modes using the front panel buttons:

- **Code 1 [X50]**. Select data source for the primary display.
- **Setpoint Control Settings [X1X]**. Select data source for the selected setpoint.
- **Setpoint Control Settings [XX7]**. Select reset destination register for the selected setpoint.
- **Setpoint Control Settings [XX7]**. Select register to access source parameters to be copied to the reset destination register.

The table **Commonly Used Registers 1 to 244** lists the most commonly used registers available for front panel programming from register set 1 to 244. The list shows five columns where the register is commonly used as the source or reset destination in a function.

Where a register is commonly used as the source or reset destination, a double arrow ►► is shown in the column. Where a register is not so commonly used, but could be used for this purpose, a single arrow ► is shown.

The first 11 registers have no register number. This is because they are displayed in the select data source or reset destination modes using their register name and can be directly selected.

## Registers That Should Not be Selected

The following registers are part of the 1 to 244 register set, but should not be selected for the reasons stated:

- 38** ..... Reserved for future development.
- 47-48** ..... Reserved for future development.
- 52-53** ..... Reserved for Texmate use only.
- 61-64** ..... Reserved for future development.
- 123-128** ..... Reserved for future development.
- 140-141** ..... Reserved for future development.
- 234-244** ..... Reserved for future development.

**Commonly Used Registers 1 to 244**

| Register Name   | Register Number | Display Source | Setpoint Source | Reset Source | Reset Destination | Totalizer Source | Register Name             | Register Number | Display Source | Setpoint Source | Reset Source | Reset Destination | Totalizer Source |
|-----------------|-----------------|----------------|-----------------|--------------|-------------------|------------------|---------------------------|-----------------|----------------|-----------------|--------------|-------------------|------------------|
| Display         | -               |                | ►►              |              |                   | ►►               | Variable 4                | 88              | ►              | ►               | ►            | ►                 |                  |
| Result          | -               | ►►             | ►►              | ►►           | ►►                | ►►               | Variable 5                | 89              | ►              | ►               | ►            | ►                 |                  |
| CH1             | -               | ►►             | ►►              | ►►           | ►►                | ►►               | Variable 6                | 90              | ►              | ►               | ►            | ►                 |                  |
| CH2             | -               | ►►             | ►►              | ►►           | ►►                | ►►               | Variable 7                | 91              | ►              | ►               | ►            | ►                 |                  |
| CH3             | -               | ►►             | ►►              | ►►           | ►►                | ►►               | Variable 8                | 92              | ►              | ►               | ►            | ►                 |                  |
| CH4             | -               | ►►             | ►►              | ►►           | ►►                | ►►               | Variable 9                | 93              | ►              | ►               | ►            | ►                 |                  |
| Total 1         | -               | ►►             | ►►              | ►►           | ►►                | ►►               | Variable 10               | 94              | ►              | ►               | ►            | ►                 |                  |
| Total 2         | -               | ►►             | ►►              | ►►           | ►►                | ►►               | Timer 1                   | 95              | ►              | ►               | ►            | ►                 |                  |
| Peak            | -               | ►              | ►►              | ►            | ►►                | ►►               | Timer 2                   | 96              | ►              | ►               | ►            | ►                 |                  |
| Valley          | -               | ►              | ►►              | ►            | ►►                | ►►               | Smart Reset Offset 1      | 121             |                |                 |              | ►►                |                  |
| Tare            | -               | ►              | ►               | ►            | ►►                | ►►               | Smart Reset Offset 1      | 122             |                |                 |              | ►►                |                  |
| PID Output 1    | 50              | ►              | ►               |              |                   |                  | Clock – Seconds           | 213             |                | ►               |              |                   |                  |
| PID Output 2    | 51              | ►              | ►               |              |                   |                  | Clock – Minutes           | 214             |                | ►               |              |                   |                  |
| Smart Result 1  | 54              |                |                 |              | ►                 |                  | Clock – Hours             | 215             |                | ►               |              |                   |                  |
| Smart Result 2  | 55              |                |                 |              | ►                 |                  | Clock – Days              | 216             |                | ►               |              |                   |                  |
| Smart Result 3  | 56              |                |                 |              | ►                 |                  | Clock – Date              | 217             |                | ►               |              |                   |                  |
| Smart Result 4  | 57              |                |                 |              | ►                 |                  | Clock – Month             | 218             |                | ►               |              |                   |                  |
| Smart Result 5  | 58              |                |                 |              | ►                 |                  | Clock – Year              | 219             |                | ►               |              |                   |                  |
| Smart Result 6  | 59              |                |                 |              | ►                 |                  | Setpoint Latch            | 221             |                |                 |              | ►►                |                  |
| Smart Result 7  | 60              |                |                 |              | ►                 |                  | Relay De-energize         | 222             |                |                 |              | ►►                |                  |
| Analog Output 1 | 83              | ►              | ►               | ►            | ►                 | ►                | Auto Zero Offset – Result | 227             |                | ►               |              |                   |                  |
| Analog Output 2 | 84              | ►              | ►               | ►            | ►                 | ►                | Auto Zero Offset – CH1    | 228             |                | ►               |              |                   |                  |
| Variable 1      | 85              | ►              | ►               | ►            | ►                 | ►                | Auto Zero Offset – CH2    | 229             |                | ►               |              |                   |                  |
| Variable 2      | 86              | ►              | ►               | ►            | ►                 | ►                | Auto Zero Offset – CH3    | 230             |                | ►               |              |                   |                  |
| Variable 3      | 87              | ►              | ►               | ►            | ►                 | ►                | Auto Zero Offset – CH4    | 231             |                | ►               |              |                   |                  |

## User Notes