



3 1/2 DIGIT with 0.48" LCD

SP-35XMV

DC Ammeter for Battery Powered Systems


Compact DC Ammeter with Screw Terminal and Edge Connector Inputs.

General Features


The SP-35XMV is a compact 3 1/2 digit, 4 wire DC millivolt meter. By connecting across a 50 mV/100 mV current shunt the meter can be user calibrated to read DC current. An internal header selects "HI side" or "LO side" shunt configuration. A wide range power supply allows the meter to be connected to most common battery powered systems.

Typical Application Connections


HI Side Shunt Configuration. Negative Ground.

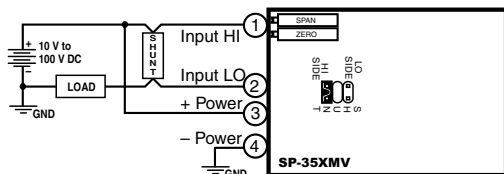


LO Side Shunt Configuration. Negative Ground.

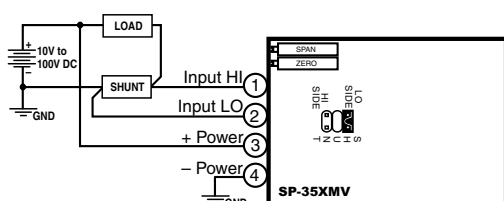

HI Side Shunt Configuration. Positive Ground.

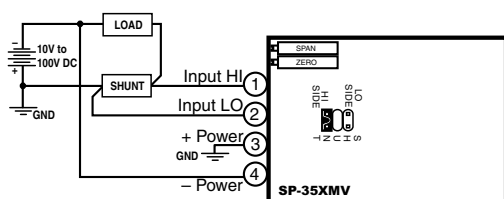

LO Side Shunt Configuration. Positive Ground.

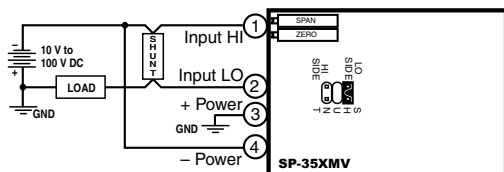

Specifications

Input Configuration:.....Differential. Header selectable for "HI side" or "LO side" shunt configurations.

Input Impedance:.....500KΩ

Full Scale Ranges:± 1999A or ±199.9mV

A/D Converter:12 Bit Dual Slope A/D Converter

Accuracy:±(0.05% of reading + 2 digits)

Temperature Coefficient: 100ppm/°C Typical

Warm Up Time:10 seconds to specified accuracy.

Conversion Rate:.....3 reading per second

Display:.....0.48" 3 1/2 Digit Liquid Crystal Display (LCD)

Decimal Selection:User Selectable

Positive Overrange :1 (MSD) is displayed with all other digits blank

Negative Overrange :1 (MSD) and - sign are displayed with all other digits blank

Power Supply (std):.....10 to 100V DC or 18 to 36V AC

Operating Temperature:...0°C to 60°C

Storage Temperature:0°C to 70°C

Relative Humidity:.....95% (non condensing)

Case Dimensions: Bezel 2.752" x 1.165" (69.9 x 29.6mm)
Depth behind Bezel 3.33"(84.5mm)
plus 0.662" (16.82mm) for connector


Weight:143 gms (5 oz) when packed

SP-Series, low cost meters signal power for polarity indication

SP-35X 3.5 digit LCD, Signal Powered by DC voltage


SP-35XMV 3.5 digit LCD DCMV Input, 10-100VDC or 18-36VAC Pwr

Functional Diagram

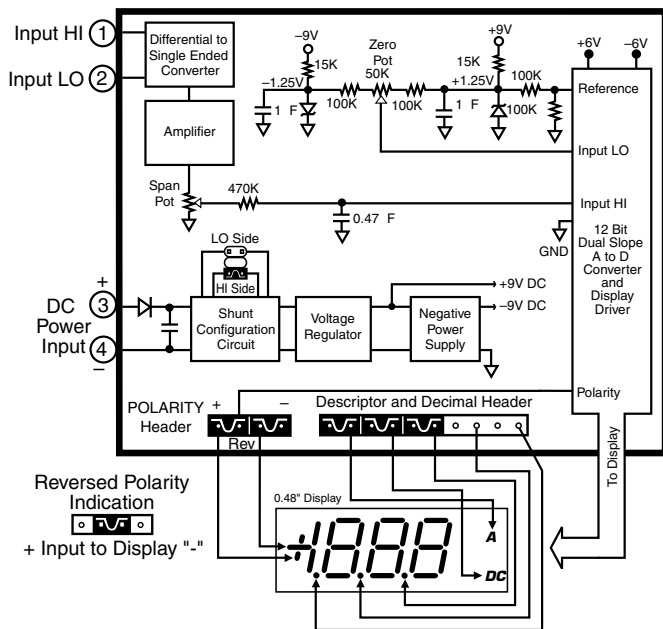

Connector Pinouts

The Texmate SP-35Xmv are connectable using the TB-KIT screw terminal blocks provided with the meter. For greatest convenience, order a Texmate Push-On screw terminal connector. Alternatively, a pcb edge connector can be used.(see connector options on page 3)

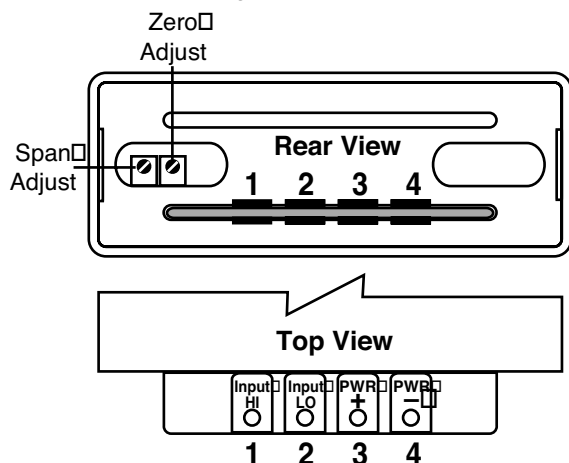

WARNING: AC and DC input signals and power supply voltages can be hazardous. Do Not connect live wires to screw terminal plugs, and do not insert, remove or handle screw terminal plugs with live wires connected.


Pin 1 - Input HI: For DC current measurement with an external shunt, the more positive end of the shunt is connected to this pin. 50mV/100mV shunts may be used. For maximum accuracy 4 wire Kelvin connected shunts are recommended. An internal header configures the meter for HI Side or LO Side Shunt circuits.

Pin 2 - Input LO: For DC current measurement with an external shunt, the less positive end of the shunt is connected to this pin. 50mV/100mV shunts may be used. For maximum accuracy 4 wire Kelvin connected shunts are recommended. An internal header configures the meter for HI Side or LO Side Shunt circuits.

Pin 3 - Power (+) Positive: The positive terminal of the battery is connected to this pin. The battery voltage can range from 10 V to 100 VDC. For positive ground systems this pin is directly connected to ground. If the power connections to the meter are reversed the display will turn off.

Pin 4 - Power (-) Negative: The negative terminal of the battery is connected to this pin. For negative ground systems this pin is directly connected to ground. If the power connections to the meter are reversed the display will turn off.

Component Layout

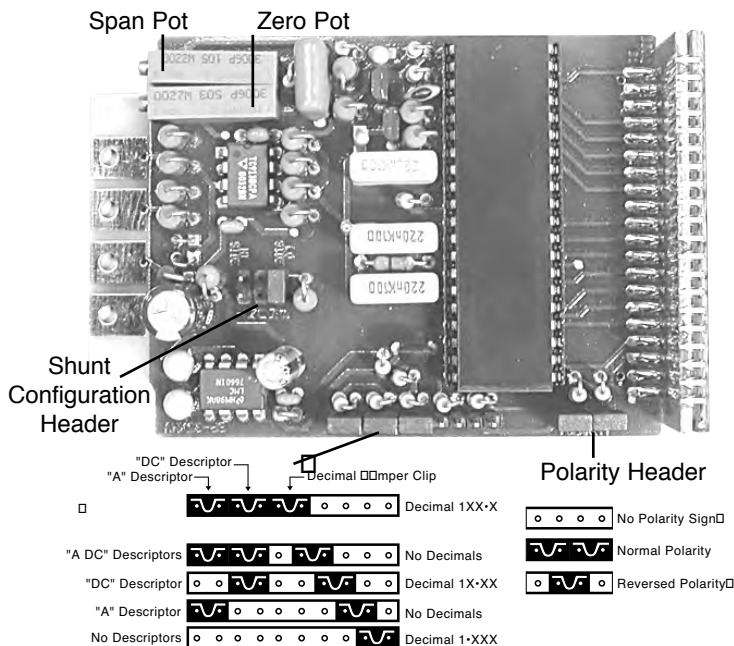

Signal Conditioning Components

SHUNT CONFIGURATION HEADER

Allows the meter to be configured for HI side or LO side shunts.

LO SIDE: If one end of the shunt is connected to the negative terminal of the battery, the configuration is known as a LO side shunt. This is true for both positive ground and negative ground circuits. For this configuration, insert the jumper clip in the LO side position.

HI SIDE: If one end of the shunt is connected to the positive terminal of the battery, the configuration is known as a HI side shunt. This is true for both positive ground and negative ground circuits. For this configuration, insert the jumper clip in the HI side position.

SPAN Potentiometer (Pot)

The 15 turn SPAN pot is always on the left side (as viewed from the back of the meter). Typical adjustment is 100% of the input signal range.

ZERO Potentiometer (Pot)

The ZERO pot is always to the right of the SPAN pot (as viewed from the back of the meter). Typically it enables the displayed reading to be offset ± 1000 counts.

Polarity Display Header

This header allows the Polarity indication to be displayed normally, displayed reversed or to be disabled completely.

Calibration Procedure

To Measure Amps with an External Shunt

- 1) Connect up the SP-35Xmv meter as per the appropriate connection diagram. Be sure to select the correct LO side or HI side position on the internal Shunt Configuration Header.
- 2) With zero current flowing through the Shunt, adjust the Zero Pot so that the display reads 000.

- 3) Pass a known current through the shunt and adjust the SPAN pot for the desired reading.
- 4) If decimals or descriptors are required, position jumper clips on the Decimal and Descriptors Header.
- 5) The SP-35X MV is now calibrated and ready to use.


To Measure Millivolts

- 1) Select the LO side position on the internal Shunt Configuration Header and the 1XX.X Decimal point.
- 2) With zero input, adjust the Zero Pot so the display reads 000.
- 3) With a known input in the $\pm 200\text{mV}$ range adjust the SPAN pot for the desired reading.
- 4) The SP-35X MV is now calibrated and ready to use as a $\pm 200\text{mV}$ DC Millivolt meter.

Measuring Volts and Amps in a DC Powered System

The SP-35X MV, when used with its companion meter SP-35X, is an elegant solution to the problem of measuring and displaying voltage and current in DC powered systems. Our customers have used this combination of meters in DC power supplies, DC generators and in battery back-up systems.

Features such as the low current consumption, wide supply range, large 0.8" display, built in V DC and A DC descriptors, simple connections and user friendly re-scaling to match shunts from 50 mV to 100 mV have made the SP-35X and SP-35X MV the choice of OEMs worldwide.

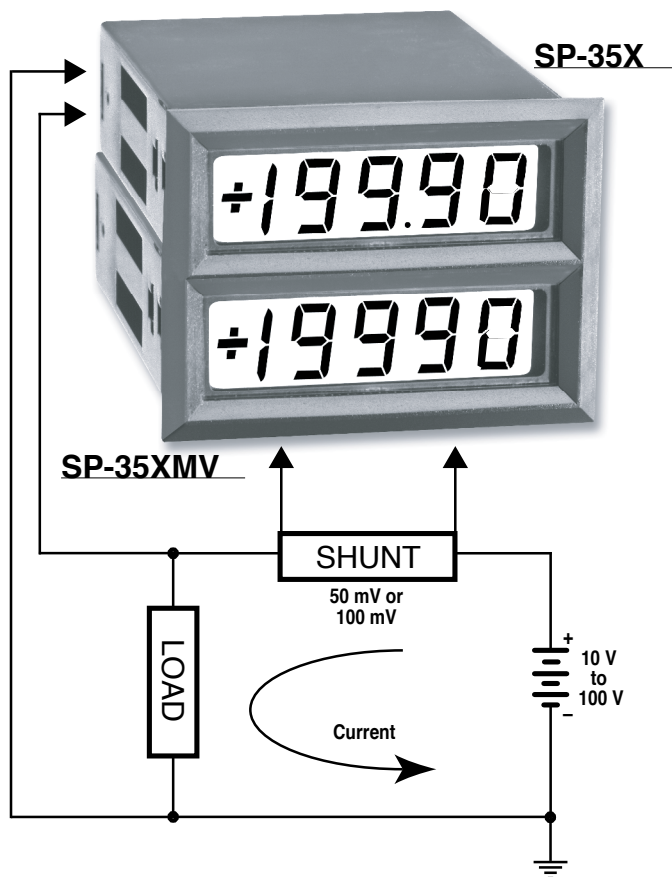

TB-Kit Screw Connectors



***Not Included**

Texmate's individual screw terminal blocks offer a convenient alternative to edge connectors for many applications, allowing complete installation, configuration and calibration without the need for soldering.

Slide each terminal block over the PCB until the hole aligns. Insert the retaining screw to secure.

Each kit includes: 3 plastic blocks with metal contacts, 4 screws with spade connectors, 1 metal contact and 3 quick disconnects.

Part Number : TB-KIT

Push-On Screw Terminals

They provide the greatest convenience and ease of use

Texmate's exclusive optional Push-On Connectors combine an edge card connector and a 10 position screw terminal block. Push-On Connectors are ordered preconfigured for each specific power supply voltage and each optional power supply available for the SP-Series.



Part Number: CN-PUSH/SP


Optional PCB Edge Connector

PCB Edge Connector

A standard 20-pin edge connector (two rows of 10 pins on 0.156" centers) may also be used to connect the SP-35X MV meter. Order part no. CN-L10.



Stack Option

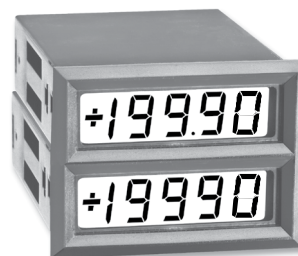


SP-35X

SP-35X MV

The SP-35X measures DC voltage up to 199.9V. A companion meter, the SP-35X MV measures DC current. The two meters combined in stacking cases are ideal for voltage and current measurements in battery powered systems. To simplify the installation when used together, specify the stackable case option to mount both meters in a single cutout.

P.N.: EM-CASCLRTOP & EM-CASCLRBTM

SP Case Dimensions and Panel Cutouts

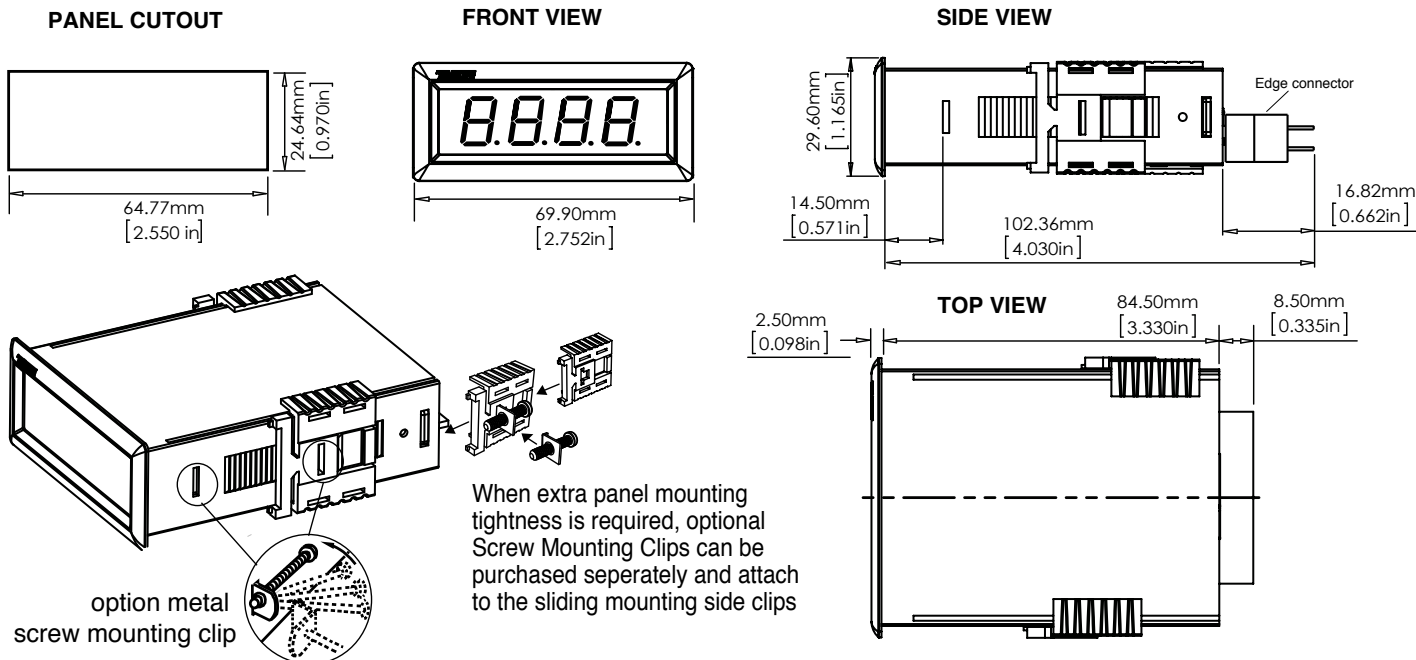

Ordering Information

Standard Options for this Model Number

Part Number	Description
► BASIC MODEL NUMBER	
SP-35XMV	3.5 digit LCD DCMV Input, 10-100VDC or 18-36VAC Pwr

Special Options and Accessories

Part Number	Description
► SPECIAL OPTIONS (Specify Inputs & Req. Reading)	
ZRS-CM	Non-Std Scale Changes, 3.5 Digit Meters.
► ACCESSORIES	
CN-L10	Edge Connector with Solder eyelet, 10 Pin Dual. . .
CN-PUSH/SP	Push-on Screw Terminal Block Conn.
TB-KIT.	Terminal Block Connector Kit (3).
EM-CASCLRTOP & EM-CASCLRBTMthe stackable case option to mount 2 meters in a single cutout

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the proDXct for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.



1934 Kellogg Ave., Carlsbad, CA 92008
Tel: 1-760-598-9899 • 1-800-TEXMATE
Fax: 1-760-598-9828 • Email: orders@texmate.com

SP-35XMV Technical Manual Copyright © 2020 Texmate Inc. All rights reserved. Published by: Texmate Inc. USA. Information in this Technical Manual is subject to change without notice due to correction or enhancement. The information described in this manual is proprietary to Texmate, Inc. and may not be copied, reproduced or transmitted, in whole or in part, in connection with the design, manufacture, or sale of apparatus, device or private label product without the express written consent of Texmate, Inc.